


# **COLOR INKJET PRINTER**

# JV33-130/160

# **OPERATION MANUAL**

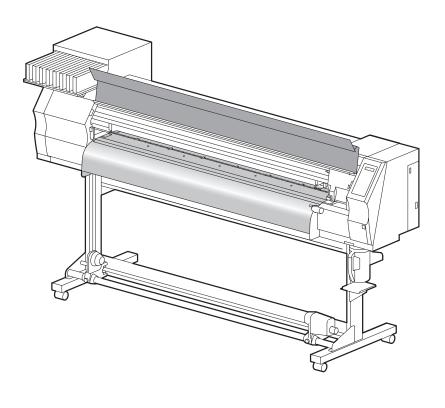

MIMAKI ENGINEERING CO., LTD.

URL: http://www.mimaki.co.jp/

D201694-16

# **TABLE OF CONTENTS**

CAUTION	vii
DISCLAIMER OF WARRANTY	
Requests	vii
FCC Statement (USA)	
Interference to televisions and radios	
Foreword	
On This Operation manual	
Features	
Safety Precautions	
Symbols	XI
CHAPTER 1 Before Use	
Moving this machine	1-2
Where to install this machine	1-2
Working environmental temperature	1-2
Moving this machine	1-3
Names of Parts and Functions	1-4
Front	1-4
Rear / Sides	1-5
Operation Panel	1-6
Heater	1-7
Media sensor	1-7
Carriage	1-8
Cutter blade and cutting line	
Capping station	1-9
Pinch rollers and Feed rollers	
Connecting cables	1-10
Connecting USB2.0 interface cable	
Connecting the power cable	
Inserting ink cartridges	
Caution in handling of ink cartridges	
Note on Silver and White ink of ES3 ink	
Media	1-15
Usable sizes of media	
Caution in handling of medias	
Menu mode	
CHAPTER 2 Basic Operations	• •
User type	
Set items registrable to User type	
Using the registered user type	2-2

VV	VORKTIOW	2-3
Tı	urning the power ON/OFF	2-4
	Turning the power ON	2-4
	Turning the power OFF	2-5
S	etting medias	2-6
	Useable medias	2-6
	Adjusting the head height	2-6
	Setting a roll media	2-8
	Take-up device (Except Type B)	2-13
	Setting leaf media	2-14
	Changing the printing origin	2-16
Р	reparing Heaters	2-18
	Changing temperature settings of Heater	2-18
	Confirming the Heater temperature	2-19
Te	est printing	2-20
	Perform test printing with the normal test pattern .	2-21
	Perform test printing with the test pattern for	
	checking white ink	2-22
	Check warning of white nozzle status	
	(Only when using SS21 white ink)	2-23
H	ead Cleaning	2-24
	About head cleaning	2-24
	Perform head cleaning depending on the test	
	printing result	2-25
	Perform spot color maintenance	2-25
D	rawing data	2-30
	Starting the print	2-30
	Stopping the print temporarily	2-31
	Erasing the received data (Data clear)	2-31
	Cutting a media	2-32
CHAPT	ER 3 Convenient use	
U	ser type	3-2
	Registering the drawing conditions together	
	(Type registration)	3-2
	Registering Type	
S	etting media compensation	
	Setting media compensation	

Changing the set value of Heater	3-8
Changing temperature settings of Heater	3-8
Adjusting suitable temperature adjustment	
(When solvent ink is used)	3-10
In case the heater temperature is too low	3-11
Setting print mode	3-12
Setting of the print quality	3-12
Setting scanning direction	3-14
Setting Logical-seek	3-15
Setting WhiteLay Print	3-16
Setting drying time	3-18
Setting margins	3-19
Setting Priority	3-20
Setting Auto cleaning	3-22
Setting cleaning while printing	
Setting media detection	
Other settings	
Initializing the settings	
Machine settings	
Setting the deodorize fan	
Setting Dryness feeding	
Setting Stamp	
Setting Test draw arrange	
Change the operation condition of the room	
temperature	3-38
Setting confirmation feeding	
Setting time	
Setting Unit	
Setting Machine name	
Setting Key buzzer	3-43
Extension of Ink Expiry Month	
Extension of Ink Expiry Month	
Switch Setting of Ink Supply Path	
Confirming machine information	
Displaying Information	
CHAPTER 4 Routine Maintenance	
Maintaining	4-2
Precautions in cleaning	
Notes on cleaning solution	4-2

Cleaning exterior surfaces	4-3
Cleaning the platen	4-3
Cleaning the media sensor	4-4
Cleaning the media press	4-4
Maintaining Capping station	4-5
Cleaning the wiper and ink caps	4-5
Replacing the wiper	4-7
Prior to Pump tube washing	4-8
Washing of Head nozzle	4-10
Cleaning the ink discharge passage	
(PUMP TUBE WASH)	4-12
When not using for a long term	
(CUSTODY WASH)	4-14
Cleaning heads and surroundings parts	. 4-16
When Nozzle clogged after cleaning	. 4-18
Filling up ink	4-18
DISCHARGE & WASH	4-19
Initial ink fill up	
If the Positions of Dots Shift	. 4-23
Preventing nozzle clogging while power-off	. 4-25
Setting refreshing interval in Sleep mode	4-25
Setting tube washing interval in Sleep mode	4-26
Setting cleaning interval in Sleep mode	4-27
Setting Routine operations	. 4-28
Setting Routine wiping operations in	
Standby mode	4-28
Setting Refreshing interval in Standby mode	4-30
Setting Pump tube washing interval in	
Standby mode	4-31
Setting Cleaning interval in Standby mode	4-32
Other maintenance functions	. 4-34
Changing the warning time of wiper replacement	4-34
Setting the media remaining display	
White Ink Maintenance Function	4-37
To use sublimation transfer ink with more stable	
quality	4-39
If Waste ink tank confirming message is	
displayed	
Changing the ink	
Replacing the cutter blade	. 4-47

# **CHAPTER 5** Troubleshooting Troubleshooting ...... 5-2 Power does not turn on ......5-2 The machine does not start printing ......5-2 Media get jammed / media is soiled ......5-3 [HEAT] or [CONSTANT] LED does not light up .......5-3 Image quality is poor .....5-4 Nozzle is clogged ......5-4 Ink cartridge warning appears ......5-5 Warning / Error Messages ...... 5-6 Warning messages .....5-6 Error messages ......5-9 **CHAPTER 6** Appendix Machine specifications ......6-2 Ink specifications ......6-4 Warning labels ......6-6

Function Flowchart .......6-8

### **DISCLAIMER OF WARRANTY**

THIS LIMITED WARRANTY OF MIMAKI SHALL BE THE SOLE AND EXCLUSIVE WARRANTY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS, AND MIMAKI NEITHER ASSUMES NOR AUTHORIZES DEALER TO ASSUME FOR IT ANY OTHER OBLIGATION OR LIABILITY OR MAKE ANY OTHER WARRANTY OR MAKE ANY OTHER WARRANTY IN CONNECTION WITH ANY PRODUCT WITHOUT MIMAKI'S PRIOR WRITTEN CONSENT.

IN NO EVENT SHALL MIMAKI BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR LOSS OF PROFITS OF DEALER OR CUSTOMERS OF ANY PRODUCT.

### Requests

- This Operation manual has been carefully prepared for your easy understanding.
   However, please do not hesitate to contact a distributor in your district or our office if you have any inquiry.
- Description contained in this Operation manual are subject to change without notice for improvement.

### FCC Statement (USA)

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the Operation manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

In the case where MIMAKI-recommended cable is not used for connection of this device, limits provided by FCC rules can be exceeded.

To prevent this, use of MIMAKI-recommended cable is essential for the connection of this printer.

### Interference to televisions and radios

The product described in this manual generates high frequency when operating.

The product can interfere with radios and televisions if set up or commissioned under improper conditions.

The product is not guaranteed against any damage to specific-purpose radio and televisions.

The product's interference with your radio or television will be checked by turning on/off the power switch of the product.

In the event that the product is the cause of interference, try to eliminate it by taking one of the following corrective measures or taking some of them in combination.

- Change the orientation of the antenna of the television set or radio to find a position without reception difficulty
- Separate the television set or radio from this product.
- Plug the power cord of this product into an outlet which is isolated from power circuits connected to the television set or radio.

# **Foreword**

Congratulations on your purchase of MIMAKI color ink jet printer "JV33-130/160".

The JV33-130/160 is a color ink-jet printer for high quality printing with solvent ink (4-color/6-color and 8-color) or aqueous ink (4-color and 6-color).

• 4-colors version : 2 each of Cyan, Magenta, Yellow and Black color ink cartridge are usable.

• 6-colors version : 1 each of Cyan, Magenta, Yellow, Black, Light cyan and Light magenta

color ink cartridge (2 each of Cyan and Magenta only) are usable.

• 6-colors + White version: 1 each of Cyan, Magenta, Yellow, Black, Light cyan, Light magenta and

White color ink cartridge (2 each of White only) are usable.

• 7-colors version : 1 each of Cyan, Magenta, Yellow, Black, Light cyan, Light magenta and

Light black color ink cartridge (2 each of Light black only) are usable.

• 8-colors version : 1 each of Cyan, Magenta, Yellow, Black, Light cyan, Light magenta, White

and Silver color ink cartridge are usable (available for the firmware V and

later)

JV33-130/160 has a high-end model (Type A) with a take-up device as a standard and a low-price model (Type B) without a take-up device.

# On This Operation manual

- This Operation manual is describing the operations and maintenance of "Color inkjet printer JV33-130/ 160" (called as this machine hereafter)
- · Read this Operation manual carefully and understand them thoroughly to use.
- It is also necessary to keep this Operation manual on hand.
- This Operation manual has been carefully prepared for your easy understanding, however, please do not hesitate to contact a distributor in your district or our office if you have any inquiry.
- Descriptions contained in this Operation manual are subject to change without any notice for improvement.
- In the case when this Operation manual should be illegible due to destruction or lost by fire or breakage, purchase another copy of the Operation manual from our office.

Reproduction of this manual is strictly prohibited.
All Rights Reserved.Copyright
© 2012 MIMAKI ENGINEERING Co., Ltd.

# **Features**

The features of the machine are described below.

Understanding them together with the operating instructions given in this manual will help you use the machine properly.

# High image quality and High-speed printing realized by the new generation printer head.

Newly developed printer head, 1 head consisting of 1440 nozzles (180 nozzles x 8 lines), is adopted. High image quality and High-speed printing is enabled by adopting the variable dots technology.

# Double cartridge automatic change function (In case of the 4-colors mode)

Long-run printing is enabled by the ink capacity of 880 cc /1 color by adopting the ink cartridge (2 cartridges /1 set) automatic change function.

# ES3 ink of the ecological design friendly to human and SS21 suitable for outdoor signs are prepared. (In case of solvent ink used)

ES3 ink requires no special deodorizing equipment and has almost no irritating odor peculiar to a solvent, so that this ink is made by the ecological design friendly to human and environment, and suitable for a designer and operator who cares about odor.

SS21 is suitable for outdoor signs and superior to water resistance and weather resistance. No special handling nor license is required since an organic rule is not applied to this ink.

# Sublimation dye ink and aqueous color pigment ink enabling High image quality and High-speed printing are usable.

- Sublimation dye ink is used when drawn images are transferred to other medias.
- aqueous color pigment ink (Pig) is superior to light resistance and suitable for outdoor prints such as large-sized sign displays. (Signboards)
- Aqueous pigment ink (Eco-PA1) is superior to water resistance, not reflected diffusely, better coloring and color reproducibility than dye ink.

#### Indication of the ink Remains

Since the amount of ink that remains can be checked even during operation of the machine, you can use the ink and media without waste.

#### Intelligent heater equipped

Heaters are arranged at 3 locations of the Pre-heater, Print heater and Post-heater and the temperature of each heater is independently adjustable.

Heating temperature is also adjustable to the temperature suitable for the media used since the intelligent function consisting of Standby mode and Auto shut-off is provided so that the temperature is controlled detecting the environmental temperature.

#### Easy maintenance

The automatic capping system for the heads eliminates the need of head cleaning before turning off the power. Ink discharge passage is automatically cleaned from the cap.

Nozzles can be unclogged by performing the cleaning function.

If the machine is not in use for a prolonged period of time, it automatically performs nozzle clogging preventive operation at fixed intervals. However, the main power must be left turned on.

The machine counts the time when not in use. When the power is turned on or when printing is started, the machine automatically performs head cleaning to prevent nozzle clogging.

#### Convenient direct keys

Use of the direct keys permits quick access to the respective various built-in functions.

#### Set of the drawing origin by LED pointer

For easy setting of the drawing origin changed, positioning can be done by a light point of the LED pointer equipped on the carriage.

#### Printing information can be checked

The print length can be displayed on the LCD panel during printing and the information of printing conditions can be checked by printing it.

#### **High-speed interface**

The "USB 2.0" interface allows for high-speed data reception from the computer.

### Take-up Device permits printing over a long length (Except Type B)

Even a long sheet of media can be used, since the take-up device interlocked with the machine winds up the printed part of the sheet during printing.

### A media support bar newly provided

The machine is provided with a media support bar at the back. It is useful when a heavy roll of media, such as Tarpaulin, is set on the machine.

### Adjustable to the height of Head (2 levels)

The height of Head is adjustable in 2mm/3mm by the adjusting lever.

### Lifting of the media at its both ends is prevented

The use of the media press prevents the wide sheet of media from lifting at its both ends and coming in contact with the head unit.

# **Safety Precautions**

# Symbols

Symbols are used in this Operation Manual for safe operation and for prevention of damage to the machine. The indicated sign is different depending on the content of caution.

Symbols and their meanings are given below. Please follow these instructions as you read this manual.

# **Examples of symbols**

	Meaning
Warning	Failure to observe the instructions given with this symbol can result in death or serious injuries to personnel. Be sure to read it carefully and use it properly.
Caution	Failure to observe the instructions given with this symbol can result in injuries to personnel or damage to property.
(Important!)	Important notes in use of this machine are given with this symbol. Understand the notes thoroughly to operate the machine properly.
	Useful information is given with this symbol. Refer to the information to operate the machine properly.
(AF)	Indicates the reference page for related contents.
<u>A</u>	The symbol " \( \sqrt{\sq}}}}}}}}}}} \signtarightity}}}}}}}}}}}}}}}}}}}}}}}}}}}}}}}}}}}
	The symbol " \( \) " indicates that the action shown is prohibited. A sign representing a prohibited action (the sign shown at left prohibits disassembly) is shown in or around the circle.
8-15-	The symbol "  " indicates that the action shown must be taken without fail or the instructions must be observed without fail. A sign representing a particular instruction (the sign shown at left instructs to unplug the cable from the wall outlet) is shown in the circle.

#### Warning for Use

# $\hat{\mathbb{N}}$

#### **WARNING**



- Do not use the machine in a poorly ventilated room or a closed room.
- Be sure to use the optional Drying ventilation unit when the machine is used in a poorly ventilated room or a closed room.
- · Use the attached power cable.
- Take care not to damage, break or work upon the power cable. If a heavy material is placed on the power cable, or if it is heated or pulled, the power cable can break, thus resulting in fire or electric shocks.
- Avoid locating the machine in a damp environment. Do not splash water onto the machine. Use in such an environment can give rise to fire, electric shocks or breakdown of the machine.
- Use of the machine under an abnormal condition where it produces smoke or strange smell can
  result in fire or electric shocks. If such an abnormality is found, be sure to turn off the power switch
  immediately and unplug the cable from the wall outlet. Check first that the machine no longer
  produces smoke, and then contact your distributor or a sales office of MIMAKI for repair.
- Never repair your machine by yourself since it is very dangerous for you to do so.
- Never disassemble or remodel the main unit of the machine or the ink cartridge. Disassembly or remodeling can result in an electric shock or breakdown of the machine.
- · Take care that no dust or dirt sticks to platen heaters. Dust and dirt sticking heaters can cause fire.



The ink used for this machine contains organic solvent. Since the ink is flammable, never use flame in or around the place where this machine is used.



Hazardous Moving Parts
 Keep Fingers and Other Body Parts Away

#### **Precautions in Use**

# **^**

#### **CAUTION**

#### **Power supply**

### CA

#### Handling of ink



- Leave the breaker turned ON.
- Do not turn off the main power switch on the right side of this machine.

#### Heater



- Do not spill liquid on the platen as this may cause failure of the heater or firing.
- Do not touch platen heaters with bare hand while it is hot; otherwise, you can get burned.



 When the machine is to be moved, wait until the heater temperature drops adequately.

 
As a criterion, wait at least 30 minutes after you turn off the power to the heater.

Moving the machine must be limited to on the same floor where there is no steps. When the machine is to be moved to any place other than on the same step-free floor, contact your distributor or a sales office of MIMAKI.



- If you get ink in your eyes, immediately wash your eyes with a lot of clean water for at least 15 minutes. In doing so, also wash eyes to rinse ink away completely. Then, consult a doctor as soon as possible.
- If anyone drinks ink by mistake, keep him or her quiet and see a doctor immediately.
   Do not allow him or her to swallow the vomit. After that, contact the Poison Control Center.
- If you inhale a lot of vapor and feel bad, immediately move to a location of fresh air and then keep yourself warm and quiet. Then, consult a doctor as soon as possible.









• When cleaning the ink-station or the heads, make sure to wear the attached gloves. Further, when the solvent ink is used, it is necessary to wear the attached goggles.



#### **CAUTIONS and NOTES**

# <u>^</u>

### **Warning**

#### Handling of ink cartridges

- Use the JV33 genuine ink. Remember that the user shall be filled for a repair to correct any damage resulting from the use of ink other than the exclusive type.
- The machine does not operate with any ink other than the JV33 genuine ink.
- Do not use the JV33 genuine ink with other printers, as doing so may cause damage to such machines.
- Never refill the ink cartridge with ink. Refilled ink cartridge can cause a trouble. Remember that MIMAKI assumes no responsibility for any damage caused by the use of the ink cartridge replenished with ink.
- If the ink cartridge is moved from a cold place to a warm place, leave it in the room temperature for three hours or more before using it.
- Open the ink cartridge just before installing it in the machine. If it is opened and left for an extended period of time, normal printing performance of the machine may not be ensured.
- Make sure to store ink cartridges in a cool and dark place.
- Store ink cartridges and waste ink tank in a place that is out of the reach of children.
- Be sure to thoroughly consume the ink in the ink cartridge, once it is opened, within three months. If an extended period of time has passed away after opening the cartridge tank, printing quality would be poor.
- Neither pound the ink cartridge nor shake it violently, as doing so can cause leakage of ink.
- Do not touch or stain the contacts of the ink cartridge, as doing so may cause damage to the print circuit board.
- Waste ink is equivalent to waste oil of industrial waste. Request an industrial waste disposal company for disposal of waste ink.

#### Front cover and lever

 Never open the front cover or raise the lever during printing. Opening the cover or raising the lever will abort printing.

#### Handling of media

- Use media recommended by MIMAKI to ensure reliable, high-quality printing.
- Set the heater temperature to meet the characteristics of the media.
- Set the temperature of the Pre-heater, Print heater and Post-heater according to the type and characteristics of the media used. Automatic temperature setting can be made on the operation panel by setting the profile on the dedicated RIP. For setting on the RIP, refer to the instruction manual for your RIP.
- Pay attention to the expansion and contraction of the media.
- Do not use media immediately after unpacking. The media can be affected by the room temperature and humidity, and thus it may expand and contract. The media have to be left in the atmosphere in which they are to be used for 30 minutes or more after unpacked.
- Do not use curled media.
- The use of curled media can not only cause a media jam but also affect print quality.
- Straighten the sheet of media, if significantly curled, before using it for printing. If a regular-sized coated sheet of media is rolled and stored, the coated side has to face outside.

#### Protection of media from dust

- Store media in a bag. Wiping off dust accumulated on media will adversely affect the media due to static electricity.
- When leaving the workshop after the working hours, do not leave any media on the roll hanger. If any media is left on the roll hanger, it can get dusty.

# 

#### Notes on maintenance

- It is strongly recommended to use the machine in a room that is not dusty. Set the Refresh level 2 or 3 when the machine is to be used in an unfavorable environment. (P.3-29 "Setting of Refreshing")
- Keep the front cover closed even when the machine is not printing. If not, dust can accumulate on the nozzles in the heads.
- Dust in the heads can also cause drops of ink to fall suddenly down on the media during printing. In such a case, be sure to clean up the heads. (P.3-22 "Setting Auto cleaning")
- When cleaning the ink-station or the heads, make sure to wear the attached gloves. Further, when the solvent ink is used, it is necessary to wear the attached goggles.
- · Perform wiping (removal of dust and paper powder) of the capping station and wiper frequently.

#### Periodic replacement parts

• Some parts of this machine must be replaced with a new one periodically by service personnel. Be sure to make a contract with your distributor or dealer for After sale service to ensure a long life of your machine.

#### **Cautions on Installation**

<u> CAUTION</u>			
A place exposed to direct sunlight	On an inclined surface	A place where temperature or humidity varies significantly	
		<ul> <li>Use the machine under the following environmental conditions:</li> <li>Operating environment: 20 to 35 °C (68 to 95 °F) 35 to 65 % (Rh)</li> </ul>	
A place that vibrates	A place exposed to direct air flow from an air conditioner or the like.	Around a place where fire is used	

# CHAPTER 1 Before Use



This chapter describes the items required to understand before use, such as name of each part of the machine or the installation procedures.

Moving this machine	1-2
Where to install this machine	. 1-2
Working environmental temperature	. 1-2
Moving this machine	. 1-3
Names of Parts and Functions	1-4
Front	. 1-4
Rear / Sides	. 1-5
Operation Panel	. 1-6
Heater	. 1-7
Media sensor	. 1-7
Carriage	. 1-8
Cutter blade and cutting line	. 1-8
Capping station	. 1-9
Pinch rollers and Feed rollers	. 1-9

Connecting cables	1-10
Connecting USB2.0 interface	
cable	. 1-10
Connecting the power cable	. 1-11
Inserting ink cartridges	1-12
Caution in handling of ink	
cartridges	. 1-13
Note on Silver and White ink of	
ES3 ink	1-14
Media	1-15
Usable sizes of media	1-15
Caution in handling of medias	
Menu mode	


# **Moving this machine**

# Where to install this machine

Secure a suitable installation space before assembling this machine.

The place of installation must have enough space for not only this machine itself but also for printing operation.

Model	Width	Depth	Height	Gross weight
JV33-130	2289mm	739mm	1424mm	145kg
JV33-160	2538mm	739mm	1424mm	160kg

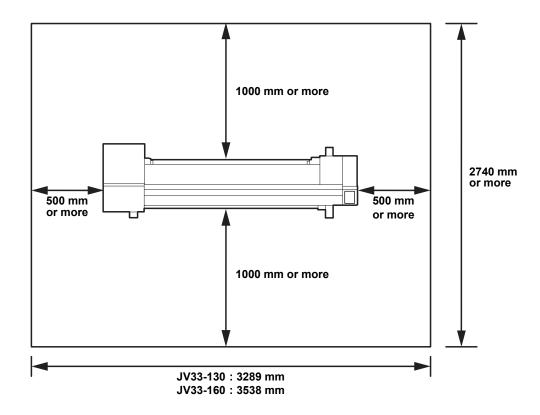

# Working environmental temperature

Use this machine in an environment of 20 to 35°C to ensure reliable printing. Depending on the ambient temperature, the heater temperature may not rise to the set value.

# Moving this machine

Move this machine according to the following steps when this machine is required to move on the step-free same floor.



• When this machine is to be moved to any place other than on the same step-free floor, contact your distributor or a sales office of MIMAKI.

If you move it by yourself, failure or damage may occur.


Be sure to request your distributor or a sales office of MIMAKI to move this machine.



- When moving this machine, take care not to give a significant impact on it.
- Be sure to lock the caster after moving of this machine.




#### Release the lock of caster.

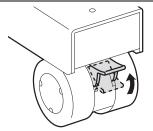




# Move this machine as shown in the figure.

- For safety, be sure to work it with more than 2 persons.
- Do not push the cover to move this machine since the cover may be broken.

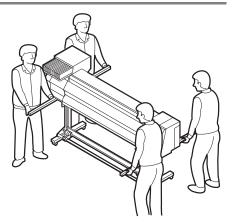

3

#### Lock the caster.

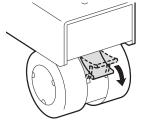

# **Names of Parts and Functions**

### **Front**

#### Maintenance cover

Open the cover in maintenance. Even when the power switch is off, keep all covers closed.

#### Ink cartridges

Each cartridge contains an ink of a particular color.

#### Cartridge protection cover

This prevents an injury or breakage of the machine due to a protrusion of the 440 cc cartridge.

(It is located under the ink cartridge.)

#### Front cover

Open the cover in setting of medias, taking of measures against jamming of medias or in maintenance inside the station.

Even when the power switch is off, keep this cover and the other covers closed.

#### Clamp lever (front)

Moves the pinch rollers up and down to hold or release the media.

#### Carriage

Moves the print head unit from side to side.

#### **Operation panel**

This panel has the operation keys required for operating the machine and the LCDs for displaying setting items, etc.

#### Power switch\*1


Turns on/off the power to the machine.

#### Waste ink tank

Waste ink gathers in this tank.

#### Stand

Supports the main body of the machine. It is provided with casters that are used to move this machine.

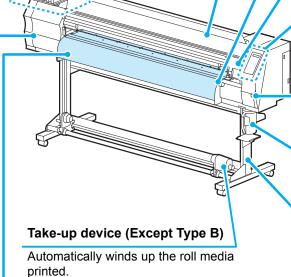

#### Platen


The printed media is sent out, sliding on the platen. Three heaters are installed inside the platen.

#### Print heater/ Post-heater


Fixes and dries the ink on the currently produced print. (Located inside the platen)

<sup>\*1:</sup> The power switch under the operation panel lights in green when the power is turned on, and blinks when the power switch is turned off. The ink clogging prevention function is periodically operated even when the power switch is OFF if the main power switch keeps being ON. (Sleep function) @ P.1-5

# Rear / Sides

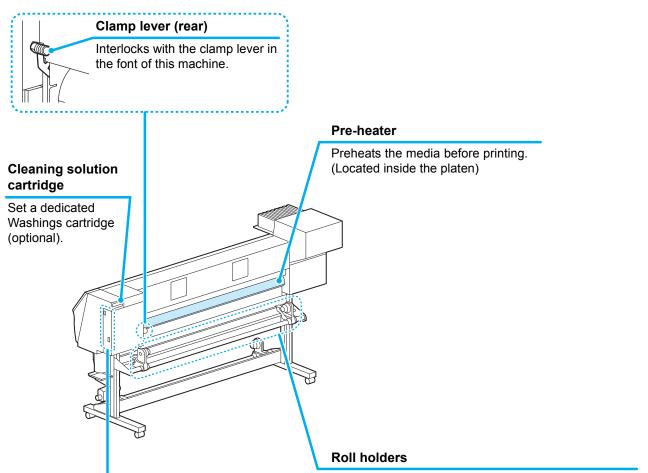


Hold a media by inserting it into the right and left ends of the core of the roll media. Roll holders are available for the 2 inches and 3 inches core of the roll media.

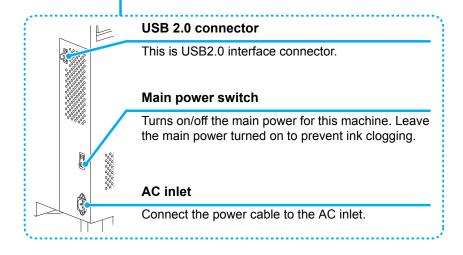

# **Operation Panel**

Use the operation panel to make settings for printing or operate this machine.

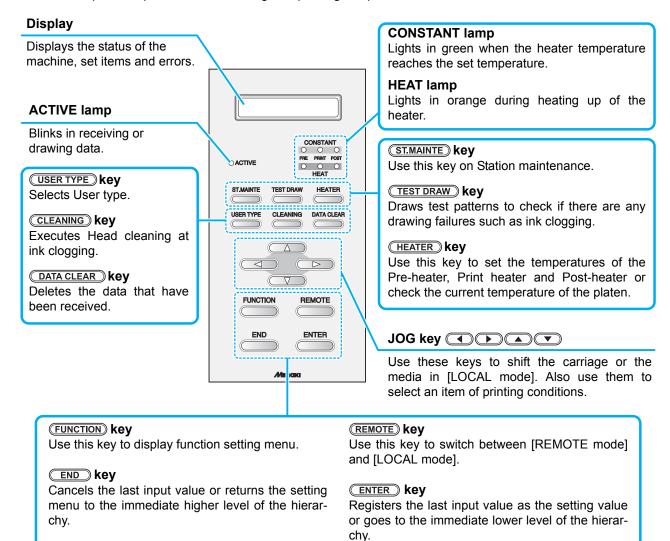

### **Functions of the JOG keys**

Each of the JOG keys varies in function according to the condition of the machine under which the key is used. The functions of the JOG keys are as follows:

	Before the detec- tion of media	After the detection of media	When selecting a function	When selecting a setting value
<b>(1)</b>	Detects the width of the media. Shifts the carriage to the left.			
	Detects the width and length of the media.	Shifts the carriage to the right.		
		Moves the media inward.	Returns to the previously indicated function again.	Selects the previously indicated value again.
		Moves the media frontward.	Goes to the next function.	Selects the next value.

# Heater


Pre-heater / Print heater / Post-heater are equipped on the platen.


The Pre-heater is used for pre-heating of the media prior to printing to prevent rapid temperature changing. The Print-heater improves the image quality in printing.

The Post-heater dries ink after printing.



- While the heater is on, the platen is very hot. When the front cover is to be opened or media is to be replaced, lower the heater temperatures and wait until the platen temperature drops; otherwise, you can get burned.
- When the media is to be replaced with a thin one, lower the heater temperatures and wait until
  the platen temperature drops adequately. Setting a thin sheet of media while the platen is hot
  may cause the media to stick to the platen or cause wrinkling or curling of the media.

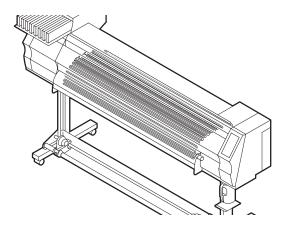

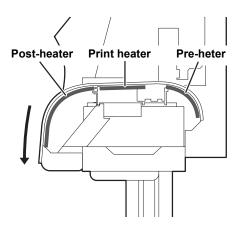


### Media sensor

The media sensor detects the presence of the media and the media length.

This machine has a media sensor on the platen (in the rear).




 Set the media so that the media sensor located in the rear of the platen is covered with the media without fail. The media can not be detected unless it is placed over the sensor.

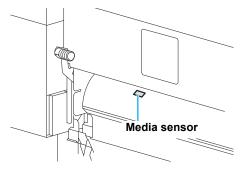

# Carriage


The carriage is provided with the ink heads for printing, the cutter unit for cutting off the sheet of media, etc.

A lever is also provided to adjust the height of Head in 2 stages according to the thickness of media. ( P.2-6)

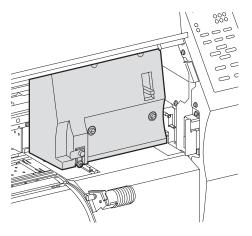

# **Cutter blade and cutting line**

The carriage is provided with a cutter unit for cutting off the media that has been printed on. The cutter cuts off the sheet of media along the cutting line on the platen.

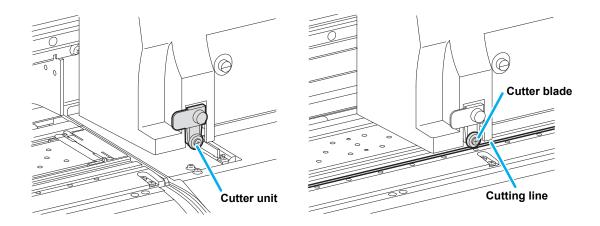

# **Capping station**




• Be sure to wear the attached goggles in cleaning within the capping station to protect your eyes against ink.

The capping station consists of the ink caps, the wiper for cleaning the heads, etc.

The ink caps prevent the nozzles in the ink heads from drying up. The wiper cleans the nozzles in the heads. The wiper is consumable.

If the wiper is deformed or the media is stained, replace the wiper with a new one.

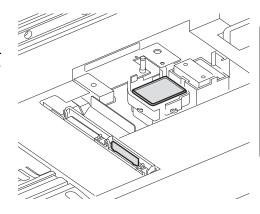


# Pinch rollers and Feed rollers



Keep the pinch rollers lifted up when this machine is not in use.
 If the pinch rollers are left lowered for an extended period of time, they can be deformed and fail to securely retain the media.

This machine retains the media with the pinch rollers and feed rollers. During printing operation, the feed rollers feed the media forward.

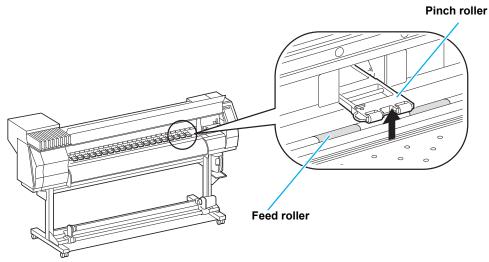


# **Connecting cables**

# Connecting USB2.0 interface cable

Connect the PC and this machine with the USB2.0 interface cable.



- · Your RIP must be compatible with USB 2.0.
- Contact a RIP maker near your location or our office when the USB2.0 interface is not attached to the PC.

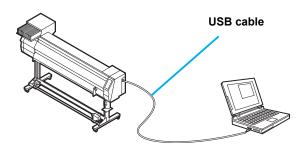

#### Notes on USB 2.0 Interface




• Your RIP must be compatible with USB 2.0.

#### ● When two or more JV33 machines are connected to one personal computer

When two or more JV33 machines are connected to one personal computer, the personal computer may not recognize all the JV33 machines normally.

Reconnect the unrecognized JV33 machine to another USB port, if available, and check to see if it is recognized. If the JV33 machine is not recognized by the newly connected USB port, use USB 2.0 repeater cables available on the market.

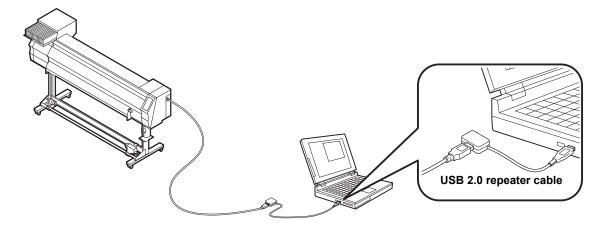

#### Notes on peripheral devices in USB high speed mode


When a peripheral device (USB memory or USB HDD) to be operated in USB high speed mode is connected to the same personal computer that a JV33 machine is connected to, the USB device may not be recognized.

When a JV33 printer is connected to the personal computer to an externally installed USB hard disk drive, the data output speed to the JV33 machine may drop. That can cause the head unit to stop temporarily at the right or left end during printing.

#### Removing USB memory

If a USB memory module is inserted in the personal computer to which a JV33 machine is connected, click "Stop" in the "Safely Remove Hardware" window by following the instructions given there first and then remove the module.

Leaving a USB memory module inserted can cause [ERROR 10 COMMAND ERROR]. Copy the data onto the hard disk before outputting it for printing.

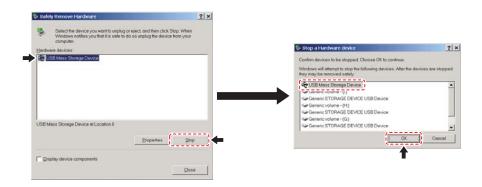

# Connecting the power cable


1

Insert the power cable into an inlet of the machine.

2


#### Secure a cable band.

 Secure the cable with the cable band attached to this machine.

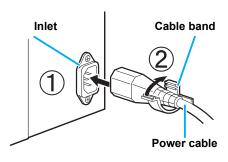

3

Insert the power plug into a plug socket.

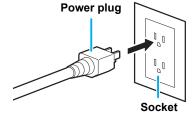



• Do not use other power cables than the attached power cable.




- Be sure to connect the power cable to the power plug socket near to this machine, and make sure that the power cable is easily removed.
- Connect the power cable to the grounded plug socket. Otherwise, it may result in fire or an electric shock.

# Inserting ink cartridges

 Insert an ink cartridges.




Shake the ink cartridge as shown on the right.



2

#### Insert the ink cartridge.

- Insert the ink cartridge lengthwise directing the surface having IC chips to the left side.
- Colors are displayed on the display as follows.
   Black: K, Cyan: C, Magenta: M, Yellow: Y,
   Light cyan: c, Light magenta: m, White: W,
   Silver: S, Light black: k

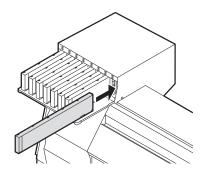

### Changing an ink cartridge

Perform as follows when [INK END] or [INK NEAR END] is displayed on the display.

#### ■ When [INK END] is displayed

- (1) Pull out an ink cartridge to be replaced.
- (2) Insert a new ink cartridge, paying attention to the direction of IC chip.

#### ■ When [INK NEAR END] is displayed

There is a little of ink left. It is recommended to replace the ink cartridge soon since ink may become empty in printing while printing is continuously enabled.




- During [INK NEAR END] is displayed, the setting of In-printing cleaning is disabled. ( P.3-24)
- If solvent ink is selected when the machine is installed, it is not possible to change from the solvent ink to dye ink or aqueous ink.

### For Ink cartridge lamps

The condition of the ink cartridges set in the machine is confirmable with lamps located over the ink cartridges.



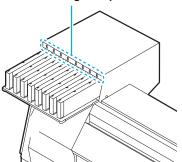

Condition of Lamp		Description	
	OFF	No error	
Upper row Red lamp	Blinking	One of the following errors occurs.  Ink near-end Ink end Expiration of a term of ink validity (one month)	
	ON	One of the following errors occurs.  • No ink left  • No ink cartridge inserted  • Other ink errors (  P.5-5)	
	OFF	No error	
Lower row Green lamp ON		When used with 4-color ink set, the machine supplies ink from the ink cartridge with lower ink. In this case, the cartridge being used lights in green.	

# Caution in handling of ink cartridges



- An organic solvent is used in solvent ink. When ink sticks on skins, wash it with soapy water immediately then rinse it off with water fully. If you get ink in your eyes, immediately wash your eyes with a lot of clean running water for at least 15 minutes. In doing so, also wash the eyess to rinse ink away completely. Then, consult a doctor as soon as possible.
- Use genuine ink cartridges for this machine. This machine functions by recognizing the genuine ink cartridges. In case of troubles caused by modified ink cartridges or the like, it shall be out of the warranty even within the warranty period.
- If the ink cartridge is moved from a cold place to a warm place, leave it in the room temperature for three hours or more before using it.
- Be sure to thoroughly consume the ink in the ink cartridge, once it is opened, within three months. If an extended period of time has passed away after opening the cartridge tank, printing quality would be poor.
- Make sure to store ink cartridges in a cool and dark place.
- Store ink cartridges and waste ink tank in a place that is out of the reach of children.
- Request an industrial waste processor for processing of empty ink cartridges.



- Do not shake ink cartridges violently. This may result in ink leakage from the ink cartridges.
- Never refill the ink cartridges with ink. This may result in troubles.
   MIMAKI will not bear any responsibility for any damage caused by the use of the ink cartridges refilled with ink.
- Do not touch or stain the contacts of the ink cartridge. This may cause damages on printed circuit boards.



· Do not disassemble the ink cartridges.

# Note on Silver and White ink of ES3 ink

Be sure to read below before using silver and white ink of ES3 ink.



- Silver and white ink of ES3 ink are usable for the firmware V and later.
- Pigments of silver ink and white ink will settle down with time.

Pigments of silver and white ink of ES3 ink have nature of settling down when they are left for a long time.

If you print with ink whose pigments settle down as it is, it may cause color heterogeneity etc.

If you have not use ink for a long time, be sure to perform "spot color maintenance" before printing.

When you print with silver ink or white ink that has set on the machine and has not been used for a long time, first perform "spot color maintenance" to prevent color heterogeneity due to settling down of pigments. ( P.2-25 "Perform spot color maintenance")

• If you have left ink for a long time, the warning message is displayed when you turn on the power supply.

If you have left ink for a long time, the warning message that informs you that it is required to perform maintenance is displayed when you turn on the power supply.

By referring to P.2-28 "About warning message display of performing spot color maintenance", perform maintenance.



 Do not turn off the main power supply of this machine after you filled silver ink or white ink of ES3 ink. (If you do not use the printer, turn off the power supply with the switch on the front surface of the machine.) Useable media sizes and notes for handling are described.

### Usable sizes of media

	Model	JV33-130	JV33-160
Ty	pe of Recommended media	Tarpaulin/ FF(Flexible Face)/ Weatherproof PVC	
M	aximum width	1371mm	1620mm
M	inimum width	210mm	210mm
M	aximum printing width	1361mm	1610mm
	Thickness	1.0mm or less	
	Roll outside diameter	φ 180mm or less	
media	Roll weight	25kg or less	
	Roll inside diameter	3 or 2 inches	
Roll	Side printed	Side facing outward	
	Roll end treatment	The roll end is gently fixed to the core with weak-adhesive tape or weak glue for easy removal.	

# Caution in handling of medias

Pay attention to the followings for handling of medias.



- Use media recommended by MIMAKI to ensure reliable, high-quality printing. Set the heater temperature to meet the characteristics of the media.
- Set the temperature of the Pre-heater, Print heater and Post-heater according to the type and characteristics of the media used.

Automatic temperature setting can be made on the operation panel by setting the profile on the dedicated RIP. For setting on the RIP, refer to the instruction manual for your RIP.

- Pay attention to the expansion and contraction of the media.
  - Do not use media immediately after unpacking. The media can be affected by the room temperature and humidity, and thus it may expand and contract.
  - The media have to be left in the atmosphere in which they are to be used for 30 minutes or more after unpacked.
- · Do not use curled media.
  - This may result in paper jamming.

If a regular-sized coated sheet of media is rolled and stored, the coated side has to face outside.

# Menu mode

This machine has 4 modes. Each menu mode is described below.

#### **NOT-READY** mode

This is the mode in which the media has not been detected yet.


The keys other than the REMOTE key and the / TEST DRAW key are effective.

#### LOCAL mode

Local mode is the mode for the drawing preparation state.

All the keys are effective.

The machine can receive data from the computer. However, it does not perform printing.

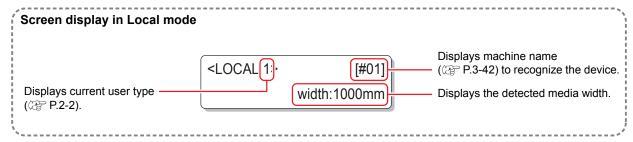

This mode permits the following operations:

- Pressing the JOG keys to set up a drawing origin and drawing area.
- Pressing the <u>TEST DRAW</u> key to perform [TEST DRAW].
- Pressing the <u>CLEANING</u> key to execute the cleaning of the heads.
- Pressing the FUNCTION key to set functions.
- Pressing the HEATER key to set the temperature of the heaters.
- Pressing the **ENTER** key to check the remaining amount of ink, the description of the cartridge error, the model name, the firmware version, and so on.
- Pressing the REMOTE key to switch between [REMOTE mode] and [LOCAL mode].
- Pressing the DATA CLEAR key to erase the printing data the machine has received.
- Pressing the **USERTYPE** key to change the user type.
- Pressing the <u>ST.MAINTE</u> key to activate directly [ST.MAINTENANCE], one of the [MAINTENANCE] functions.

#### **FUNCTION** mode

To set FUNCTION mode, press the FUNCTION key when this machine is in LOCAL mode. In this mode, printing conditions can be set.

#### **REMOTE** mode

This machine prints the data it receives.

During drawing, the drawing is interrupted by pressing the (REMOTE) key.

# CHAPTER 2 Basic Operations



The procedures from the ink and media preparation to drawing and the setting procedures are described.

2-2	Test printing	. 2-2(
2-2	Perform test printing with the	
2-2	normal test pattern	2-21
2-3	Perform test printing with the test	
2-4	pattern for checking white ink	2-22
	Check warning of white nozzle stat	us
	(Only when using SS21 white ink)	2-23
	Head Cleaning	2-24
	About head cleaning	2-24
	Perform head cleaning depending	
	on the test printing result	2-25
	Perform spot color maintenance	2-25
	Drawing data	2-30
	Starting the print	2-30
	Stopping the print temporarily	2-31
	Erasing the received data	
. 2-18	(Data clear)	2-31
. 2-19	Cutting a media	2-32
	2-2 2-2 2-4 2-4 2-5 2-6 2-6 2-6 2-13 2-14 2-16 <b>2-18</b>	Perform test printing with the normal test pattern Perform test printing with the test pattern for checking white ink Check warning of white nozzle state (Only when using SS21 white ink)  Perform head cleaning About head cleaning depending on the test printing result Perform spot color maintenance Perform starting the print Stopping the print temporarily Erasing the received data Continue and the state of

# **User type**

Drawing of higher quality prints is available by making (setting of User type) the print set matching to the characteristics of media when this machine is used for drawing. On this machine, 4 types of User type 1 to 4 are settable.

## Set items registrable to User type

 
For the registering procedures to User type (1 to 4), refer to P.3-2.

Set items	Reference page	Set items	Reference page
Setting Media compensation	P.3-5	Setting of Refreshing	
Changing the set value of Heater	P.3-8	Setting of Adsorption	P.3-28
Setting Print mode	P.3-12	Setting of Feeding speed level	1
Setting of the number of ink layers	P.3-28	Setting of Priority	P.3-20
Setting of Drying time	P.3-18	Setting of Auto cleaning	P.3-22
Setting of Auto cut	P.3-28	Setting of In-printing cleaning	P.3-24
Setting of Pre-feeding		Setting of Media detection	P.3-26
Setting of Margins	P.3-19	Setting of Feed origin	P.3-28
Setting of Color patterns	P.3-28		


# Using the registered user type



In the local mode, press the **USER TYPE** key.



 
Select User type (1 to 4) by using the keys.





Press the **ENTER** key.

 USER TYPE key.



### For selecting the user type without the USER TYPE key.

The user type is selectable from the local mode by pressing the FUNCTION key, not by pressing the (USER TYPE) key.

In the local mode, press the (FUNCTION) key.

Press the **ENTER** key after [SET UP] is confirmed.

Select User type (1 to 4) by pressing the keys.

Press the **ENTER** key.

Turning the power ON/C	Referring to "Turning the power ON/ OFF" (@ P.2-4).
2 Setting medias	Referring to "Setting medias" (@ P.2-6).
3 Preparing Heaters	Referring to "Preparing Heaters" (@ P.2-18).
4 Test printing	Referring to "Test printing" ( P.2-20).
5 Drawing data	Referring to "Drawing data" ( P.2-30).

# **Turning the power ON/OFF**

# **Turning the power ON**

The machine is provided with the following two power switches.

**Main power switch**: At the side of this machine. Keep it "ON" always.

Power switch

: Normally, use this switch to turn the power ON/OFF. The power switch lights in green when the power is ON and blinks in green when it is OFF.


The power switch under the operation panel lights in green when the power is turned on, and blinks when the power switch is turned off.

The nozzle clogging prevention function is periodically operated even when the power switch is OFF if the main power switch keeps being ON. (The power switch blinks in green.)

1

#### Turn the main power switch ON.

• Set the main power switch located on the side of this machine to the "I" side.

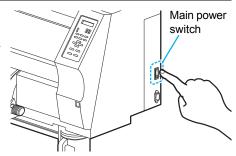

 The firmware version is displayed when the power is turned on.

• This machine performs initial operation.

J V 3 3 - 1 6 0 V \* . \* \* P l e a s e Wait

2

This machine enters the LOCAL mode.

<LOCAL.1> [#01]

3

Turn the power of the connected PC ON.



- Turn the power ON after the front cover and maintenance cover are closed.
- The head nozzle may result in nozzle clogging if the main power switch is kept being "OFF" for a long time.

### **Turning the power OFF**

Turn the power OFF by pressing the power switch located on the side of after using. Check the followings when the power is turned off.

- If it is in receiving of data from the PC, or there is any data un-output.
- If the head has returned to the capping station.
- If any error occurs. ( P.5-9 "Error messages")




#### Turn the power of the connected PC OFF.



## Turn the power OFF by pressing the power switch.

- The power switch blinks in green.
- Do not turn the main power switch located on the side of this machine.
- To use this machine again, light the green lamp by pressing the power switch.

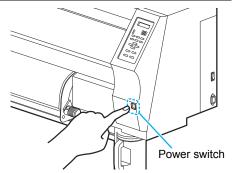

#### Cautions in turning the power OFF

Do not turn the main power switch OFF.

If the main power switch is ON, the power periodically turns on and the nozzle clogging prevention function (Flushing function) is operated.

If the main power switch is OFF, the sleep function such as the flushing function does not work and this may cause nozzle clogging.

- Keep the front cover and the maintenance cover closed.
  If the cover is opened, the sleep function such as the flushing function does not work.
- Turn the power OFF after confirming of the head position.

If the power is turned off in such condition that the head does not return to the capping station, this may cause nozzle clogging due to drying of the head.

At this case, turn the power ON again, and then turn the power OFF after confirming of that the head has returned to the capping station.

● Do not turn the power OFF in drawing.

The head may not return to the capping station.

■ Turn the power switch OFF then turn the main power switch OFF.

When turning the main power switch off for moving the machine or for solving the error or the like, press the power switch on the front of the machine, check the display is turned off on the operation panel, and then turn the main power switch off.

## **Setting medias**

### **Useable medias**

This machine can be used with roll media and leaf sheet media. For useable medias, refer to P.1-15 "Usable sizes of media".

### Adjusting the head height

Adjust the head height according to the thickness of the media used.




- Adjust the head height prior to setting of the media. If the head height is adjusted after the
  media is set, this may cause media jamming, deterioration of the drawing quality or head damage.
- The range of the initial head height is adjustable by 2 levels according to the purpose of use.
- The range of the printing height of JV33 is from the general printing (L range: 2 mm/3 mm) to the transfer printing (H range: 4 mm/5 mm) (Set to L range 2 mm at shipping)
- If the drawing quality is set to "Bi-D" (P.3-14), perform "DROP POSITION" of the maintenance function after the head height is adjusted. (P.4-23)

### Adjusting the head height



#### Move the carriage to the platen.


- When the device is turned on:
   Execute [ST.MAINTENANCE] [CARRIAGE OUT]
   (P.4-5 Step 1,2)
- When the device is turned off:
   Open the front cover, then move the carriage with hand.

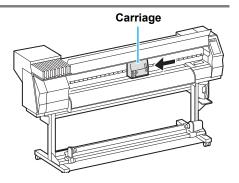

2

#### Loosen two screws located at the front.


 Loosen the screws, rotating by one turn with a screwdriver.

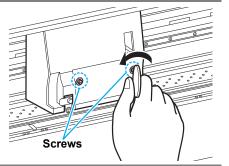

3

## Adjust the height-adjusting lever according to the media.


- Adjust the position of the lever, referring to "For the adjusting lever and the range".
- Set the height-adjusting lever to the highest stage or the lowest stage. Setting it to the intermediate height, a printing fault can result.

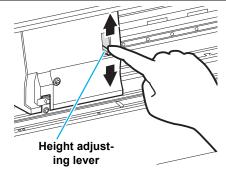




# Keeping the height adjusting lever held at the aforementioned position, tighten the two screws.

- Be sure to fasten the screws, pressing the heightadjusting lever, otherwise the head can not be secured at the correct position.
- · Fasten the screws securely.

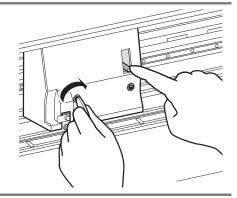



## Return the carriage to the station position.

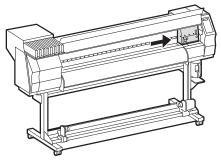

### For the adjusting lever and the range

Range	Height adjusting lever	Head height	Switch	ing area
L range (General printing)	Thin : light-weight	2mm (The set position at shipping)		Contact to our sales
	Thick : heavy-weight	3mm	Switch by user	office for switching L <-> H by field per-
H range	Thin : light-weight	4mm		son.
(Transfer type printing)	Thick : heavy-weight	5mm		



- Set the lever to "Thick" when a thicker media such as a tarpaulin or FF is used.
- Set the lever to the lower stage (Thick) if dust is likely to gather in the head or the head is likely to rub on the media to leave ink on it.




- If solvent ink is selected, do not use with H range. It adversely affects the image quality.
- When using the media of 1mm thickness or below and SS21 ink, be sure to set the head height to "Thin".
  - If using with the head height "Thick", as the head gap (between the media and the height of head nozzle surface) can be too large and ink drops may be splashed, the image quality cannot be assured.
- When the ink is changed from dye ink to other aqueous ink, or on the contrary, after the machine is installed, the adjustment is required for the head initial height (H/L range). Consult with our sales office about it.

### Setting a roll media

Set a roll media to the roll media hanger located on the back of this machine.



- Take care not to drop the media on a foot or so when the media is set. It may cause an injury due to the media.
- The roll stopper arm works with the clamp lever. Do not push the clamp lever down while roll stopper is caught between the roll stopper arm and this machine. The roll stopper arm might be broken and roll stopper function \*1 might be disabled.

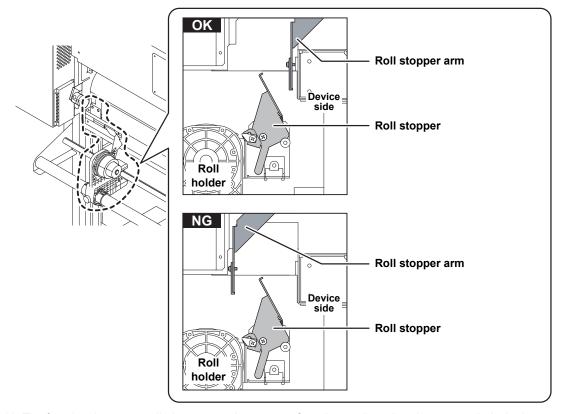


\*1. The function that once pulled out a certain amount of media, media pullout is temporarily locked.




Move the roll holder located in the back of the device to the direction of the middle of the device.

• Loosen the roll holder fixing screw and then move it.

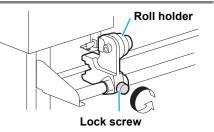

2

 
Check the clamp lever is lowered.






#### Move the roll holder to the roll setting position.

 Set the base position of roll holder within this range.



• There are two types of the internal diameter of the roll media paper tube: 2 inch and 3 inch.

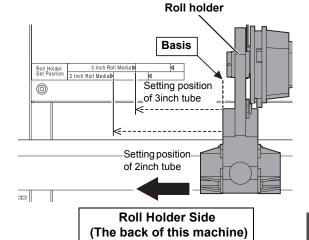

• Check the roll stopper is not caught between the roll stopper arm and this machine.




#### Tighten the roll holder fixing screw.

· Check the Step 2 to 3 again.




## Set the left end of the core of the roll media on the let roll holder.

• Push the roll media onto the roll holder until the roll core is all the way seated.

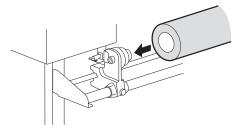


6

Loosen the screw of the right side roll holder then insert the holder into the core of the roll media.

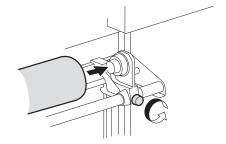




Raise the clamp lever in the front of this machine.

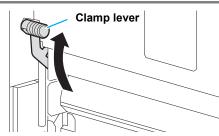

8

#### Insert the roll media in this machine.

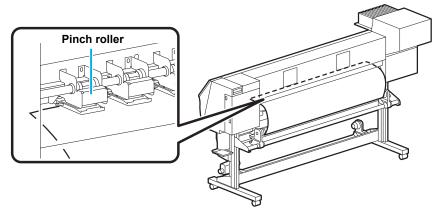


- The roll media can be smoothly inserted by slanting the media.
- (1) Pull the media out of the roll to the head of the platen.
- (2) Insert the media between the platen and the pinch roller.
  - Pull the media out of the roll so that the media can be grasped from the front of the machine.
- (3) Push down the clamp lever from the back of this machine.
  - · The media is held.



#### Pull out the roll media out.


- (1) Open the front cover.
- (2) Raise the clamp lever from the back of this machine.
- (3) Pull out the roll media gently and then stop pulling when locked lightly.

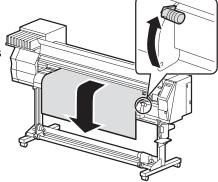

10

## Make the roll media even then lower the clamp lever.


 Pulling several positions of the media lightly, Lower the clamp lever after confirming that the amount of the roll media pulled out is almost even.

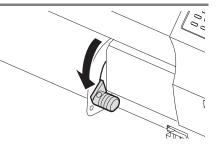



## Hold the media with the media press gently.


- Set the media so that no media sticks out from the right end pinch roller to the right side.
- When using a thick media, remove the media press from the media before printing.

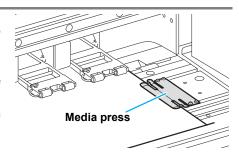




- Do not set media at the position which the media press touches the side plate on the right.
   As media may tilt and be lifted, it could break the head.
- If a media is misaligned to the right more than fixed position, a warning is displayed. Set the media again.



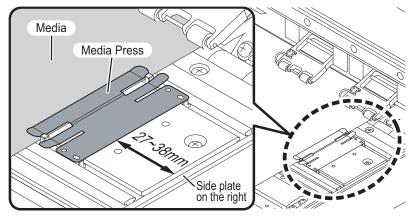

Media press position:27 to 38 mm from the side plate on the right. (For the variation of the inside diameter of media roll, it ranges as above.)

 
 Do not locate the suction hole on the platen between the media and the media press. (It may stain the media.)



## **12**

### Prepare the take-up device.

- When the Type B is used, the take-up device is not equipped. Go to the Step 13.
- (1) Set an empty core of the roll media on the takeup device.
- (2) Close the front cover.

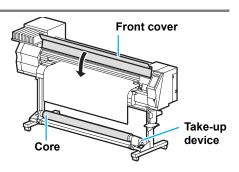



### Press the key to select "ROLL".




- Detects the media width.
- When [MEDIA RESIDUAL] of the maintenance function is "ON" ( P.4-35), the screen for entering media remaining amount is displayed after detecting the media width.

14

## Secure the media on the take-up device.

(@PP.2-13)

- When the Type B is used, this operation is not needed.
- (1) Feed the media up to the core of the roll media of the take-up device by pressing the key.
- (2) Fix the middle of the media with adhesive tape.
- (3) In the same manner, fix the left side and right side of the media.
  - Make sure that the there is no slack or wrinkle on the media in such condition that the roll media is pulled to right and left evenly, and then stick the tape.

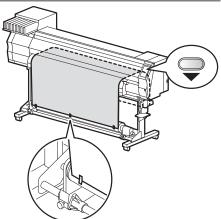

#### **Entering the media remaining amount**

When [MEDIA RESIDUAL] of the maintenance function is "ON" ( P.4-35), the screen for entering media remaining amount is displayed after detecting the media width.

1

Display the screen for entering media remaining amount.

Input of MediaLength MEDIA LENGTH = x x x . xm

2

Press and key to enter the media remaining amount.



Input of MediaLength MEDIA LENGTH = 50.0m

3

Press the ENTER key.

### Take-up device (Except Type B)

The take-up direction of media is selectable by using the switch of the take-up device.

#### Lever in top position (REVERSE):


The take-up device winds the media with the printed side facing in.

#### Lever in middle position (OFF):

The take-up device does not wind the media.

#### Lever in bottom position (FORWARD):

The take-up device winds the media with the printed side facing out.

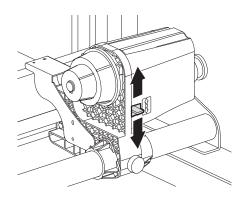

### Setting the torque limiter


The take-up device is provided with a torque limiter.

The take-up torque can be adjusted with the torque limiter.

(The torque limiter is set at the maximum value when shipped from the factory.)

If the tension is too strong to use a thin sheet of media, lower the take-up torque with the torque limiter.

- Clockwise turn : Increases torque (a heavy and thicker media such as tarpaulin or the like)
- Counterclockwise turn: Decreases torque (For light media)

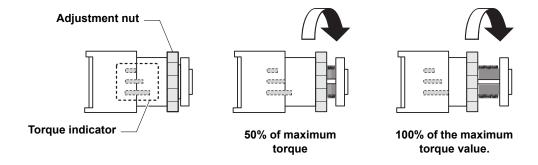



- When the torque limiter is adjusted too weak;
   The media can not be taken up firmly.
- When the torque limiter is adjusted too strong;
  The slack may occur depending on the media and cause influence on the image quality.

### Setting leaf media


Unlike roll media, leaf media does not need to be retained with the roll holders.



#### Open the front cover.




Raise the clamp lever.

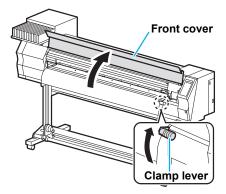

3

## Insert the leaf media between the platen and the pinch rollers.


• Set the media so that no media sticks out from the right end pinch roller to the right side.

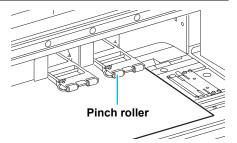

4

## Hold the media with the media press gently.

- Set the media so that no media sticks out from the right end pinch roller to the right side.
- When using a thick media, remove the media press from the media before printing.

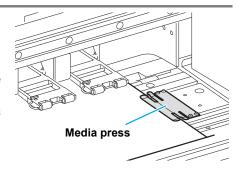


5

### Push down the clamp lever.

· Set the media straight.



Close the front cover.

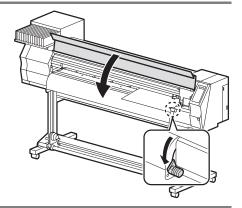



Press the **ENTER** key.





Press the key to select "LEAF".





#### The media detection is started.

DETECTING MEDIA NOW PLEASE WAIT


- (1) The media width is detected.
- (2) The media is fed then the rear end of media is detected.
- (3) It returns to the local mode when the detection is completed.

#### Notes when using media press




- Do not set media at the position which the media press touches the side plate on the right. As media may tilt and be lifted, it could break the head.
- If a media is misaligned to the right more than fixed position, a warning is displayed. Set the media again.

\*\*\*\*\* ERROR 50 \*\*\*\*\*
MEDIA SET POSITION R

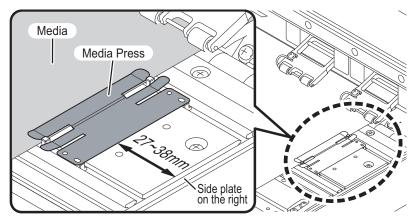

Media press position:27 to 38 mm from the side plate on the right. (For the variation of the inside diameter of media roll, it ranges as above.)

  Do not locate the suction hole on the platen between the media and the media press. (It may stain the media.)



### Changing the printing origin

The position of the printing origin can be changed.

Moving the LED pointer to the changing position and deciding the position.



In the local mode, press the AVA keys.

 


• It enters into the origin setting mode.



Set a light point of the LED pointer to the changing position by pressing the keys.

• Select the carriage and media, moving the point with the keys.



3

After determining the origin, press the ENTER key.



ORIGIN SETUP
\*\* ORIGIN \*\*


• The printing origin is changed.



The origin position set above misaligns with the feeding direction of a media by a few centimeters. Turn [FEED ORIGIN] "ON" in setup mode to fit the origin to the correct light position of LED pointer. (
 P.3-4)

### Typical setting position of printing origin

The printing origin in the depth direction (X') is positioned at about 40 mm rearward from the cutting line. The printing origin in the scanning direction (Y') is positioned at 15 mm from the right end of the media. The value in the scanning direction (Y') can be changed using [MARGIN] in FUNCTION mode. This can be changed by using the Jog key.

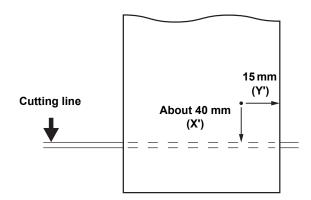

## **Preparing Heaters**

 
### **Changing temperature settings of Heater**

The set temperature of Heater can be changed and stored by [HEATER] of the setup mode. ( P.3-8) The adjusting procedures of the temperature set in the setup mode are described below. Set the Heater temperature according to the media used.

- The Heater temperature has been set to "OFF" when purchased.
- Proper temperature adjustment is enabled since the temperature is adjustable even in drawing.
- It may take several minutes to several ten minutes to reach the set temperature depending on the environmental temperature.



2




The temperature set in [HEATER] of the type registration.

3

## Set the temperature of each Heater by pressing the keys.

 Heater selecting : Select with the keys Temperature setting : Set with the keys



Heating of Heater starts. (The [HEAT] lamp lights in orange.)



#### Heater heating ends.

• The [HEAT] lamp goes out then the [CONSTANT] lamp lights in green when the Heater temperature reaches the set temperature.



#### Press the **ENTER** key to end.

· It returns to the local mode.



- The Heater temperature is registrable beforehand according to the media to be used.
   P.3-2 "Registering the drawing conditions together (Type registration)"
- The temperature set by the operations above does not reflect the Heater set temperature of
  the type registration. The set continues until the power is turned off or the temperature is newly
  set according to the following conditions.
- (1) Change the type of the setup mode.
- (2) Change the Heater temperature of the setup mode.
- (3) Designate the Heater temperature from the PC.
- The Heater temperature is controllable at the RIP side if the RIP in use has a function controllable. (For the setting procedures, refer to the instruction manual of the RIP in use.)



• Use this machine under 20 to 35°C. The temperature may not reach the set value due to the environmental temperature condition.

### Reference for the temperature set (When solvent ink is used)

Type of ink	ES3 ink		SS21 ink	
Type of media	Glossy chloroethylene	Tarpaulin	FF	All medias
Set of the Pre-heater	40°C	40°C	40°C	35°C
Set of the Print-heater	40°C	40°C	40°C	35°C
Set of the Post-heater	50°C	50°C	50°C	50°C



- Adjust it to suitable temperature depending on the media condition.
- When aqueous-color ink is used, no reference for the temperature set is required.

### **Confirming the Heater temperature**



Press the HEATER key on the operation panel.



PRE PRT POST 40°C 50°C 35°C

• The current Heater temperature is displayed.

2

Press the END key at the end of confirmation.

• It returns to the local mode.

## **Test printing**

 
Print a test pattern to check that there are no discharging defects such as nozzle clogging (slight touching of ink or nozzle missing).

#### About test patterns

This machine provides you two test patterns.


#### Normal test pattern (when using ink other than white ink)

When you use ink that you can check by printing a test pattern on a white media, print this test pattern.



#### Test pattern for checking white ink

 When you use a white media and wish to check discharging status of white ink, print this test pattern.



#### Note on test printing



- When using a leaf medium, set one that is larger than an A4-size medium in the longitudinal direction.
- When using a roll medium, rewind the medium by hand before printing so that it is not loose. When the roll medium has not been rewound tightly, it may cause image quality to deteriorate.

### Perform test printing with the normal test pattern

Check before the test printing• If a media has been set.P.2-6• If the origin position has been set.• If the head gap has been adjusted.P.2-6



## In the local mode, press the TEST DRAW key.



- Press and key to change the test pattern deployment direction.
   The deployment direction changed here returns to the direction set in P.3-36 after test printing.
- When performing test printing after changing the deployment direction from "SCAN DIR." to "FEED DIR.", the line will be fed to the position of the first test printing.
- For the detail of the deployment direction of the test printing, see P.3-36.



#### Press the **ENTER** key.



 
- This machine starts printing the test pattern.
- After performing test printing, this machine returns to LOCAL mode.



3

#### Check the printed test pattern.

- Finish the operations when it is in normal.
- Execute the head cleaning when it is in abnormal. ( P.2-25)



### Perform test printing with the test pattern for checking white ink

• If a media has been set. P.2-6 Check before the If the origin position has been set. test printing If the head gap has been adjusted. (ÆP P.2-6

In the local mode, press the TEST DRAW key.



Press the key to select the "(WHITE CHK.)".



#### Press the **ENTER** key.



- · Print a test pattern in the following orders.
- · In the second line of the screen, remaining time from the start of printing is displayed.
- (1) Print the pattern daubed with black.
- (2) Dry the pattern for thirty seconds.
- (3) Return the media automatically and print the test pattern.



#### Check the printed test pattern.

- Finish the operations when it is in normal.
- Execute the head cleaning when it is in abnormal. ( P.2-25)



### Check warning of white nozzle status (Only when using SS21 white ink)

As SS21 white ink is easier to cause nozzle clogging compared to other ink, you must keep the nozzle status normal even when you do not discharge it.

In order to keep the nozzle status normal, this machine displays the warning message in the right once a fortnight\*1.

Check the "W"nozlle condition. <ENT>

- The warning message will be displayed after the media detection is performed.
- When the warning message is displayed, perform the following:



When the warning message is displayed, press the **ENTER** key.



• The machine enters into the waiting for test printing status.



Press the key to select the type of the test printing.



Press the **ENTER** key.

• Print the test pattern.



- After the warning message is displayed, when you perform "Perform test printing with the test pattern for checking white ink"( the previous page) or "White Ink Maintenance Function"( P.4-37), the warning will be released.
- When the warning message is displayed, you can cancel it by pressing the END key. However, after the next media detection is performed, the warning message will be displayed again.
- The warning message is displayed only when performing media detection in the printing mode.

<sup>\*1.</sup> A fortnight after clearance of the warning message or maintenance of the white ink.

## **Head Cleaning**

### About head cleaning

There are two types of head cleaning.

• Depending on the test printing result, perform to solve nozzle clogging.

Check the printed test pattern result and perform cleaning depending on the status. Select one from the three types below:

NORMAL : When any line is missing

**SOFT**: When only head wiping is needed (when lines are bent)

**HARD**: When poor image quality cannot be improved even by NORMAL or SOFT cleaning

Perform when using silver ink or white ink of ES3 ink.
 (available for the firmware Ver.4.60 and later)

Pigments of silver ink and white ink of ES3 ink have nature of settling down when they are left for a long time without being used, and it may cause color heterogeneity.

By performing "spot" of head cleaning to discharge ink settling down, you can improve color heterogeneity (spot color maintenance function).

**spot** : By discharging special ink whose pigment remains settling down in the head, the damper or the tube of this machine, improve color heterogeneity.



 Spot color maintenance is selectable only when silver ink or white ink of ES3 ink has been filled for the firmware Ver. and later.

### Perform head cleaning depending on the test printing result

There are three types of head cleaning. Use one by checking the test pattern.



In the local mode, press the **CLEANING** key.





## Select the cleaning type by pressing the keys.



NORMAL: Select this if any line is missing.

**SOFT**: When only head wiping is desirable. (in case of bent lines)

**HARD** : Select this if inferior printing cannot be improved even by [NORMAL] or [SOFT]

cleaning.

3

#### Press the **ENTER** key.



CLEANING ACTIVE 00:00

- The rest of the cleaning time is indicated at the lower of the display.
- On completion of cleaning, this machine returns to LOCAL mode.



#### Perform test printing again, and check the result.

Repeat the cleaning and the test printing until the drawing result becomes in normal.



#### When the image quality is not improved after the head cleaning.

- •Clean the wiper and ink cap. ( P.4-5)
- •Wash the head nozzle. ( P.4-10)
- •Solve the failure of the image quality, referring to "When Nozzle clogged after cleaning". ( P.4-18)

### Perform spot color maintenance

Perform this to solve color heterogeneity due to settling down of pigment when using silver ink or white ink of ES3 ink.

Spot color maintenance is selectable only when silver ink or white ink of ES3 ink has been filled for the firmware Ver.4.60 and later.



In the local mode, press the **CLEANING** key.



2

Press the keys to select [spot].



3

#### Press the **ENTER** key.

SPOT COLOR SELECT COLOR :SILVER



# By pressing the keys, select the color on which you wish to perform maintenance.



Silver : Perform maintenance only for silver ink.
White : Perform maintenance only for white ink.

**Silver & white**: Perform maintenance for silver ink and white ink at the same time.

5

 
#### Press the **ENTER** key.





## Remove the ink cartridge of the selected color.

- The lamp located above the cartridge lights to inform you of the ink cartridge to be removed.
- · After the ink cartridge is removed, ink discharging starts.



 When discharging is completed, the screen on the right is displayed.



## Slowly shake the removed ink cartridge more than twenty times right and left.

 To prevent ink from leaking when you shake the cartridge, wear gloves and firmly cover the A part of the upper surface of the cartridge and the B part of the bottom surface of the cartridge with paper towels. Then, shake it more than twenty times right and left so that ink flows inside the cartridge.



- If you shake it too strong, the pack inside may be damaged and it may cause ink leakage. Therefore, perform this carefully.
- If the remaining amount of ink is less, ink in the cartridge cannot be beaten enough. Tilt the cartridge until it becomes vertical.



A part (the place to stick a needle)




B part (the slot on the bottom)





Cover with paper towel firmly and shake ink slowly

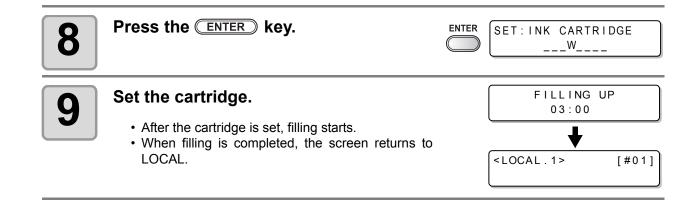

#### About warning message display of performing spot color maintenance

When silver ink of ES3 ink is used and when ink has been left for two days and more without being used, to prevent color heterogeneity due to settling down of pigment, the message on the right is displayed on the screen.

PERFORM SPOT MAINTENANCE? <ENT> COLOR :SILVER

Silver ink change their colors if they have been left for about two days. If the warning message is displayed, perform special color mainte-

nance by following the procedures below:



#### If the warning message is displayed, press the **ENTER** key.

· If you do not wish to perform spot color maintenance, press the END key to cancel the operation.



#### Press the **ENTER** key.





#### Remove the ink cartridge of the displayed color on the screen.

- The lamp located above the cartridge lights to inform you of the ink cartridge to be removed.
- After the ink cartridge is removed, ink discharging starts.



· When discharging is completed, the screen on the right is displayed.




#### Slowly shake the removed ink cartridge more than twenty times right and left.

· To prevent ink from leaking when you shake the cartridge, wear gloves and firmly cover the A part of the upper surface of the cartridge and the B part of the bottom surface of the cartridge with paper towels. Then, shake it more than twenty times right and left so that ink flows inside the cartridge.



- If you shake it too strong, the pack inside may be damaged and it may cause ink leakage. Therefore, perform this carefully.
- If the remaining amount of ink is less, ink in the cartridge cannot be beaten enough. Tilt the cartridge until it becomes vertical.

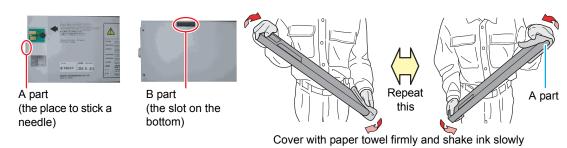




#### Press the **ENTER** key.



#### Set the cartridge.

 - After the cartridge is set, filling starts.
- When filling is completed, the screen returns to LOCAL.



## **Drawing data**


### Starting the print



• When a roll media is used, rewind the roll media by hands prior to printing so that it is set in the tightened condition. The loosened may result in failures of the image quality.



Set the media. ( P.2-6)

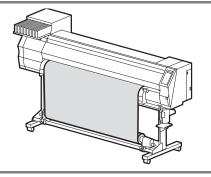

2

#### Check the heater temperatures.

• Confirm that the CONSTANT lamp lights in [PRE], [PRINT], [POST] below the display.



3

## Press the **REMOTE** key in the local mode.



 It enters the remote mode and enables to receive the data from the PC.




#### Send the drawing data from the PC.

- The ACTIVE lamp blinks and the drawing condition is displayed.
- For the method of data transmission, refer to the instruction manual for the output software.

5

#### This machine starts printing.

 The printing speed may vary due to the set media width or the position of print origin even when the same data is printed, depending on resolution.

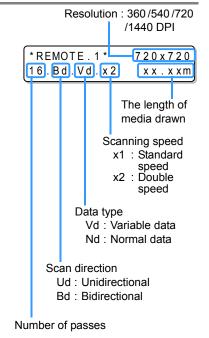

### Stopping the print temporarily

Perform the following operations when stopping the print halfway.



#### Press the **REMOTE** key in printing.

- REMOTE < LOCAL . 1 > [#01] width: 1272mm
- The printing operation is interrupted.
- Interrupt data sending at the PC side during the data is sent from the PC.
- Printing restarts from the interrupted data by repressing the REMOTE key.

### **Erasing the received data (Data clear)**

Erase only the received data to stop the printing.

 


 
Press the **DATA CLEAR** key in the local mode.





#### Press the **ENTER** key.







### **Cutting a media**

For a roll media, two ways are available to cut the media after printing is completed, as follows.



- Pay attention so that printed surface does not touch to a floor or other printed surfaces when the media is cut.
- When the take-up device is used, roll up the cut media by operating a switch of the take-up device. (Except Type B)

#### **Auto cut**


A media is automatically cut after printing is completed.



- For the Auto cut function, it is required to set. (The Auto cut function is set to "OFF" when purchased.)
- When the Auto cut function is set to "OFF", cut a media according to the operations of "Manual cut".



Cut the media automatically after printing is completed.

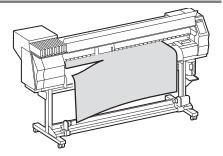

#### Manual cut

Cut the media at an optional position by using the keys on the operation panel.



## Press the keys in the local mode.



ORIGIN SETUP

- It enters the printing origin setting mode.
- Feed the media to the position to cut by pressing the key.

2

Press the FUNCTION key.



MEDIA CUT <ENT>

3

Press the **ENTER** key.



MEDIA CUTTING PLEASE WAIT

- This machine cuts the media.
- It returns to the local mode after cutting is completed.

# CHAPTER 3 Convenient use



This section describes the operation procedures for using the machine more conveniently and each setting procedure.

User type	. 3-2	Machine settings	3-27
Registering the drawing conditions		Setting the deodorize fan	. 3-28
together (Type registration)	3-2	Setting Dryness feeding	. 3-29
Registering Type	3-2	Setting Stamp	. 3-30
Setting media compensation	. 3-5	Setting Test draw arrange	. 3-32
Setting media compensation		Change the operation condition of	
Setting print mode	. 3-8	the room temperature	. 3-34
Setting of the print quality		Setting confirmation feeding	. 3-35
Setting scanning direction		Setting time	
Setting Logical-seek		Setting Unit	
Setting WhiteLay Print		Setting Machine name	
Setting drying time		Setting Key buzzer	
Setting margins		Extension of Ink Expiry Month	
Setting Priority		Extension of Ink Expiry Month	. 3-40
		Switch Setting of Ink Supply	
Setting Auto cleaning		Path	3-42
Setting cleaning while printing		Confirming machine information	
Setting media detection		Displaying Information	
Other settings	3-24	Dioplaying information	. 5 1-
Initializing the settings	3-26		

## **User type**

### Registering the drawing conditions together (Type registration)

The drawing conditions are registered in each type (1-4).

The most suitable drawing conditions are settable only by changing the type when replaced by a different type of media, if the drawing conditions that meet the media to be used have been registered in the type.

#### **Example of type registration**

	When solvent ink is used.	When aqueous ink is used.
Type 1	For Tarpaulin 1	Photo-paper
Type 2	For Tarpaulin 2	For PET 1
Type 3	FF (Flexible Face)	For PET 2
Type 4	PVC	Synthetic paper

### **Registering Type** Press the FUNCTION key in the local **FUNCTION FUNCTION** SETUP <ENT> mode. Press the **ENTER** key. SETUP : TYPE . 1 SELECT Select the type (1-4) by pressing the keys then the **ENTER** key. Select and set each item of the list of SET UP functions. 4 · For the detailed setting procedures, refer to reference pages described in "List of func-

tions".

### **List of functions**

This section describes the outline of each SET UP function registerable to the user type and the setting value. The underlined has been set when purchased.

Function name			Set value	Outline
MEDIA COMP. ( P.3-5)		-255 ~ <u>0</u> ~ 255	Prints a pattern to correct the feeding rate of media and corrects it.	
		Pre- Heater	OFF/ 20 ~ 50°C (OFF/ 68 ~ 122°F)	
	SET TEMP	Print Heater	OFF/ 20 ~ 50°C (OFF/ 68 ~ 122°F)	
HEATER (@P.3-8)		Post Heater	OFF/ 20 ~ 50°C (OFF/ 68 ~ 122°F)	Sets heater conditions.
	OFT TIME	STANDBY	( <u>NONE</u> / 0 ~ 90 min 10min unit)	
	SET TIME	OFF TIME	( <u>NONE</u> / 0 ~ 90 min 10min unit)	
	DRAFT Qua	ality	STD / FAST / FINE	
PRINT	FINE Quality	y	STD / FAST / FINE	
MODE	SCAN DIRE	CTION	Bi-D / Uni-D	Sets a print quality level and printing direction.
(ੴ P.3-12)	LOGICAL S	EEK	ON / OFF	printing direction.
	WhiteLay Pr	rint	OFF/ ON (LEVEL 1~3)	
INK LAYERS	(Æ P.3-28)		1~9	Sets the number of layers in which ink is to be applied.
DRYING	SCAN		<u>0.0</u> ~ 19.9 sec	Sets the time to wait for ink
TIME (@ P.3-18)	Draw. END		<u>0</u> ~ 999 sec	drying.
AUTO CUT (@ P.3-28)		ON / OFF	Cuts the media automatically after printing.	
PRE-FEED (@PP.3-28)		ON / OFF	Feeds the media back and forth before printing. When sticky media is used, select ON.	
MARGIN	LEFT		-10 ~ <u>0</u> ~ 85mm (1mm unit)	Sets a non-printing area along
(@P.3-19) RIGHT		-10 ~ <u>0</u> ~ 85mm (1mm unit)	the right and left edges of the media.	
COLOR PATTERN (@PP.3-28)		ON / OFF	Prints a color pattern for nozzle missing check near the right edge of the media.	
REFRESH (Æ P.3-28)			Level <u>0</u> (Refresh interval long) ~ 3 (Refresh interval short)	Refreshes the print heads during printing.
VACUUM (@ P.3-28)		OFF / STANDARD / WEAK / Little WEAK / STRONG	Sets the absorbability of the media.	
FeedSPEED LEVEL (@ P.3-28)			10 ~ <u>100</u> ~ 200% 10%6mm/sec 100%60mm/sec 200%120mm/sec	Changes the media feeding speed in printing.

Function name			Set value	Outline	
PRIORITY (@P.3-20)			INDIVIDUALLY/ <u>ALL HOST</u> / ALL PANEL	Sets the priority of settings (host / panel) Sets each item of the followings individually when the individual setting is selected.  • MEDIA COMP.  • HEATER  • PRINT MODE  • INK LAYERS  • DRYING TIME  • AUTO CUT  • PRE-FEED  • MARGIN  • COLOR PATTERN  • REFRESH  • VACUUM  • FeedSPEED LEVEL	
AUTO	ON	INTERVAL	10 ~ <u>1000</u> ~ 10000 mm	Sets the auto cleaning of the	
CLEANING		TYPE	NORMAL / SOFT / HARD	print head every completion of	
(Æ P.3-22)	<u>OFF</u>			printing.	
Print.	ON	INTERVAL	10 ~ <u>1000</u> ~ 10000 mm	Cata the guita alagaine of the	
CLEANING	011	TYPE	NORMAL / SOFT / HARD	Sets the auto cleaning of the print head in printing.	
(Æ P.3-24) <u>OFF</u>			print fload in printing.		
MEDIA DETECT METHOD DETECT (P.3-26) CUTTING DETECT		SELECT / WIDTH	Cata the mostle of for data this		
		ETECT	NONE / <u>BOTH EDGE</u> / LEFT EDGE / RIGHT EDGE	Sets the method for detecting the media.	
FEED ORIGIN ( P.3-28)		ON / OFF	Setting the media feeding direction to LED pointer when changing the printing origin position.		

## **Setting media compensation**

Correct the feeding rate of media after the type of media is replaced or the temperature of Heater is changed.

If the correction value is not appropriate, stripes may appear on the print, thus resulting in a poor print.



 
- When any heater temperature is changed, first make sure that the [ CONSTANT ] lamps light and the preset temperatures have been reached, and then start correction.
- On completion of [MEDIA COMP.] during use of a roll media, the media returns to the printing origin. Then the roll media in the rear of this machine will slacken.
   Before printing, take up the slack in the roll media by hand; a loose roll media can result in an inferior image quality.
- When printing is to be performed while using the take-up device, set the media first and then perform [MEDIA COMP.]. (Except Type B)

### **Setting media compensation**

Print the compensation pattern then correct the feeding rate of media.



- Print two bands as the compensation pattern.
- · Adjust so that an even color density is obtained around the boundary between the two bands.



1

Set a media.(RP P.2-6)

2

Press the (FUNCTION) key in the local mode.



3


Press the **ENTER** key.





Select the type (1-4) by pressing the keys.



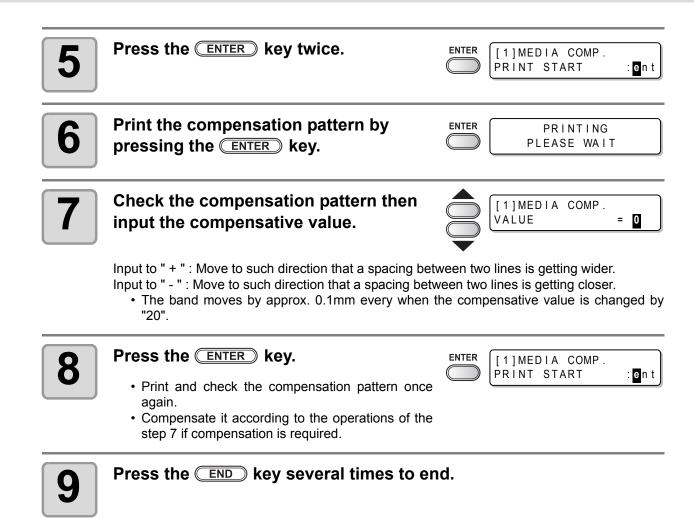


#### When you need to correct the media feed during printing

The media feeding amount can be corrected even in the remote mode or when printing image data.



 Press the FUNCTION key in the remote mode.



FUNCTION

FEED COMPENSATION.

2

Press the **ENTER** key.



3

Enter the correction amount with





- Correction amount: -500 to 500
- The value entered here will be reflected on the correction amount immediately.



Press the **ENTER** key.



• The value entered here will be invalid when pressing END key in stead of ENTER key.

5

Press the **ENTER** key.

This indicates that the media correction was performed in the remote mode.



- · The changed value is registered.
- The value entered here will be valid temporarily when pressing END key in stead of ENTER key. (If performing media detection again or turning OFF the power supply, the correction value will be cleared.)

## **Changing the set value of Heater**

### Rough guide for temperature setting (When solvent ink is used)

Type of ink	ES3 ink			SS21 ink
Type of media	PVC	All medias		
Pre-heater	40°C	40°C	40°C	35°C
Print-heater	40°C	40°C	40°C	35°C
Post-heater	50°C	50°C	50°C	50°C





- Adjust each heater temperature to a value best suited to the media conditions.
- No reference is required for the temperature setting when aqueous color ink is used.

### **Changing temperature settings of Heater**

Set each item of [SET TEMP] and [SET TIME] .

SET TEMP		Change the set temperature of the Pre-heater, Print-heater and Post-heater built in the platen.	
	STANDBY	Set the period of time from when printing is completed to when the heater temperature begins to drop to the preheat temperature.  Set value: NONE, 0 ~ 90min (10min unit)  The preheat temperature is preset and cannot be changed.  If the machine receives data at the preheat temperature, the heaters automatically raise their temperatures up to the preset levels and then the machine starts printing.  When [NONE] is selected, the temperatures do not drop to the preheat level.	
SET TIME	OFF TIME	<ul> <li>The heaters are turned off in the following case:</li> <li>If a preset time has passed without printing while the machine is in standby mode.</li> <li>With STANDBY- [NONE] selected, when preset time passes without printing after some printing.</li> <li>Set value: NONE, 0 ~ 90min (10min unit)</li> <li>If the machine receives data with the heaters turned off, the heaters are automatically turned on to raise their temperatures up to the preset levels and then the machine starts printing.</li> <li>With [NONE] selected, the heaters are not turned off.</li> <li>It turns "OFF" at end of printing if "0min" is set.</li> </ul>	

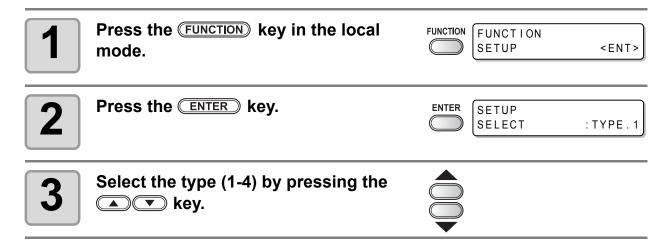

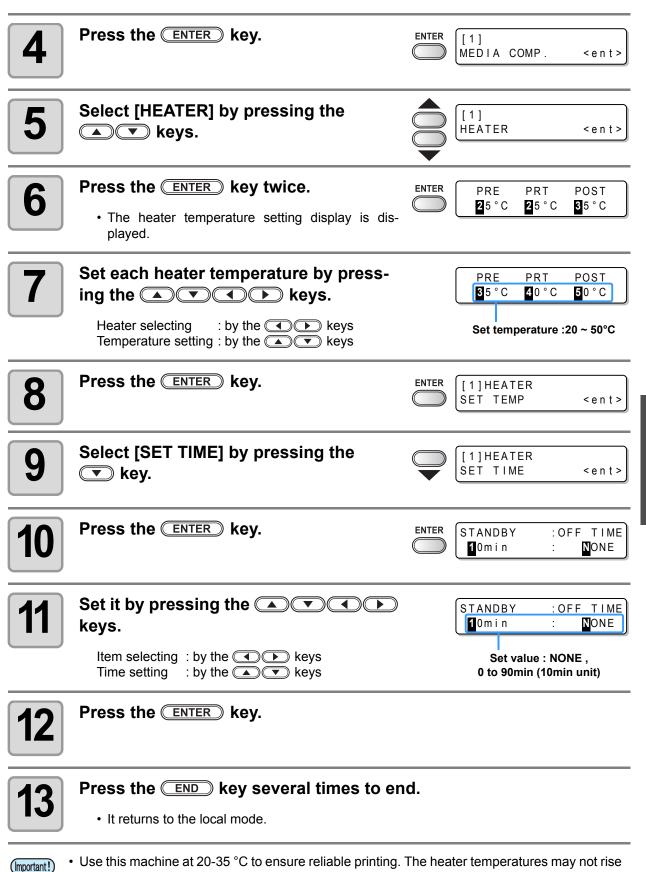


to the set values depending on the ambient temperature.

### Adjusting suitable temperature adjustment (When solvent ink is used)

This section describes the procedure for setting the heater temperatures properly.

The proper heater temperatures depend on the media type and ambient temperature. Set temperatures that are appropriate to the media. For non-coated media or media on which ink is slow to dry, set the heater temperatures so that the ink fixing and drying characteristics will be improved.

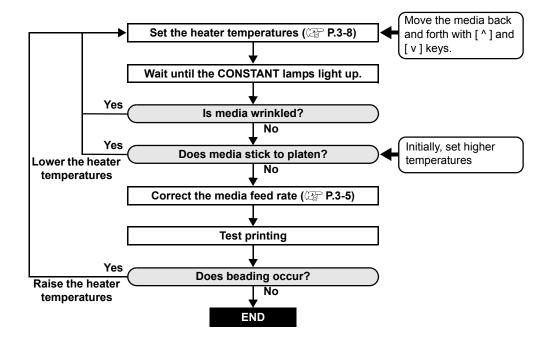


#### In case the heater temperature is too low

When solvent ink is used, this may result in printing failures such as beading or banding if the heater temperature or the ink acceptable amount (the ink limit) is too low.

Beading is a phenomenon that adjacent dots attract each other and join. Beading causes speckled patterns or stripes along printing passes (banding.)


#### **Example of beading**

The area in 100% magenta looks fine. Generally, the area in 70-100% single color is easily affected by the unevenness of media feed rate. The print shown here, free from unevenness of color in the vicinity of 100% magenta area, signifies that media feeding has been adjusted properly.

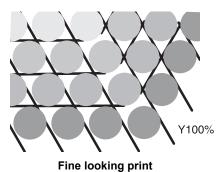

In the blue area (100% magenta + 100% cyan), however, speckled patterns and banding occur. This banding is a result of beading. If heater temperatures are low or the ink capacity (ink limit) of the media is low, the first dot does not solidify before the second dot lands on the media. As a result, dots bond to each other and unevenness or banding occurs.

In order to avoid beading, it is recommended to raise the heater temperatures, to raise the ink capacity (ink limit) of the media, to adjust the ink volume per dot for the media, to increase the number of printing passes and decrease the ink amount for one shot, and/or to gain time by scan wait. Change media if none of the above-mentioned measures works to prevent beading.

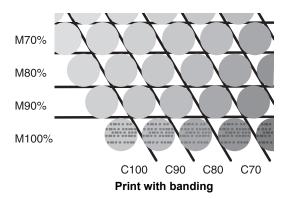

# **Setting print mode**

Upon the setting of the print mode, set each item for printing as follows.

• Print quality (DRAFT) : Setting the print quality in the DRAFT mode (Resolution in the scanning

direction: 540dpi)

• Print quality (FINE) : Setting the print quality in the FINE mode (Resolution in the scanning direc-

tion: 720dpi)

Scanning direction
 Logical-seek
 Setting the printing direction
 Setting "ON/OFF" of Logical-seek

• WhiteLay Print : Setting the way of print with other colors after printing with SS21 white ink

(Usable on Firmware Ver. 1.30 or later)

### Setting of the print quality

Press the FUNCTION key in the local mode.

 


Press the ENTER key.



Select the type (1-4) by pressing the keys then press the **ENTER** key.





Press the ENTER key.



6

#### Select an item to be set.

- (1) Select [DRAFT QUALITY] or [FINE QUALITY] ([DRAFT QUALITY] is selected here.) by pressing the keys.
- (2) Press the ENTER key.

7

# Select the print quality by pressing the keys.

[1]PRINT MODE DRAFTquality:**S**TD.

- Set value : STD / FAST / FINE
- Press the ENTER key to terminate the setting at this then proceed to the step10.



When changing the details of printing quality at each resolution.

# Select the resolution by pressing the FUNCTION key.

plution by pressing the

- **Set value**: 540x720, 540x900, 540x1080 dpi (When "DRAFT" is selected) 720x540,720x720,720x1080,720x1440 dpi (When "FINE" is selected)
- (1) Select the resolution by pressing the key.
- (2) Press the ENTER key.



# Select the number of passes and printing speed.

[1]DRAFT QUALITY
PASS=8 :SCAN=HiSPEED

- (1) Select the number of passes with the keys then press the key.
- (2) Select the printing speed ("Hi-SPEED" or "Normal-SPEED") with the keys.
- (3) Press the ENTER key.
- The set value of the number of passes is different depending on the content of ink set or the resolution selected at the step 8. Select the number of passes, referring to "Combinations of Settable factors".

10

Press the END key several times to end.

#### **Combinations of Settable factors**


#### **DRAFT** quality

Resolution	4 colors		6 colors	
(dpi)	Pass	Speed	Pass	Speed
540x720 dpi	4	Hi-SPEED/ Normal- SPEED	8	Hi-SPEED/ Normal- SPEED
	8		16	
	16		32	
E40v000	10	Hi-SPEED/ Normal- SPEED	10	Hi-SPEED/ Normal- SPEED
540x900 dpi	20		20	
	40		40	
540x1080 dpi	6	Hi-SPEED/ Normal-	12	Hi-SPEED/ Normal-
	12		24	
	24	SPEED	48	SPEED

#### FINE quality

Resolution	4 colors		6 colors	
(dpi)	Pass	Speed	Pass	Speed
720x540	6	Hi-SPEED/ Normal-	6	Hi-SPEED/ Normal- SPEED
	12		12	
	24	SPEED	24	
720x720	4	Hi-SPEED/ Normal- SPEED	8	Hi-SPEED/ Normal- SPEED
	8		16	
	16		32	
720x1080	6	Hi-SPEED/ Normal- SPEED	12	Hi-SPEED/ Normal- SPEED
	12		24	
	24		48	
720x1440	8	Hi-SPEED/ Normal- SPEED	16	Hi-SPEED/ Normal- SPEED
	16		32	
	32		64	

## **Setting scanning direction**

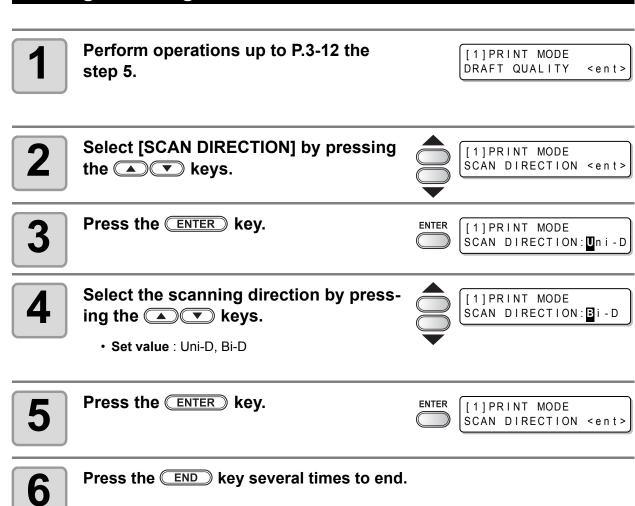

## **Setting Logical-seek**

The motion of Head varies depending on the set of Logical-seek.



**BI-DIRECTIONAL** 

Movement of heads when LOGICAL seek is OFF

**UNI-DIRECTIONAL** 



**BI-DIRECTIONAL** 



Movement of heads when LOGICAL seek is ON

Perform operations up to P.3-12 the step 5.

[1]PRINT MODE
DRAFT QUALITY <ent>

Select [LOGICAL SEEK] by pressing the keys.

 


Press the ENTER key.



Select ON/OFF by pressing the keys.







6 Press the END key several times to end.

### **Setting WhiteLay Print**

When using SS21 white ink, you can print with other colors after printing with white ink, without returning the media.

In this page, set the printing method of white ink and other color ink.

Set Value	Outline		
OFF	Printing the white ink and the color ink at the same time.		
ON (LEVEL1~3 *1)	Printing the color ink on the white ink after printing with the white ink.  • If a larger number is set for LEVEL 1 to 3, time interval between printing with white ink and printing with color ink becomes long.  • If a large number is set for LEVEL, drying property of white ink goes up, but printing time becomes long.		

<sup>\*1.</sup> This machine cannot set the order of synthesis.



- This function can be set only when SS21 ink (6 colors + white) is filled.
- Printing time is about two times longer than normal printing.
- When printing on the following condition, as usable number of nozzles is limited, printing speed slows.

Setting of printing quality	Resolution	Printing width	
DRAFT	540 x 1080 dpi	1541 mm or above	
FINE	720 x 1080 dpi	- 1155 mm or above	
	720 x 1440 dpi		
	1440 x 1440 dpi	1155 mm or above (577mm for Vd data)	

1

Perform operations up to P.3-12 the step 5.

[1]PRINT MODE DRAFT QUALITY <ent>

2

Select [WhiteLay Prt] by pressing the keys.



3

Press the ENTER key.



4

Select set value by pressing the keys.

• Set value : OFF, ON (LEVEL 1 ~ 3)



Press the ENTER key.

ENTER [1] PRINT MODE WhiteLay Prt <ent>


6 Press the END key several times to end.

# **Setting drying time**

Upon the setting of drying time, set each item for ink drying as follows.


• **SCAN** : Set the time to wait for ink drying after each pass. During bidirectional printing, the machine stops temporarily after every scanning back and forth.

• Draw. END : Set the time to wait for ink drying after completion of printing.

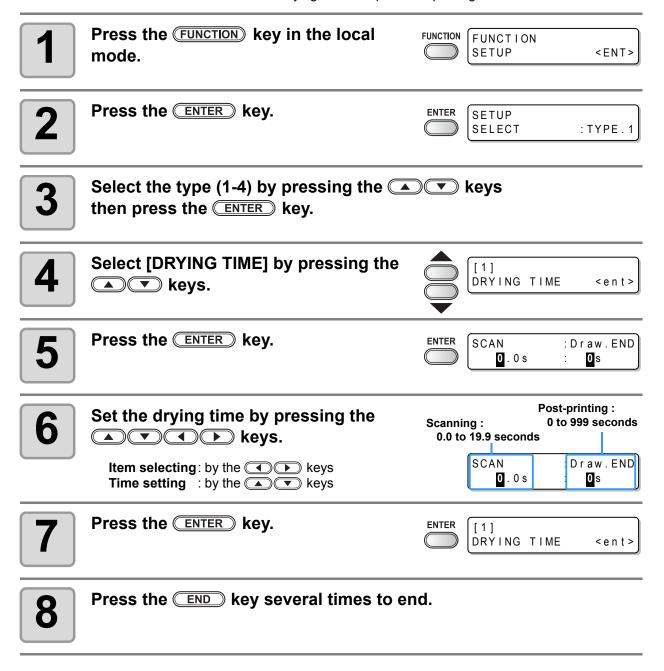

# **Setting margins**

Set a non-printing area along the right and left edges of the media. The offset value against the standard margin 15mm is set hereupon.

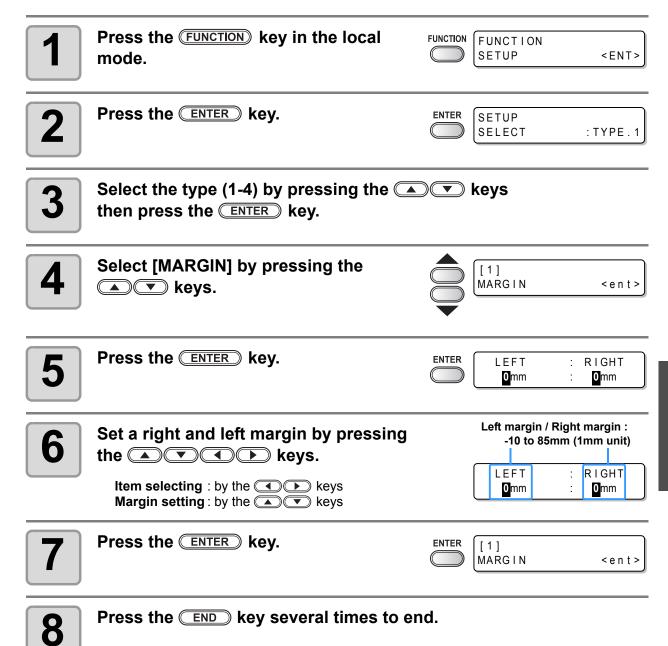



• Pay attention to that printing may start on the media press if a right and left margin is set to 5 mm or less when the media press is used in printing.


# **Setting Priority**

For the following items, the priority is selected either the setting by the machine (by the panel) or the setting by the PC (by the host).


Items to be selected : MEDIA COMP. / HEATER / PRINT MODE / INK LAYERS / DRYING TIME /


AUTO CUT / PRE-FEED / MARGIN / COLOR PATTERN / REFRESH / VACUUM /

FeedSPEED LEVEL

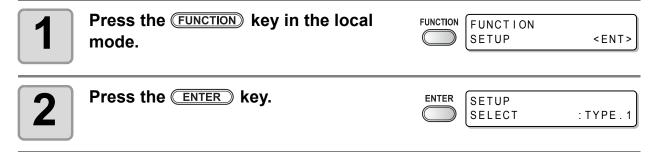

  Select the type (1-4) by pressing the keys then press the ENTER key.








[1]

• Set value : INDIVIDUALLY / ALL HOST / ALL PANEL

Select [PRIORITY] by pressing the

 Proceed to the step 7 when [INDIVIDUALLY] is selected.
 Press the ENTER key then proceed to the step 11 when either [ALL HOST] or [ALL PANEL] is selected.





Select either "HOST" or "PANEL" by pressing the keys.





Press the **ENTER** key.



• You can also press keys to move between items. Be sure to press the ENTER key to register the setting.



Set other items by the same operations as the step 8 and 9.



Press the END key several times to end.



• Even when setting has been made to give priority to the host, the settings made on the machine become effective if there is no instruction from the host.


# **Setting Auto cleaning**

The machine is settable so that the head cleaning is automatically carried out when printing is completed for the set length.


At the completion of printing, the machine counts the length printed after the previous head cleaning and performs the cleaning automatically if required.


Reliable output results are always ensured if the heads are always kept clean.

The first cleaning is performed immediately before the first printing after the machine is started. Then subsequent cleaning is performed every printing on the specified length of media.

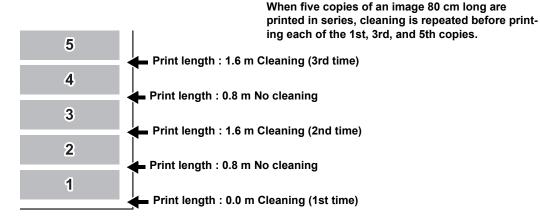

When operation interval is 1000 mm (example)

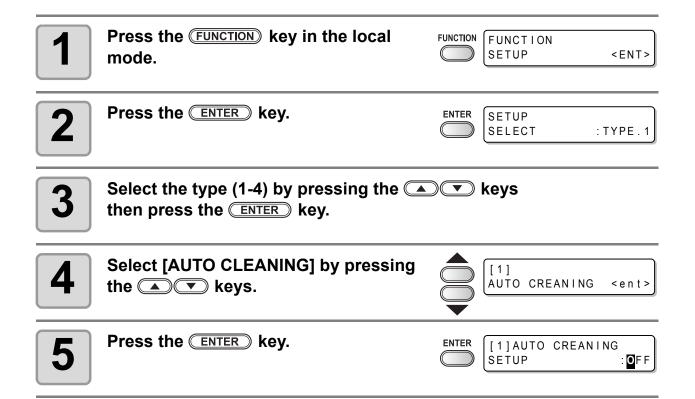

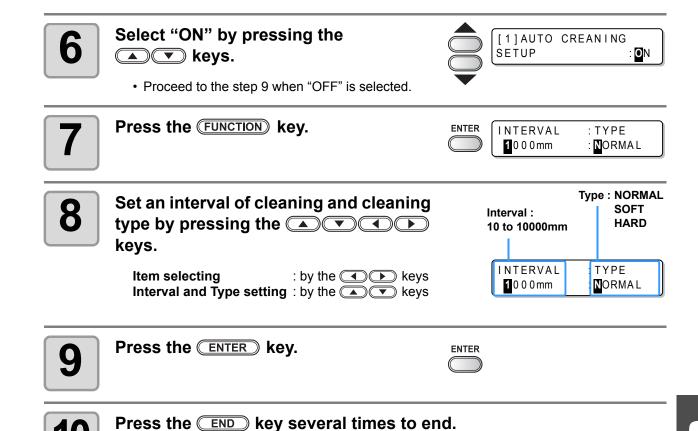



10


- This function does not operate when ink near-end occurs. Solve the ink near-end, referring to P.1-12.
- Depending on the conditions of the heads, etc., the defective printing could not be recovered even performing this function. In this case, contact our service office or distributor.

# **Setting cleaning while printing**

Set it whether the head cleaning is carried out automatically during printing or not.

Upon cleaning during printing, set the cleaning interval to the length printed.

The printing is interrupted each in the set length and the head cleaning is carried out automatically.

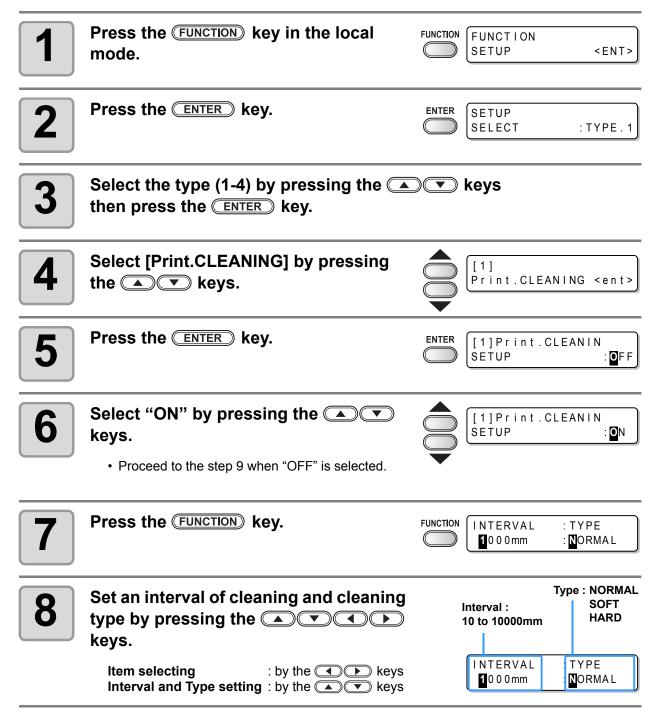



Press the **ENTER** key.






Press the END key several times to end.




- This function does not operate when ink near-end occurs. Solve the ink near-end, referring to P.1-12.
- Depending on the conditions of the heads, etc., the defective printing could not be recovered even performing this function. In this case, contact our service office or distributor.

# **Setting media detection**

Set the method for detecting a media when the media is set and the detecting type when the media is cut.

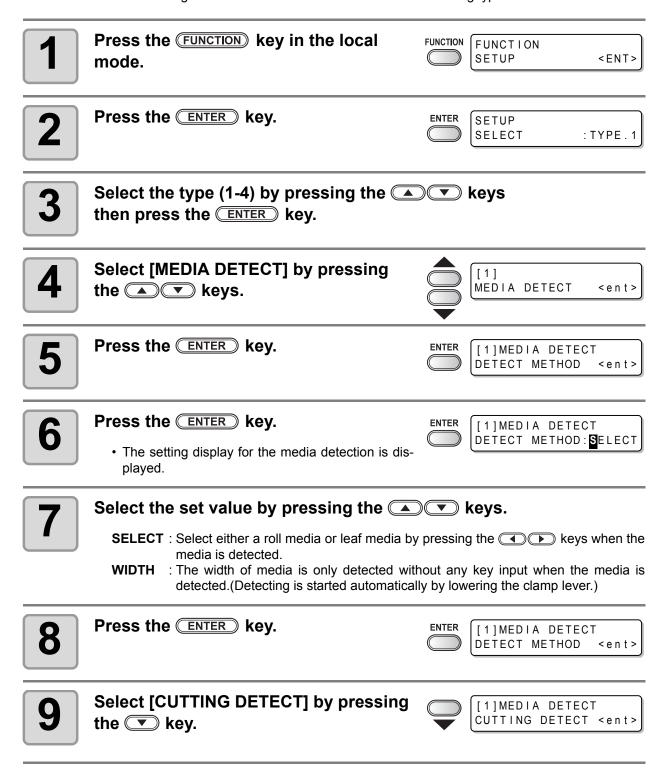

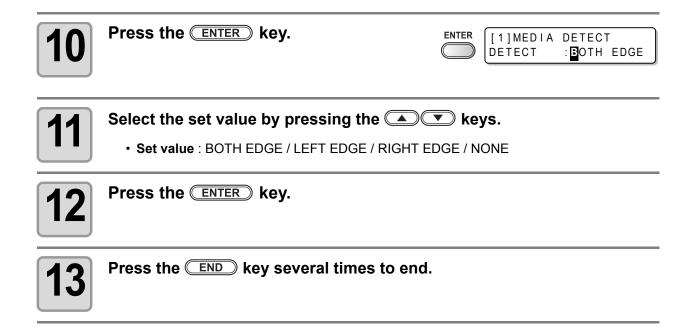


• If the set value is set to others than "BOTH EDGE" in [CUTTING DETECT], although the cut-

ting time is shortened, cutting remainders may happen due to the media skew.

(Important!)

# Other settings

Change the setting according to the use.

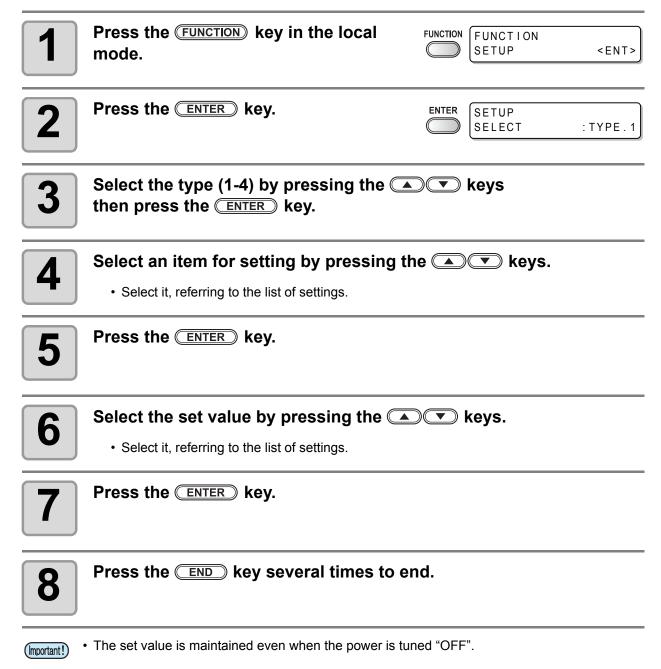


## **List of Settings**

The underlined has been set when purchased.

Item	Outline	Set value	
Setting of Media compensation	Corrects the feeding rate of media	Refer to P.3-5	
	Setting Heater temperature		
Setting of Heater	Setting Heater standby time and OFF time	Refer to P.3-8	
	Setting Print quality		
Setting of Printing mode	Setting Scanning direction	Refer to P.3-12	
Setting of Frinting mode	Setting Logical-seek	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	
	Setting WhiteLay Print		
Setting of the number of ink layers	Setting the number of layers in which ink is to be applied.	1~9	
Setting of Daving time	Setting the time for drying ink every scanning.	D. ( t. D.) 40	
Setting of Drying time	Setting the time for drying ink after the completion of printing.	Refer to P.3-18	
Setting of Auto cut	Setting whether the media is cut automatically or not after printing.	ON / OFF	
Setting of Pre-feeding	Setting whether the media is carried back and forth or not before printing.	ON / OFF	
Sotting of Margina	Setting a left margin on the media	Refer to P.3-19	
Setting of Margins	Setting a right margin on the media	Refer to P.3-19	
Setting of Color patterns	Setting whether color patterns are printed at the right end of media or not.	ON / OFF	
Setting of Refreshing	Setting the refreshing level of head.	<u>0</u> ~ 3	
Setting of Adsorption	Setting the force adsorbing a media	STRONG / <u>STANDARD</u> / Little WEAK / WEAK /OFF	
Setting of Feeding speed level	Changing the media feeding speed in printing.	10 ~ 100 ~ 200%	
Setting of Priority	Sets the priority of settings (host / panel)	INDIVIDUALLY / <u>ALL HOST</u> / ALL PANEL	
Setting of Auto cleaning	Setting the auto head cleaning operation performed every printing.	Refer to P.3-22	
Setting of In-printing clean-ing	Setting the auto head cleaning operation performed during printing.	Refer to P.3-24	
Setting of Media detection	Setting the media detecting operation.	Refer to P.3-26	
Cotting of Michia detection	Setting the detection conditions at the cutting operation.		
Setting of Feed Origin	Setting the media feeding direction to LED pointer when changing the printing origin position.	ON / OFF	

# **Initializing the settings**

Initialize the settings to the conditions that have been set when purchased. (Set resetting) The set resetting can be executed per type.

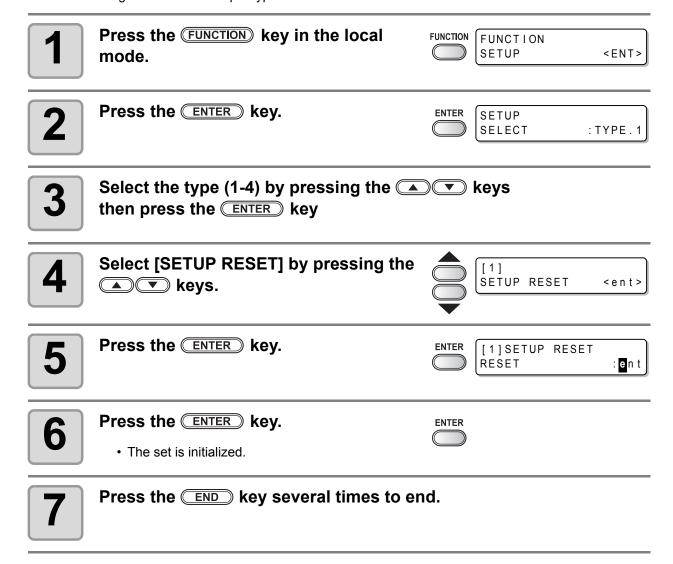

# **Machine settings**

It is each type of setting for using this machine more comfortably. [MACHINE SETUP] and [MACHINE SETUP2] are available in this machine.

The following items are settable in MACHINE SETUP 1, 2.

	Item		Set value *1	Outline	
Machine Setup	DEODOR- IZE FAN *2	STOP TIME	0 ~ <u>120</u> ~ 240min/ CONTINUE	Setting the time until the rotation of the exhaust fan is interrupted after the completion of printing.	
	IZE FAN	RENEW	ON / OFF	Switching the current operation of the exhaust fan.	
	DRYNESS FEED		ON / OFF	Setting whether feeding for drying a media is performed after the completion of printing or not.	
	STAMP SETUP		ON / OFF	Setting to output the output date and drawing conditions after the completion of printing.	
			ON / OFF	Setting whether a check message for the waste ink tank is displayed or not.	
	Test Draw Arrange		FEED DIR. / SCAN DIR.	Setting the deployment direction of the test pattern when performing test printing repeatedly.	
	CART.PRIORITY *3		INK LEVEL EXP. DATE	Setting a cartridge to be used first for double cartridge automatic change function.	
	ROOM TEMP. *4		Not wait ARR. Wait arrival	Sets the operation when an error indicating that the room temperature is out of the usable temperature range occurs. ( P.3-38)	
2			ON / OFF	The feeding set for checking the result after test printing is settable.  [BACK FEED] for returning a media to the original position by pressing the FUNCTION key is settable when set to "ON".	
Setup	TIME SET			Setting the present date and time.	
ne Se	UNIT SETUP	TEMP.	°C (Centigrade) /°F (Fahrenheit)	Setting a unit of temperature indications.	
Machine		LENGTH	mm / inch	Setting a unit of length and area indications.	
Ma	MACHINE NAME		<u>01</u> ~ 99	Setting a machine name (machine No.) for recognizing each machine when plural machines are connected through USB2.0 interface.	
	KEY BUZZER		ON / OFF	Setting a buzzer sound of the time when a key is pressed.	

<sup>\*1.</sup> The setting at the time of purchase is indicated with the underline.

<sup>\*2.</sup> DEODORIZE FAN is optional.

<sup>\*3.</sup> This function is valid only when the 4-color ink set is used.

<sup>\*4.</sup> This function is available for the firmware Ver.4.60 and later.

#### Setting the deodorize fan


The fan operates during printing, and operates according to the set of [STOP TIME] from the completion of printing.

Upon the setting of the deodrize fan, two items are settable as follows.

- STOP TIME : Setting the time from the completion of printing until the fan operation is interrupted.
- **RENEW** : The fan operation is executable even not in printing if it is set to "ON".



- The deodrize fan is an option included in the drying ventilation unit.
- When a drier fan is equipped, the drier fan operates in linkage with the contents set here.

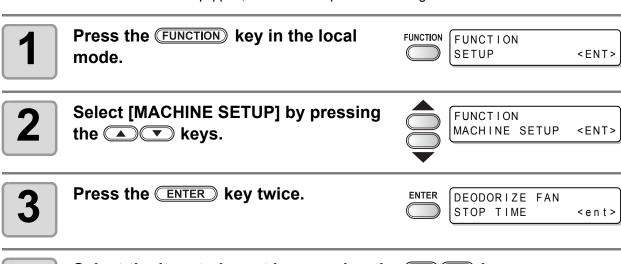



Select the item to be set by pressing the keys.

STOP TIME: Setting the time from the completion of printing until the exhaust fan is

stopped.

**RENEW**: Select this to operate the fan.

**5** Press the ENTER key.

Select the set value by pressing the keys.

STOP TIME: 0 - 240 seconds or continuous running

**RENEW**: Select "ON" to operate and "OFF" to stop the operation.

7 Press the ENTER key.

Press the END key several times to end.


## **Setting Dryness feeding**

 Setting whether feeding for drying a media is performed after the completion of printing or not.









Press the ENTER key.



Select [DRYNESS FEED] by pressing the keys.




Press the ENTER key.



- Select ON/OFF by pressing the keys.
- 7 Press the ENTER key.
- Press the END key several times to end.

## **Setting Stamp**

Set whether information such as the drawing conditions or the date printed is output after the completion of printing or not.

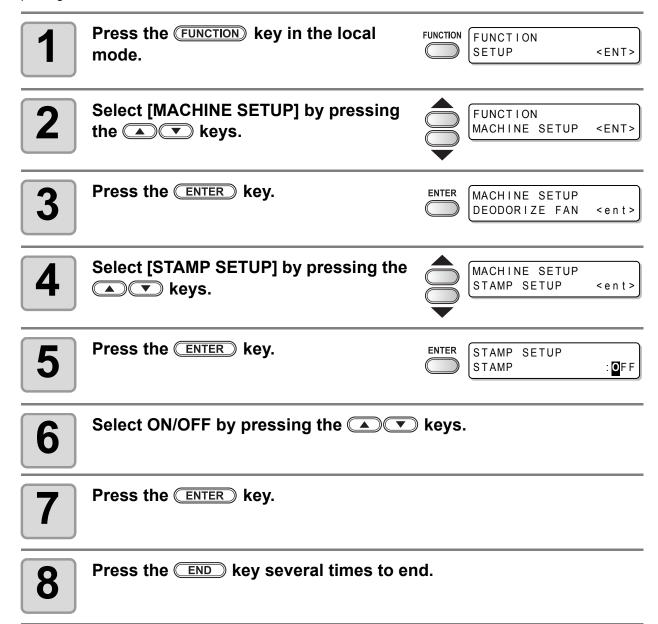

#### **Examples of Output**

JV33-130 Ver1.00

PRINT MODE : 540×1080 12PASS Uni-D Hi 1LAYER MEDIA COMP. : -10(20,-50)


HEAD GAP : Thin


INK : ES3INK 4color HEATER TEMP.: PRE :40°C PRINT:40°C POST :50°C


: 12.05.05 17:24:28 DATE

## **Setting Test draw arrange**

You can set the deployment direction of the test pattern to be printed when performing test printing repeatedly.

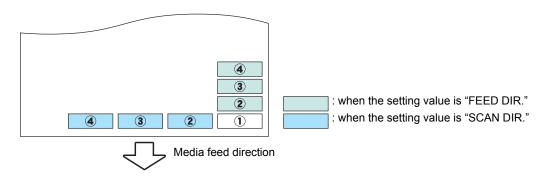

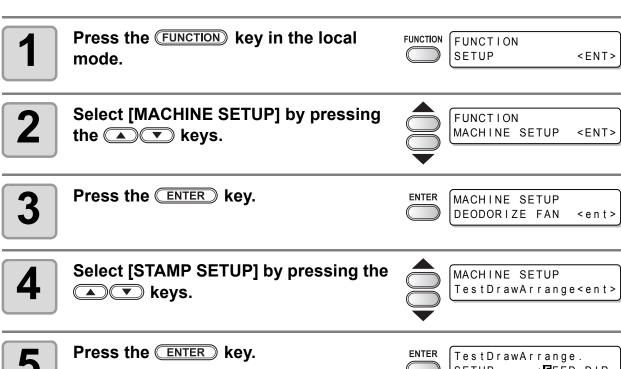

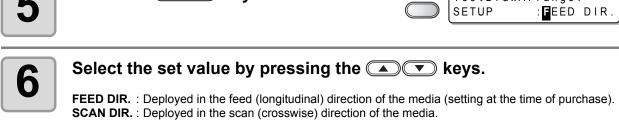

Press the ENTER key.

Press the END key several times to end.

#### Change the operation condition of the room temperature

If you print in the status that the temperature of the place in which the machine has installed (room temperature) is out of the usable temperature range, ink discharging defect or changing color may occur, and it adversely affects the printing quality.


Here, select the operation if the room temperature is out of the usable temperature range when printing.



- For the details of the usable temperature range, refer to P.6-3 "Available temp.".
- If the room temperature is out of the usable temperature range at the start of printing, the error message below is displayed to inform you of it.



\* The temperature displayed in error message is the one of inside of the machine. Be careful that it is not actual room temperature.

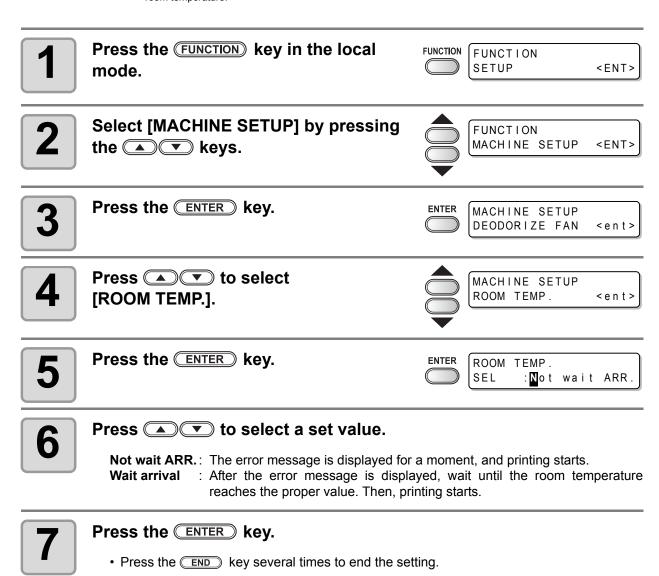

### **Setting confirmation feeding**

Set whether media feeding is performed for checking the result after test printing or not



Press the FUNCTION key in the local mode.



2

Select [MACHINE SETUP 2] by pressing the keys.



3

Press the **ENTER** key twice.

 




Select "ON" by pressing the keys.



• Proceed to the step 7 when "OFF" is selected.







Select ON/OFF by pressing the keys.



- When the media return feeding is set "ON", the media fed by the confirmation feeding is slightly returned.
- If it is not desirable to return the media, set it to "OFF".




Press the **ENTER** key.



8

Press the **END** key several times to end.

### **Setting time**

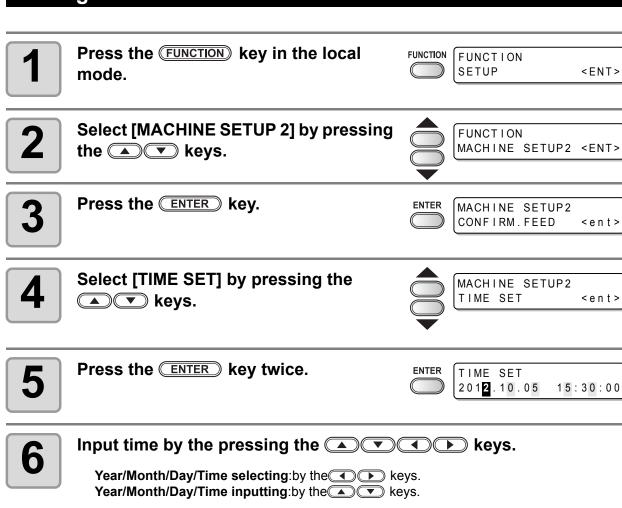



Press the **ENTER** key.

The input time is indicated.





Press the END key several times to end.



- The setting of past time is settable only for time up to 8 hours earlier than the presently indicated time.
- If future time is set by mistake, the previously set time can be set back by the following operations in step 7.
- (1) Press the Function key in step 7. (The input time and the previously set time are indicated.)
- (2) Press the ENTER key.

Only one change of previous setting can be set back. The time before changed is proceeding by the elapsed time.

## **Setting Unit**

Set a unit of measurement to be used in the machine.



Press the FUNCTION key in the local mode.



2

Select [MACHINE SETUP 2] by pressing the keys.



3

 
Press the **ENTER** key.



Select [UNIT SETUP] by pressing the keys.



**5** Press the ENTER key.



Select the unit by pressing the keys.

Item selecting: by the keys
Unit setting: by the keys


**7** Press the ENTER key.



Press the END key several times to end.

## **Setting Machine name**

Set a machine name (machine No.) for recognizing each machine when plural machines are connected through USB2.0 interface.

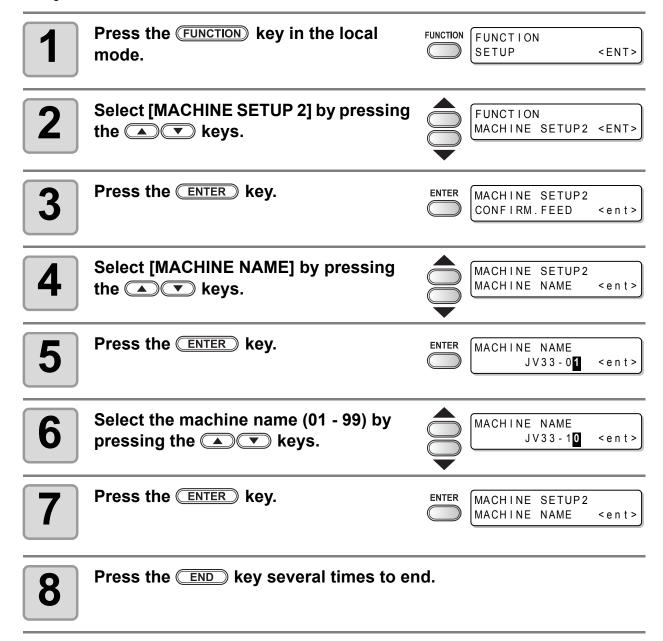

## **Setting Key buzzer**

Set a buzzer sound of the time when a key is pressed.



Press the (FUNCTION) key in the local mode.



FUNCTION

<ENT>

Select [MACHINE SETUP 2] by pressing the keys.



**FUNCTION** MACHINE SETUP2 <ENT>

3

Press the **ENTER** key.



MACHINE SETUP2 CONFIRM.FEED

< e n t >

4

Select [KEY BUZZER] by pressing the ▲ keys.



MACHINE SETUP2 KEY BUZZER

< e n t >

Press the **ENTER** key.



KEY BUZZER SETUP



6

Select ON/OFF by pressing the keys.



KEY BUZZER SETUP



Press the **ENTER** key.



MACHINE SETUP2 KEY BUZZER < e n t >

8

Press the END key several times to end.



· A buzzer sound at Error/Warning/Operation completion cannot be cancelled even when the setting is turned to "OFF".

# **Extension of Ink Expiry Month**

Ink expiry month can be extended for six months from the expired month. When used without extension, ink becomes unusable after two months of the expiry month.

#### **Extension of Ink Expiry Month**


The following setting or confirmation screen appears when the power of this machine is turned on, or when expired ink cartridge is set.



- An ink cartridge that is once set [YES] for extension cannot be changed the setting.
- To extend multiple inks' expiry month at a time, set the expired ink cartridges, and then set the
  extension.
- Extension of ink expiry month may lower the print image quality or print quality such as color difference or banding. Please understand them when extending ink expiry month.
- When initial filling, the ink expired more than two months ago cannot be used.



When a screen shown on the right appears, go to the next step.

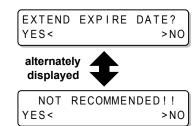

2

#### Press the to select [YES].

 When the ink expiry month is not extended, select [NO]. In this case, the ink will be disabled after two months of the expiry month. EXPIRE DATE EXTENDED PRESS[ENT]



#### Press the ENTER key.


· Ink expiry month is extended.



- When extended six months (six months from the ink expired month) have passed, a message "COMPLETELY EXPIRED" appears and the ink becomes unusable. Immediately replace the ink cartridge with a new one.
- If ink expiry month is extended, the cartridge LED blinks in green while supplying ink from the extended cartridge.

#### When a cartridge extended the expiry month is set

When a cartridge extended the expiry month is set and the power is turned on, or when a cartridge extended the expiry month is set to this machine, the following screen appears.

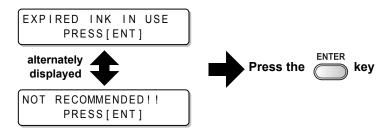



• To check expired ink, press the Function key while displaying the screens above alternately.


#### When an ink expiry month is extended

Example: If expiry month of your ink cartridge is February 2014.

· When the expiry month is not extended

February	March	April	May or later
Printable continuously	1	Not printable continuously	Not printable (Unusable)
1		1	A message "Expiration:2MONTH" or "COMPLETELY EXPIRED" appears on the display, and the cartridge lamp lights in red.
	ı		"Expiration:1MONTH" appears on the the cartridge lamp blinks in red.
A message "Expiration" appears.			

When the expiry month is extended (When extended at the time of

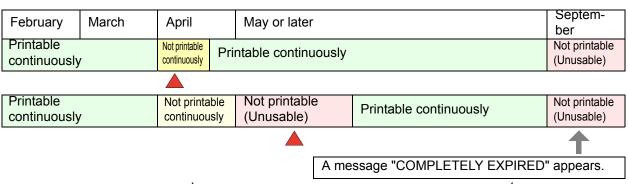

Even if extended at any time from April to August, it is extended for six months from the expiry month

## Switch Setting of Ink Supply Path

For the ink supply, condition of the ink cartridge to be used first by the double-cartridge automatic switching function can be selected.

This setting is only available for 4-color set.



- When expired ink cartridge is set, the expired cartridge is used first regardless of the setting below.
- When the optional bulk ink system (MBIS) is used and the MBIS is set in both slots, the setting below is effective.
- When both an ink cartridge and the bulk ink system (MBIS) are set in the supply paths of the same color, see the next page.



Press the FUNCTION key in the local mode.

FUNCTION SETUP <ENT>

2

Select [MACHINE SETUP] by pressing the keys.

FUNCTION MACHINE SETUP <ENT>

3

Press the **ENTER** key.

4

Select [CART.PRIORITY] by pressing the keys.

MACHINE SETUP CART.PRIORITY <ent>

5

Press the ENTER key.

6

Select the condition of ink to be used first by pressing the keys.

CART.PRIORITY SELECT :INK LEVEL

**INK LEVEL**: Low ink cartridge is used first

**EXP. DATE**: Close-to-date ink cartridge is used first

7

Press the ENTER key.

8

Press the <u>END</u> key several times to end.

#### When both ink cartridge and MBIS are used

When both an ink cartridge and the optional bulk ink system (MBIS) are set in the supply paths of the same color for 4-color ink set, you can select the ink to be used first.



• Usually, when both an ink cartridge and the bulk ink system (MBIS) are set in the supply path of the same color, the ink in the bulk ink system (MBIS) is used first.



- This setting is only available for 4-color set.
- If supply path does not have both ink cartridge and the bulk ink system (MBIS), this function cannot be set.
- Pull out the ink cartridge selected on this function or turn the power on again to disable the setting.



Press the <u>ENTER</u> key in the LOCAL or the REMOTE mode.



2

Press the **REMOTE** key...



Displays the currently supplying ink.

B: Bulk ink system (MBIS)

C: Ink cartridge

-: Only one type is set

3

Press the key to set the supply path and the ink to be used first.



Select the supply path : Press the key.

Select the ink to be used first: Press the key.



Press the (ENTER) key.

• It enters in the LOCAL or the REMOTE mode.

## **Confirming machine information**

The machine information of the machine is confirmable. Confirmable items of the machine information are as follows.

Item	Description
ERROR HISTORY	Displays the history of errors and warnings.  Using the  or  key, the errors and warnings can be displayed one by one in the order of occurrence.
MAINTE. HISTORY	Displays the records of the date and time when maintenance functions were used. It displays chiefly manual cleaning functions or automatic cleaning functions (by ROUTINE SETUP or SLEEP SET UP).
PRT.modeHISTORY	Displays the information (printing conditions) of the online printing that has been performed up to now since power-on. (Max. 50)  Using  or  key, the display can be changed in the order of printing.
LIST	Prints the settings of the machine.
Ink REPL. Report *1	Prints history of ink used on the machine.
VERSION	Displays version information of the machine.
Serial & Dealer No.	Displays serial No. and dealer No. of the machine.

<sup>\*1.</sup> This function is available for the firmware Ver. 4.60 and later.

### **Displaying Information**



Press the (FUNCTION) key in the local mode.



When it is desirable to print the set list of the machine, set a media to the machine.
 (P.2-6)

2

Select [INFORMATION] by pressing the keys.



3

Press the **ENTER** key.



4

Select the type of information by pressing the keys.



5


Press the **ENTER** key.



- The information is displayed.
- The set contents of the machine is printed when [LIST] is selected.

#### For the information displayed

This section describes the way to read the information displayed.

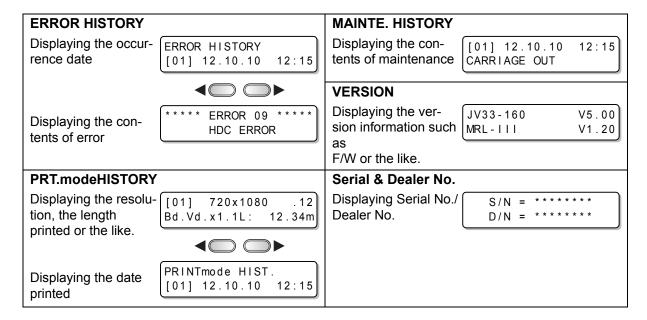

# CHAPTER 4 Routine Maintenance



This section describes the items required to use this machine more comfortably, which are the procedures of ink replacing, cleaning or the like.

Maintaining 4-2	Preventing nozzle clogging while	
Precautions in cleaning4-2	power-off	4-2
Notes on cleaning solution4-2	Setting refreshing interval in Sleep	
Cleaning exterior surfaces4-3		4-2
Cleaning the platen4-3	Setting tube washing interval in	
Cleaning the media sensor4-4	Sleep mode	4-20
Cleaning the media press4-4	Setting cleaning interval in Sleep	
Maintaining Capping station 4-5	mode	4-2
Cleaning the wiper and ink caps4-5	Setting Routine operations	4-28
Replacing the wiper4-7	Setting Routine wiping operations in	
Prior to Pump tube washing4-8	Standby mode	4-28
Washing of Head nozzle4-10	Setting Refreshing interval in	
Cleaning the ink discharge passage	Standby mode	4-30
(PUMP TUBE WASH)4-12	Setting Pump tube washing interval	
When not using for a long term	in Standby mode	4-3
(CUSTODY WASH)4-14	Setting Cleaning interval in Standby	
Cleaning heads and surroundings	mode	
parts 4-16	Other maintenance functions	4-34
When Nozzle clogged after	Changing the warning time of wiper	
cleaning 4-18	replacement	
Filling up ink4-18	Setting the media remaining display	
DISCHARGE & WASH4-19	White Ink Maintenance Function	4-3
Initial ink fill up4-21	To use sublimation transfer ink with	
If the Positions of Dots Shift 4-23	more stable quality	
	If Waste ink tank confirming message	
	is displayed	
	Changing the ink	
	Replacing the cutter blade	4-4

### **Maintaining**

Be sure to perform maintenance of the machine periodically or whenever necessary so that the machine can be used with its inherent accuracy for a long time.

### Precautions in cleaning

Pay attentions to the following items when the machine is maintained.



• When using the cleaning solution, be sure to wear the supplied protective glasses.



• The ink contains an organic solvent. When performing cleaning, be sure to wear gloves so that no ink will come in contact with your skin.



Never disassemble the machine. Disassembling it can result in electric shock hazards or damage to the machine.

Before starting maintenance work, be sure to turn off the power switch and unplug the power cable; otherwise, an unexpected accident may occur.



• Prevent moisture from entering the machine. Moisture inside the machine can cause electric shock hazards or damage to the machine.



- To ensure reliable ink jetting, it is necessary to have the machine perform ejection of a fine amount of ink (flushing) periodically while printing (output) is suspended for an extended period of time.
- When printing is to be suspended for a long time, turn off only the power switch in the front of
  the machine; leave the main power switch at the rear of the machine turned ON (in the position
  of | ) and leave the power cable connected.



- If organic solvent ink is mixed with water or alcohol, coagulation occurs.
   Do not wipe the nozzle face of the heads, the wiper or caps with water or alcohol. Doing so can cause nozzle clogging or machine failure.
- Do not use benzine, thinner, or any chemical agent containing abrasives. Such materials can deteriorate or deform the surface of covers.
- Do not apply lubricating oil or the like to any part inside the machine. Doing so can cause printing failure.
- Be careful not to allow the cleaning solution or ink to adhere to covers, as this may cause deterioration or discoloring of the surface of covers.


### Notes on cleaning solution

Use the cleaning liquid dedicated for the ink being used.

Type of Ink	Applicable maintenance washings	
SS21 Solvent ink	Cleaning solution MS2/ES3/HS kit (SPC-0369)	
ES3 Solvent ink	MILD SOLVENT WASHING LIQUID (SPC-0294)[Sold separately]	
Aqueous pigment ink	01	
Sublimation dye ink	Cleaning Liquid Bottle Kit A29 (SPC-0137) [Sold separately] Aqueous Cleaning Liquid Cartridge (SPC-0259) [Sold separately]	
Eco-PA1 ink	, industrial control of the control	

### Cleaning exterior surfaces

If exterior surfaces of the machine is stained, dampen a soft cloth with water or a neutral detergent diluted with water, squeeze it and wipe the surfaces with the cloth.

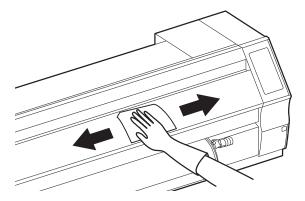


### Cleaning the platen

On the platen, it is easy to become dirt due to lint, paper dust or the like caused by cutting medias. For a conspicuous stain, wipe it off with a soft-hair brush, a dry cloth, a paper towel or the like.



• If it is stained with ink, wipe it off with a paper towel containing a little amount of the cleaning solution.

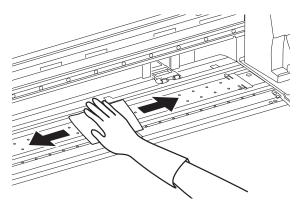




- Before starting to clean the platen, make sure that the platen has cooled adequately.
- Be sure to clean the slot for media pressing, the slot for paper cutting (the cutter line) or the like since dust and dirt are easily accumulated in these parts.

### Cleaning the media sensor

A media sensor is located at the platen on the backside. It may cause misdetection of media when dust or the like is accumulated on the sensor.


Using a cotton swab, clean the surface of the sensor of dust and dirt.

When cleaning the sensor on the lower surface of the head is cleaned, move the carriage to the left end by the operations of step 1 of P.4-16 "Cleaning the heads and their surrounding parts", and then clean it.

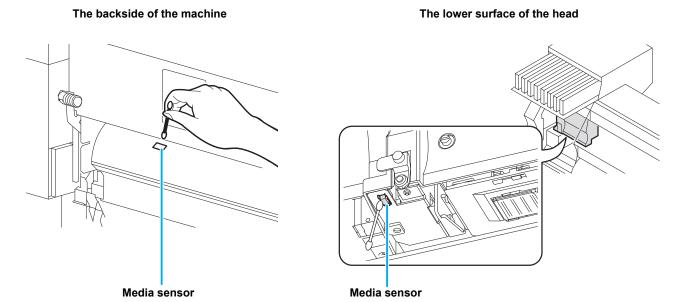

### Cleaning the media press

Media feeding may not operate properly in printing if cutting waste, dust or the like is accumulated on the media press, nor may print properly if dust or the like sticks to the nozzle. Clean the media press periodically.

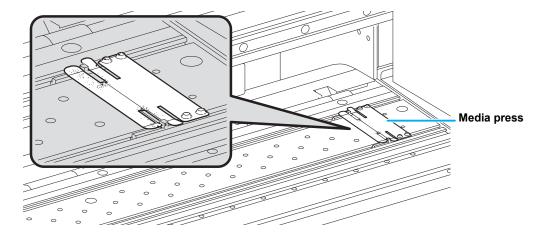

## **Maintaining Capping station**

Maintain Ink cap, Wiper or the like, which are located in the capping station. [ST.MAINTENANCE]

The ink cap and wiper function respectively as follows.

- Wiper : Wiping ink sticking to the head nozzle off.
- Ink cap : Preventing the head nozzle from clogging due to drying.

As the machine is used, the wiper and ink caps gradually become stained with ink and dust.

Clean it with the cleaning solution and a cotton swab unless nozzle missing is cleared even after the head cleaning.

If nozzle missing cannot be corrected even after executing the Head Cleaning ( P.2-24), use Cleaning kit and clean stick.

Tools required for Maintenance	<ul> <li>Cleaning solution</li> <li>When solvent ink is u</li> <li>Cleaning solution MS2</li> <li>When aqueous ink is</li> <li>Cleaning Liquid Bottle</li> </ul>	/ES3/HS kit (SPC-0369) used :	
	Clean stick	• Gloves	• Goggles



 
- Be sure to wear the attached goggles and gloves for works when the maintenance of the capping station is performed. If not, ink may be caught in your eyes during the works.
- Do not move the carriage out of the capping station by hand.
- When it is desirable to move the carriage, press the ST.MAINTE key to execute the carriage-out. ( P.4-5 the step 1 2)

### Cleaning the wiper and ink caps

It is recommended to perform cleaning frequently in order to maintain the high image quality and keep the machine in good condition.



- When SS21 ink is used, the ink sticks around the wiper easily. Clean the wiper and surroundings about twice in a week (it varies, depending on frequency of use of the machine.)
- Replace the wiper with a new one if it is badly soiled or curled. ( P.4-7)
- Be careful not to leave lint of the clean stick. Lint may cause printing failure.



2

Press the **ENTER** key.




• The carriage moves onto the platen.

3

## Open the front cover then remove the wiper.

 Pull out the wiper by holding the projections at both ends.

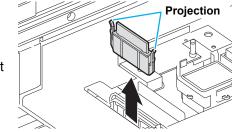


< e n t >



#### Clean the wiper and bracket.


• Wipe ink sticking to the wiper and the bracket off with a clean stick dipped in the cleaning solution.

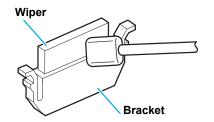



#### Clean the wiper slider.


 Wipe ink sticking to the wiper slider off with a clean stick dipped in the cleaning solution.

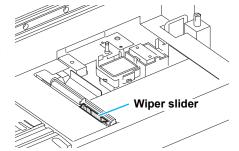



#### Set the wiper at the original position.


· Insert the wiper by holding both ends of the wiper.

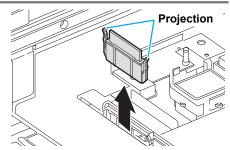



#### Clean the cap rubber and wiper cover.


 Wipe ink sticking to the cap rubber and the wiper cover off with a clean stick dipped in the cleaning solution.

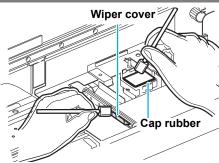



## Close the front cover then press the <a>ENTER</a> key.

  After performing the initial operation, the machine returns to LOCAL mode.



### Performing the station maintenance without ST.MAINTE key

ST.MAINTENANCE is selectable from the local mode by using the FUNCTION key, not by pressing the ST.MAINTE key.

Press the FUNCTION key in the local mode.

Select [MAINTE-NANCE] by pressing the keys.

#### Press the **ENTER** key twice.

 It becomes the same condition as the ST.MAINTE key is pressed from the local mode.

### Replacing the wiper

The wiper is consumable. When the display indicates that it is necessary to replace the wiper, immediately replace the wiper with a new one. Also, wipe ink sticking to the lower surface of the slider off.

<LOCAL.1> [#01]
Replace a WIPER<MNT>



- The wiper to be newly installed is available as an option. Order it from your dealer or a sales office of MIMAKI.
- Do not select [WIPER EXCHANGE] at any time other than when the wiper is to be replaced. Once it is selected, the number of wiper operations that is counted in the machine will be reset.



Press the ST.MAINTE key in the local mode.



2

Select [WIPER EXCHANGE] by pressing the keys.



3

Press the **ENTER** key.


• The carriage moves onto the platen.





Open the front cover then remove the wiper.


• Pull out the wiper by holding the projections at both ends.

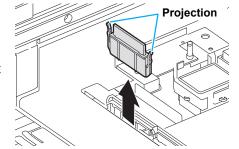



#### Insert a new wiper.

 Install the wiper by holding the projections at both ends.

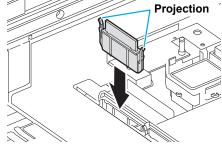



## Close the front cover then press the ENTER key.

 After performing the initial operation, the machine returns to LOCAL mode.



 
\*Being Initialized\* PLEASE WAIT

 
### **Prior to Pump tube washing**

Prior to washing of the pump tube, it is required that the cleaning solution has been filled within the tube.



 When the following messages are indicated, check the waste ink tank, and then operate it, referring to P.4-42 "If Waste ink tank confirming message is displayed" according to the situation.





#### **Filling Cleaning solution**



#### **Select [HD.MAINTENANCE] of the maintenance menu.**

- (1) Press the FUNCTION key in the local mode.
- (2) Select [MAINTENANCE] by pressing the keys then press the ENTER key.
- (3) Select [HD.MAINTENANCE] by pressing the keys.
- (4) Press the ENTER key.



Select [MaintWashLiquid] by pressing the keys.



3

 
Press the **ENTER** key.





Press the **ENTER** key.

 Proceed to the step 6 when a normal cartridge has been set.



#### When "END" is indicated:

 
The cleaning solution is not left. Replace it with a new cleaning solution cartridge.

When an abnormal condition is indicated:

The cartridge that has been set is not a cleaning solution cartridge.



Set a cleaning solution cartridge.





Press the **ENTER** key.

• Filling of the cleaning solution is started.



#### **Discharging Cleaning solution**

Perform the following operations to discharge the cleaning solution within the tube.



#### Select [HD.MAINTENANCE] of the maintenance menu.

- (1) Press the (FUNCTION) key in the local mode.
- (2) Select [MAINTENANCE] by pressing the keys then press the ENTER key.
- (3) Select [HD.MAINTENANCE] by pressing the keys.
- (4) Press the ENTER key.



## Select [MaintWashLiquid] by pressing the keys.



3

Press the **ENTER** key.



4

 
Select [DISCHARGE] by pressing the keys.



5

#### Press the **ENTER** key.

 Proceed to the step 7 when the cartridge has been removed.



6

#### Remove the cartridge.

MaintWashLiquid DISCHARGE START : ent



#### Press the **ENTER** key.

ENTER

• Discharging of the cleaning solution is started.

### Washing of Head nozzle

Perform cleaning of the nozzles in the heads to prevent them being clogged with coagulated ink.

Make sure the followings in advance.

#### Is [NEAR END] or [INK END] displayed?

- The cleaning solution or ink is absorbed in washing.
   At this time, washing is unable to operate if the ink end or near-end is detected.
- Replace it with a cartridge undetected for the ink end or the like.



Press the ST.MAINTE key in the local mode.



2

Select [NOZZLE WASH] by pressing the keys.



3

Press the **ENTER** key.


• The carriage moves onto the platen.





#### Clean the wiper and the bracket.

- (1) Open the front cover then pull out it by holding projections at both ends of the wiper.
- (2) Clean it with a clean stick dipped in the cleaning solution. (Aqueous ink: SPC-0137, Solvent ink: SPC-0369)
- (3) Insert it in the original position by holding the projections at both ends of the wiper.

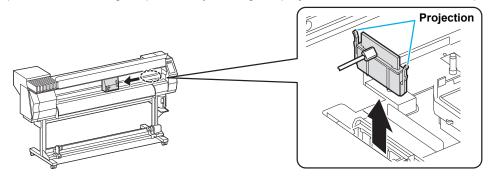

5


Press the ENTER key.





#### Press the (FUNCTION) key then fill the cap with the cleaning solution.

- The cleaning solution is applied by drops when the (FUNCTION) is pressed.
- When the FUNCTION is pressed again, drops stop.
- Repeat the drops several times to fill the cap with the cleaning solution just before the solution overflows from the cap.

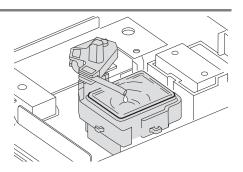



#### Close the front cover then press the ENTER key.



ST.MAINTENANCE LEAVING TIME 1 min



#### Set the duration for leaving the cleaning solution by pressing the keys.

 


• Set value: 1 to 99 minutes (Unit: minute)




#### Press the **ENTER** key.





· It returns to the local mode after the duration.

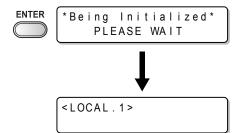



- When nozzle missing is not cleared even after this washing is carried out several times, execute "When Nozzle clogged after cleaning" (@P.4-18) and "DISCHARGE & WASH" (@P.4-19). Contact a distributor or our sales office (a service call) unless the missing is cleared even after the above.
- Perform the followings unless the cleaning solution has been filled in the machine.
  - (1) Perform the operations up to the step 5.
  - (2) Fill the cap with the cleaning solution by using a syringe.
  - (3) Perform the operations from the step 7.

### Cleaning the ink discharge passage (PUMP TUBE WASH)

Perform washing of the ink discharge passage (the pump tube) periodically to prevent ink from clogging due to the coagulation of ink within the ink discharge passage.



 When the following messages are indicated, check the waste ink tank, and then operate it, referring to P.4-42 "If Waste ink tank confirming message is displayed" according to the situation.

> Confirm a wastetank Continue< >Exchange

Confirm a wastetank Exchange : ent

1

Press the ST.MAINTE key in the local mode.



2

Select [PUMP TUBE WASH] by pressing the keys.



3


Press the **ENTER** key.



- The carriage moves onto the platen.
- Repeat the idle absorbing operation (Absorbing for 5 seconds and interrupting for 10 seconds) until washing works are completed.




Open the front cover.

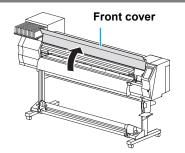

5

## Press the (FUNCTION) key to fill the cap with the cleaning solution.


- The cleaning solution is applied by drops when the <u>FUNCTION</u> is pressed.
- When the FUNCTION is pressed again, drops stop.
- During the idle absorbing is interrupted, repeat the drops several times to fill the cap with the cleaning solution just before the solution overflows from the cap.

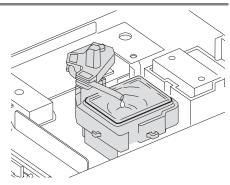



## Close the front cover and press the ENTER key.

 • It returns to the local mode after the idle absorbing is performed for 30 seconds.





- Perform the followings unless the cleaning solution has been filled in the machine.
  - (1) Perform the operations until the step 4.
  - (2) Fill the cap with the cleaning solution by using a syringe.
  - (3) Perform the operations from the step 6.

### When not using for a long term (CUSTODY WASH)

When the operation of the machine is to be suspended for a week or more, use the [CUSTODY WASH] function to clean the nozzles in the heads and the ink discharge passage.

After the cleaning, store the machine properly.

### Check the followings in advance.

 
#### Is [NEAR END] or [NEAR END] displayed?

- The cleaning solution or ink is absorbed in washing.
   At this time, washing is unable to operate if the ink end or near-end is detected.
- Replace it with a cartridge undetected for the ink end or the like.



 When the following messages are indicated, check the waste ink tank, and then operate it, referring to P.4-42 "If Waste ink tank confirming message is displayed" according to the situation.

> Confirm a wastetank Continue< >Exchange



1

Press the ST.MAINTE key in the local mode.



2

Select [CUSTODY WASH] by pressing the keys.



3

Press the **ENTER** key.


The carriage moves onto the platen.





#### Clean the wiper and the bracket.

- (1) Open the front cover then pull out it by holding projections at both ends of the wiper.
- (2) Clean it with a clean stick dipped in the cleaning solution. (Aqueous ink : SPC-0137, Solvent ink : SPC-0369)
- (3) Insert it in the original position by holding the projections at both ends of the wiper.

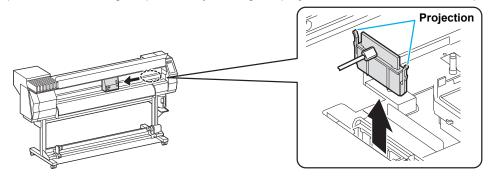




Press the **ENTER** key.





## Press the FUNCTION key to fill the cap with the cleaning solution.

- The cleaning solution is applied by drops when the FUNCTION is pressed.
- When the **FUNCTION** is pressed again, drops stop.
- Repeat the drops several times to fill the cap with the cleaning solution just before the solution overflows from the cap.

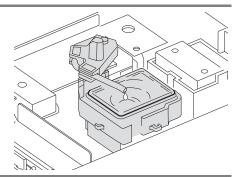



Close the front cover and press the ENTER key.





Set the duration for leaving the cleaning solution by pressing the keys.



• Set value : 1 to 99 minutes (Unit: minute)



#### Press the **ENTER** key.

- Perform the nozzle cleaning.
- On completion of the nozzle cleaning, the head moves to above the platen.



\*Being Initialized\*
PLEASE WAIT



#### Open the front cover.



#### Press the FUNCTION key to fill the cap with the cleaning solution.

- The cleaning solution is applied to the cap by drops when the FUNCTION is pressed.
- When the FUNCTION is pressed again, drops stop.
- During the idle absorbing is interrupted, repeat the drops several times to fill the cap with the cleaning solution just before the solution overflows from the cap.

## 12

## Close the front cover and press the ENTER key.

It returns to the local mode after the initial operation.



<LOCAL.1>

### Cleaning heads and surroundings parts

Take great care, especially during cleaning, not to damage the heads, which employ very precise mechanisms. Using a clean stuck, rub off the gelatinous ink that may be adhering to the lower part of the slider and surrounding parts of the heads. In doing so, never rub the nozzle part of the heads.

Tools required for cleaning • Clean stick • Gloves • Goggles



- Be sure to wear the attached goggles and gloves for works when cleaning is performed. If not, ink may be caught in your eyes during the works.
- An organic solvent is used in ink. Wash your eyes and skins with plenty water immediately when you get ink on skins or in eyes.




#### Select [CR.MAINTENANCE] of the maintenance menu.

- (1) Press the (FUNCTION) key in the local mode.
- (2) Select [MAINTENANCE] by pressing the keys then press the ENTER key.
- (3) Select [CR.MAINTENANCE] by pressing the keys then press the ENTER key.
- (4) Press the ENTER key.
  - The carriage moves to the left end of the machine body.

## 2


#### Open the maintenance cover.

- (1) Turn four screws that fix the maintenance cover to the left, and remove them.
- (2) Remove the maintenance cover.
- If the maintenance cover is hard to remove, use the supplied screwdriver.

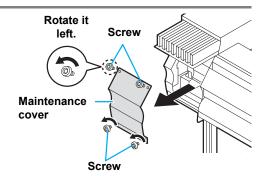

3

#### Wipe ink sticking to the side of the head off with a clean stick.

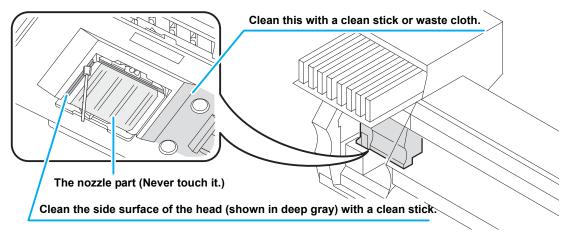



Press the **ENTER** key after the cleaning.



Close a cover



Close the maintenance cover then press the **ENTER** key.

• It returns to the local mode after the initial operation.





• When SS21 ink is used, the ink sticks around the wiper easily. Clean the wiper and surroundings about twice in a week (it varies, depending on frequency of use of machine.)

## When Nozzle clogged after cleaning

When the nozzle clogging is not improved even after the head cleaning( P.2-24) or the head nozzle washing ( P.4-10), execute two functions as follows.

FILL UP INK • Supplies ink to correct nozzle clogging.	
DISCHARGE&WASH	• Washes the heads, dampers and ink tubes cleaning solution cartridge (option). ( P.4-19)

### Filling up ink



 
#### Select [HD.MAINTENANCE] of the maintenance menu.

- (1) Press the FUNCTION key in the local mode.
- (2) Select [MAINTENANCE] by pressing the keys then press the ENTER key.
- (3) Select [HD.MAINTENANCE] by pressing the keys.
- (4) Press the ENTER key.

2

#### Press the **ENTER** key.

- · Ink filling is automatically started.
- It returns to the display on the right when the ink filling is completed.



3

Press the END key several times to end.


### **DISCHARGE & WASH**

 Discharge ink from the heads, dampers and ink tubes, and then wash them.



- To use this function, the dedicated cleaning solution ( P.4-2"Notes on cleaning solution") is required. In addition, before performing the work, check whether ink to be filled again remains or not.
- When the following messages are indicated, check the waste ink tank, and then operate it, referring to P.4-42 "If Waste ink tank confirming message is displayed" according to the situation.

Confirm a wastetank Continue< >Exchange





#### Select [HD.MAINTENANCE] of the maintenance menu.

- (1) Press the FUNCTION key in the local mode.
- (2) Select [MAINTENANCE] by pressing the keys then press the ENTER key.
- (3) Select [HD.MAINTENANCE] by pressing the keys.
- (4) Press the ENTER key.
- Select [DISCHARGE&WASH] by pressing the keys.



3

 
Press the **ENTER** key.





#### Remove the ink cartridge.


- The ink left in the head or tube is discharged to the waste ink tank.
- The display on the right is displayed after discharging.



5

### Set the cleaning solution cartridge to the ink station.

 
- Absorbing of the cleaning solution is started.
- The display on the right is displayed after absorbing.





## Remove the cleaning solution cartridge.


- The ink left in the head or tube is discharged to the waste ink tank.
- The right display on the right is displayed after discharging.

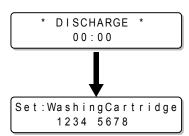



## Set the cleaning solution cartridge to the ink station.

 
- · Absorbing of the cleaning solution is started.
- The display on the right is displayed after absorbing.





## Remove the cleaning solution cartridge.

- The ink left in the head or tube is discharged to the waste ink tank.
- The right display on the right is displayed after discharging.

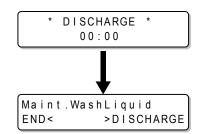

- Check the condition of waste ink tank, and then select whether the washing is terminated or restarted.
- When the washing is restarted, return to the step 5 by pressing the \( \bullet \) key.



Press the key.





Press the END key several times to end.

### Initial ink fill up

Perform the initial fill of ink by the following operations after [DISCHARGE & WASH].



#### Turn the power of the machine on.

• When the power is turned on, the firmware version is displayed following [BOOT].

ВООТ

JV33-160 V\*.\*\*

Please Wait

2

 
## Select the ink type to be filled by pressing the keys.

 
• To check the state of the cartridge, press the REMOTE key. ( P.5-5)



3

## Select the ink set (a filling color) to be filled by pressing the keys.









Press the **ENTER** key.






#### Set an ink cartridge to the ink station.

Set:ES3-4color Ink --C- Y-KK

When the ink cartridge is set, filling is automatically started.

FILLING UP NOW. 00:00

• Upon the ink station, the inserting location is allocated for each ink color. Set the ink cartridge according to the cartridge label under the ink station.

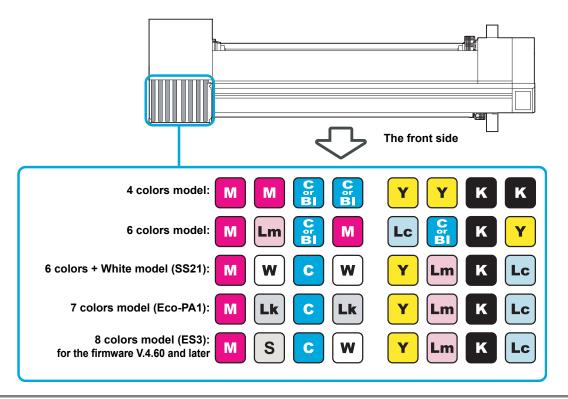



## It returns to the local mode when the ink filling is completed.





• If blurring or missing is found in printing after initial fill of ink, "Head Cleaning"(@ P.2-24) or "Filling up ink"(@ P.4-18).

### If ink is not filled in step 5

If [INK NEAR END], [INK END] or other ink errors occur, it does not start ink filling.


#### If ink filling is not started in step 5

- (1) Press the END key to go back to the display of step 2.
- (2) Press the REMOTE key to check the state of the ink cartridge.
- (3) Solve an ink error or others (P.5-5), operate from step 2 again.

## If the Positions of Dots Shift...

When the thickness of the media, the height of the head, or the type of the ink used is changed, follow the steps below and adjust the ink drop position for Bi-directional (Bi) printing to print properly.

#### **Example of Pattern printing**

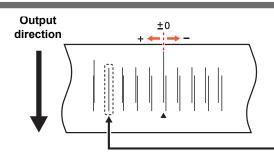

The dots at the fourth position counted from the zero position in the positive direction form a straight line. In this case, the dot position correction value is 4.0.

1

#### Set a media, and then set the printing origin. ( P.2-6)

• For printing the pattern, a larger media than 500mm width x 400mm feeding is required.

2

#### Select [DROP POSITION] of the maintenance menu.

- (1) Press the FUNCTION key in the local mode.
- (2) Select [MAINTENANCE] by pressing the keys then press the ENTER key.
- (3) Select [DROP POSITION] by pressing the keys.
- (4) Press the ENTER key.
- 3

Press the **ENTER** key to start the pattern printing.



• Plural pattern types are printed. (in order of printed, called as Pattern 1, 2, 3...)

4

## Correct the dot position of the pattern 1 by pressing the keys.



- Correction value : -40 to 40
- Check the test pattern. A correction value is at the position where an outward way and a return way are on one line.
- If the correction value is not between -40 and 40, adjust the height of head then redo the operations from the step 2.

5

Press the **ENTER** key.



4



As the same as the step 4, correct the dot position of the from pattern 2 then press the **ENTER** key.



Press the END key several times to end.

### Preventing nozzle clogging while power-off

Even while the power switch is off, the machine starts periodically and executes various functions to prevent nozzle clogging. [SLEEP SETUP] includes the following functions.

Function name	Descriptions
REFRESH	Set the interval at which refreshing operation is to be performed periodically.
PUMP TUBE WASH	Set the interval at which cleaning of the pump tubes is to be performed periodically.
CLEANING	Set the cleaning type and the interval at which cleaning operation is to be performed periodically.



 During the right message is displayed, the operation set in the sleep setting is not carried out. Perform the operations of P.4-43 if required.


Press the END key several times to end.



• When the power switch on the front of the machine is turned off, check the waste ink tank.

### Setting refreshing interval in Sleep mode

Set the interval at which the nozzles will eject a little volume of ink to prevent nozzle clogging.

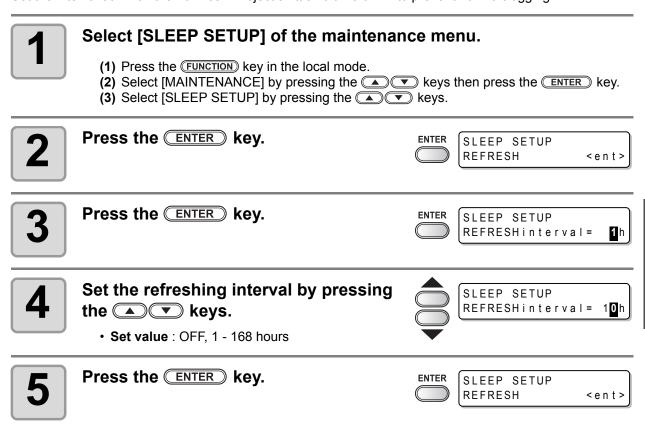

6

### Setting tube washing interval in Sleep mode

Set the interval at which cleaning of the caps and pump tubes is to be performed using the cleaning solution during sleep mode.



#### Select [SLEEP SETUP] of the maintenance menu.

- (1) Press the (FUNCTION) key in the local mode.
- (2) Select [MAINTENANCE] by pressing the keys then press the ENTER key.
- (3) Select [SLEEP SETUP] by pressing the keys.
- (4) Press the ENTER key.



Select [PUMP TUBE WASH] by pressing the keys.



3

Press the **ENTER** key.





Set the tube washing interval by pressing the keys.



• Set value: OFF, 1 - 168 hours



Press the **ENTER** key.





Press the **END** key several times to end.



• When the cleaning solution has not been filled in the machine, the right display is displayed at the step 5. Fill the cleaning solution ( P.4-8) then redo the operations from the step 1.

\*\* Washing Liquid \*\*

### Setting cleaning interval in Sleep mode

This function is to be executed instead of TUBE WASH after the cleaning solution has been used up. Set the cleaning type and the interval at which cleaning operation is to be performed during sleep mode.



#### Select [SLEEP SETUP] of the maintenance menu.

- (1) Press the FUNCTION key in the local mode.
- (2) Select [MAINTENANCE] by pressing the \(\bigsim\) keys then press the \(\bigsim\) key.
- (3) Select [SLEEP SETUP] by pressing the keys.
- (4) Press the ENTER key.



#### Select [CLEANING] by pressing the keys.



Press the ENTER key.





Set the cleaning interval by pressing the keys.



• Set value : OFF, 1 - 168 hours



Press the (FUNCTION) key.

FUNCTION SLEEP SETUP NORMAL CLEAN. TYPE · The selection display of the cleaning type is displayed.



Select the cleaning type by pressing the keys.



• Set value : NORMAL, SOFT, HARD



Press the **ENTER** key.





Press the END key several times to end.

### **Setting Routine operations**

Troubles such as ink clogging or the like are preventable by performing each periodical operation in the condition of the power ON. (Initial setting) The [ROUTINE SETUP] function is available for the following items:

Function name	Descriptions
ROUTINE WIPING	While printing, the nozzle surface is wiped with a certain interval to remove dew drops.  It is possible to set [SCAN COUNT] and [TEMP difference].
REFRESH	Set the interval at which refreshing operation is to be performed periodically in Standby mode.
PUMP TUBE WASH	Set the interval at which cleaning of the pump tubes is to be performed periodically in Standby mode.
CLEANING	Set the cleaning type and the interval at which cleaning operation is to be performed periodically in Standby mode.



 During the right message is displayed, the operation set in the periodic setting is not carried out except [ROUTINE WIPING].
 Perform the operations of P.4-43 if required.

<LOCAL.1> [#01]
Check waste ink<MNT>

SCAN COUNT

<ent>

• When the power switch on the front of the machine is turned off, check the waste ink tank.

### Setting Routine wiping operations in Standby mode

Ink dew condensation on the nozzle surface is preventable by performing the wiping operation automatically when the number of scans reaches the set value in printing.

In the following cases, ink splashing, ink dropping or nozzle missing may occur on printing.

It is recommended to maintain the comfortable printing condition at all times by setting the periodic wiping.

- When the print heater has been set at high temperature.
- When the printing ink amount has been set plenty (High density, Double printing, etc.)

 
The cause of these phenomena is such that the ink of the print is heated by the print heater immediately after printing and evaporated solvent may condense on the nozzle face.

The greater the difference between the setting temperature of the print heater and the ambient temperature is, the more easily ink can condense.



#### Select [ROUTINE SETUP] of the maintenance menu.


- (1) Press the (FUNCTION) key in the local mode.
- (2) Select [MAINTENANCE] by pressing the keys then press the ENTER key.
- (3) Select [ROUTINE SETUP] by pressing the keys.



**= 5**0

= 40

< e n t >

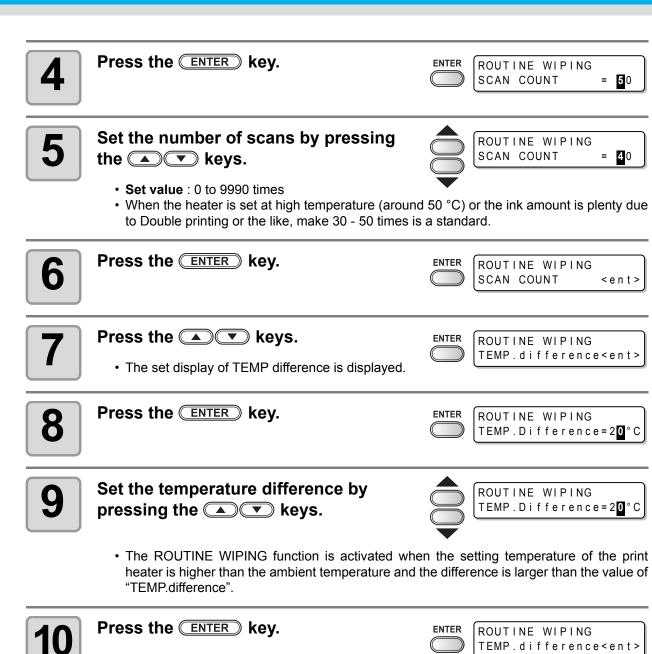

Press the END key several times to



end.

### Setting Refreshing interval in Standby mode

Set the interval at which refreshing operation is to be performed periodically.



#### Select [ROUTINE SETUP] of the maintenance menu.

- (1) Press the FUNCTION key in the local mode.
- (2) Select [MAINTENANCE] by pressing the keys then press the ENTER key.
- (3) Select [ROUTINE SETUP] by pressing the keys.
- (4) Press the ENTER key.



## Select [REFRESH] by pressing the keys.



3

Press the **ENTER** key.



4

Set the refreshing interval by pressing the keys.



• Set value : OFF, 1 - 168 hours



Press the **ENTER** key.



6

 
Press the END key several times to end.

#### Setting Pump tube washing interval in Standby mode

Perform the pump tube washing periodically to prevent ink from clogging due to the coagulation of ink, which occurs within the tube.



This function is operable only under the condition that the machine is left in the following displays.






#### Select [ROUTINE SETUP] of the maintenance menu.

 - (1) Press the (FUNCTION) key in the local mode.
- (2) Select [MAINTENANCE] by pressing the keys then press the ENTER key.
- (3) Select [ROUTINE SETUP] by pressing the keys.
- (4) Press the ENTER key.





Press the ENTER key.

 


4

Set the tube washing interval by pressing the keys.



• Set value : OFF, 1 - 168 hours








Press the END key several times to end.



 • When the cleaning solution has not been filled in the machine, the right display is displayed at the step 5. Fill the cleaning solution ( P.4-8) then redo the operations from the step 1.




#### **Setting Cleaning interval in Standby mode**

This function is to be executed instead of TUBE WASH after the cleaning solution has been used up. Set the cleaning type and the intervals at which cleaning operation is to be performed.



 
- This function does not operate when the error message relating to ink, such as **[NEAR END]** or **[INK END]**, is displayed.
- While this function is being executed, the display indicates the progress of head cleaning and no key operation is available.(P.2-24 "Head Cleaning")
- This function operates only when the machine is left with the display as shown below:





#### Select [ROUTINE SETUP] of the maintenance menu.

 - (1) Press the **FUNCTION** key in the local mode.
- (2) Select [MAINTENANCE] by pressing the keys then press the ENTER key.
- (3) Select [ROUTINE SETUP] by pressing the keys.
- (4) Press the ENTER key.





Press the ENTER key.





Set the cleaning interval by pressing the keys.



• Set value ÅFOFF, 1 - 168 hours



Press the FUNCTION key.

The selection display of the cleaning type is displayed.





Select the cleaning type by pressing the keys.



• Set value : NORMAL, SOFT, HARD



Press the **ENTER** key.



8

### Other maintenance functions

#### Changing the warning time of wiper replacement

The wiper is consumable. The heads are easily soiled in a dusty environment.

The heads cannot be cleaned adequately with a curled or worn wiper.

Setting the wiper level so that a warning for the wiper replacement period is indicated earlier than the standard depending on the operating environment.




10/10	Displays the wiper replacement warning when wiping has been performed the standard number of times. (Initial value)
9/10	Displays the wiper replacement warning when wiping has been performed nine tenths of the standard number of times.
8/10	Displays the wiper replacement warning when wiping has been performed eight tenths of the standard number of times.
1/10	Displays the wiper replacement warning when wiping has been performed one tenth of the standard number of times.



#### Select [WIPER LEVEL] of the maintenance menu.

- (1) Press the Function key in the local mode.
- (2) Select [MAINTENANCE] by pressing the keys then press the ENTER key.
- (3) Select [WIPER LEVEL] by pressing the keys.

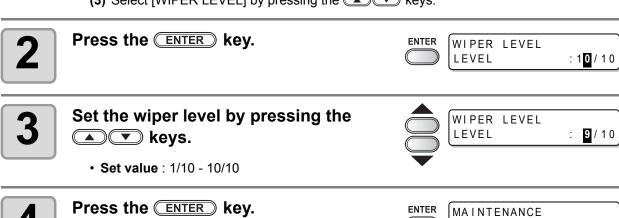



#### Setting the media remaining display

Set the media remaining amount display.

When the media remaining amount display is turned to "ON"	The media remaining amount is displayed in the remote mode. (The print length is displayed when a leaf media is used.)
When the media remaining amount display is turned to "OFF"	The media remaining amount is not displayed in the remote mode.



- The media feed during printing or with any of the JOG keys is reflected on media remaining amount.
- Input the media length (initial value of remaining amount) when the roll media is detected.
- The setting performed in this section is not effective unless the media detection is performed after the setting.



#### Select [MEDIA RESIDUAL] of the maintenance menu.

- (1) Press the FUNCTION key in the local mode.
- (2) Select [MAINTENANCE] by pressing the keys then press the ENTER key.
- (3) Select [MEDIA RESIDUAL] by pressing the keys.
- (4) Press the ENTER key.
- 2

Select ON/OFF by pressing the keys.



3

Press the **ENTER** key.





#### Print the media remaining amount

 
You can print the current media remaining amount.



- Set [MEDIA RESIDUAL] to "ON". ( P.4-35)
- When changing the media, it is recommended to print the remaining amount to the currently used media. If you print the media remaining amount in advance, for using the changed media, you can enter the correct value in the screen for entering media remaining amount after detecting the media ( P.2-12).



## In the local mode, press the AVA keys.




· It enters into the origin setting mode.

# 2
 
### Set a light point of the LED pointer to the changing position by pressing the keys.

- Select the carriage and media, moving the point with the keys.
- When not changing the origin, proceed to the Step 3 without pressing
   A, Y, 4 and key.
- When pressing ENTER key here, the origin will be changed and it will return to the local mode.





#### Press the **REMOTE** key.

REMOTE)

MEDIA RESIDUAL DRAW <ENT>

- When pressing , , , and key, the screen will return to the Step 2 screen.
- When pressing END key, it will return to the local mode.



#### Press the **ENTER** key.

- Start printing of the media remaining amount.
- When the printing completes, it will return to the local mode.



• When printing after changing the origin, the origin set here will be valid when printing data subsequently.

#### **White Ink Maintenance Function**

If SS21 white ink is left unused for a while, the color may become uneven by clogging of the nozzle or settling of pigment.

If the color does not improved by the head cleaning ( P.2-24), use this maintenance function. (This function is valid when the firmware Ver.4.10 or later is installed and SS21 white ink is filled.)

White ink maintenance function has three levels of maintenance. Select the maintenance level depending on the condition.

	Performs maintenance in the following order:
LEVEL1	(1)Performs the automatic nozzle cleaning function. *1 (2)Performs cleaning. *2
	Performs maintenance in the following order:
LEVEL2	(1)Performs the automatic nozzle cleaning function. *1 (2)Fills the white ink. (3)Performs cleaning. *2
	Performs maintenance in the following order:
LEVEL3	<ul><li>(1)Performs the automatic nozzle cleaning function.*1</li><li>(2)Discharges the white ink remaining in the head or in the tube.</li><li>(3)Fills the white ink.</li><li>(4)Performs cleaning.*2</li></ul>

- \*1. The operation is the same as the CUSTODY WASH of ST. MAINTENANCE. (Leaving time: three minutes)
- \*2. The operation equivalent of "Hard cleaning" of the head cleaning is performed on each color. (
  P.2-24).



- According to the level changing from 1 to 3, the amount of consumption becomes more. Use Level 2 and 3 when the status is not improved even if you perform Level 1 maintenance.
- When the machine is left unused for a long time, it is recommended to perform LEVEL1 of this function about every other week.
- The other cautions of this function or the white ink are included in the pack of the cartridge. Read it carefully before use.



#### Select [WHITE MAINTE.] of the maintenance menu.

- (1) Press the (FUNCTION) key in the local mode.
- (2) Select [MAINTENANCE] by pressing the keys then press the ENTER key.
- (3) Select [WHITE MAINTE.] by pressing the keys.

2

Press the **ENTER** key.



3

Select the maintenance level by pressing the key.



- Set value : LEVEL1 to LEVEL3
- This describes the operation when LEVEL3 is set.



Press the **ENTER** key.





### Slowly shake the removed white ink cartridge more than twenty times right and left.

 To prevent ink from leaking when you shake the cartridge, wear gloves and firmly cover the A part of the upper surface of the cartridge and the B part of the bottom surface of the cartridge with paper towels. Then, shake it more than twenty times right and left so that ink flows inside the cartridge.




- If you shake it too strong, the pack inside may be damaged and it may cause ink leakage. Therefore, perform this carefully.
- If the remaining amount of ink is less, ink in the cartridge cannot be beaten enough. Tilt the cartridge until it becomes vertical.



A part (the place to stick a needle)



B part (the slot on the bottom)

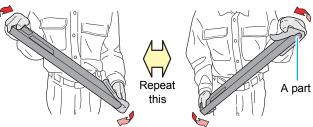

Cover with paper towel firmly and shake ink slowly



#### Set the white ink cartridge, and press the ENTER key.

- · Nozzle cleaning starts.
- The operation after nozzle cleaning varies depending on the LEVEL set on the Step 3.
- LEVEL1 : Go to the Step 10.
   LEVEL2 : Go to the Step 9.
   LEVEL3 : Go to the Step 7.

The selected maintenance level





#### Remove the white ink cartridge.

- When the white ink cartridge is removed, the white ink remaining in the machine is discharged.
- After discharging, the screen shown on the right appears.

Lv.3 > DISCHARGE 01:30

SET:INK CARTRIDGE \_W\_W\_\_\_\_



#### Set the white ink cartridge.



#### White ink filling starts.

Filling time of LEVEL2 is different from LEVEL3.
 (When LEVEL2 is selected, filling time becomes shorter.)

Lv.3 > FILLING UP 00:30



#### Perform cleaning.

Lv.3 > CLEANING 02:00

#### To use sublimation transfer ink with more stable quality

When you print with sublimation transfer ink after you have left this machine, color may change due to color material settling.

By shaking the ink cartridge or performing ink filling periodically, the status will be improved. (Before performing ink filling, it is necessary to shake the ink cartridge.)

In the firmware version 5.00 and later, when the time to shake the ink cartridge or to perform ink filling has come, a message (warning preventing color material settling) is displayed to inform you of it.

 
■ When the time to shake the ink cartridge has come (When you use MBIS, it is not displayed.)







When the time to perform ink filling





• This message is displayed when the machine is in the local mode or when you switch it from the remote mode to the local mode.


This does not terminate printing or interfere with continue printing, however, as this is not displayed during remote mode, it is recommended to switch to the local mode by pressing the REMOTE key between printings.

#### How to shake the ink cartridge

To prevent ink from leaking when you shake the cartridge, wear gloves and firmly cover the A part of the upper surface of the cartridge and the B part of the bottom surface of the cartridge with paper towels. Then, shake it more than twenty times right and left so that ink flows inside the cartridge.



- If you shake it too strong, the pack inside may be damaged and it may cause ink leakage. Therefore, perform this carefully.
- If the remaining amount of ink is less, ink in the cartridge cannot be beaten enough. Tilt the cartridge until it becomes vertical.

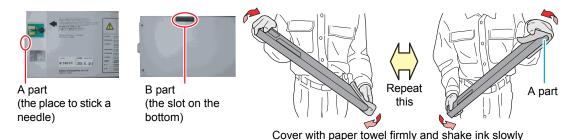



- If you shake the ink cartridge too strong, it may damage the inside pack and it may cause ink leakage. Be careful about it.
- When the cartridge is new, shake it before taking it out of bag.
- When the cartridge is in-use, be sure to wear the gloves, press waste close to the inserted side and shake it.
- If the remaining amount of ink is less, tilt it until it becomes vertical, as you cannot shake it enough in some cases.



- When you use MBIS, do not shake the eco case and the intermediate cartridge.
- Do not insert and pull out the intermediate cartridge as much as possible. It may cause ink leakage.

#### Set the interval to display the warning message

Depending on the ambient temperature, set the interval to display the warning preventing color material settling.



- When you use sublimation transfer ink Sb52 or Sb53, the display interval of the message is set to 72 hours in the initial condition.
- When you use sublimation transfer ink Sb51 or Sb60, this function is disabled (OFF) in the initial condition.




#### Select [ROUTINE SETUP] of the maintenance menu.

- (1) Press the FUNCTION key in LOCAL.
- (2) Press to select [MAINTENANCE] and press the ENTER key.
- (3) Press to select [ROUTINE SETUP].
- (4) Press the ENTER key.



Press the key to select [Sub-INK WARNING].



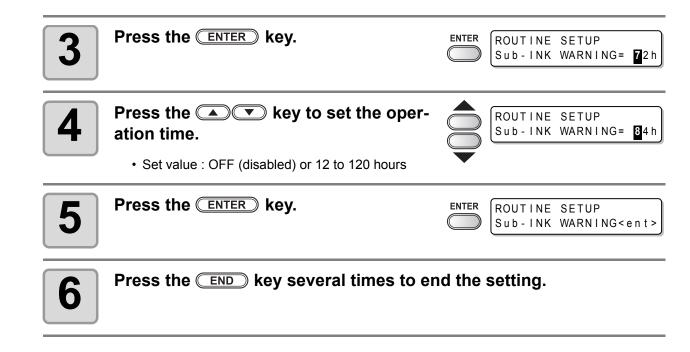

#### Note on head height adjustment

When you use sublimation transfer ink, if you make the head height 5mm (H range/ thick), it may affect the drawing quality.

It is recommended to use with making head height 4mm (H range/ thin) or L range.



 If the head height is 5mm, the right message may be displayed at starting of drawing or at turning on the power supply.

NOT RECOMMENDED !! CHK. HEAD HEIGHT:ent

When you press the **ENTER** key, the message goes out.

- You can check the current head height with the procedures below:
- (1) Press the ENTER key in LOCAL.
- (2) Press the ENTER key several times to display "Head height" and then check.

"HEAD HEIGHT:Thin" = The head height is 2mm.

"HEAD HEIGHT:Thick" = The head height is 3mm.

"HEAD HEIGHT:Thin+" = The head height is 4mm.

"HEAD HEIGHT: Thick+" = The head height is 5mm.

- For the head height adjustment method, refer to Chapter 2 "Adjusting the head height" of the JV33 Series User Manual.
- Contact to our sales office for switching L range <-> H range by field person.

#### If Waste ink tank confirming message is displayed

Waste ink which was used for cleaning the heads and other parts, gathers in the waste ink tank. Upon the machine, the ink discharging amount is counted by accumulated counting then a message for suggesting the check is displayed when it reaches a certain amount.

#### If message is displayed when lnk filling or the like is executed

A message for suggesting to check the waste ink tank is displayed depending on the condition of the waste ink tank when the function such as ink filling, head cleaning, pump tube washing or the like is carried out.

When the waste ink tank is "Near-full"

The right message is displayed.





#### Check the condition of the waste ink tank.

#### When the waste ink tank is almost full

- (1) Replace the waste ink tank. ( P.4-44)
- (2) Select "Exchange" by pressing the ENTER key. (The ink discharging amount is reset.)

#### When the waste ink tank has room

- (1) Select "Continue" by pressing the key. (The ink discharging amount is not reset.)
- In this case, the message of P.4-43 "Check message in Local mode" is displayed when it returns to the local mode.
- When the waste ink tank is full

The right message is displayed.





#### Replace the waste ink tank (PP P.4-44) then press the ENTER key.

· The ink discharging amount is reset.



- Be sure to replace the waste ink tank ( P.4-44) if "Exchange" is selected by the operations above when the waste ink tank is "Near-full" or "Full". Waste ink may overflow the tank before the check message is displayed if the tank is not replaced and continuously used.
- Waste ink, which is discharged when [NOZZLE WASH], [PUMP TUBE WASH] and [CUS-TODY WASH] of [ST.MAINTENANCE] are performed, is not counted upon the machine. Be sure to check the condition of waste ink tank before or after the operations.

#### Check message in Local mode

The right message is displayed.

<LOCAL.1> [#01]
Check waste ink<MNT>



Check the waste ink tank, and then replace the waste ink tank ( P.4-44) if required.

#### When waste ink tank check message is not needed

The waste ink tank check message can be set not to be displayed.



#### Select [Waste Ink Warning] of the machine setup menu.

- (1) Press the (FUNCTION) key in the local mode.
- (2) Select [MACHINE SETUP] by pressing the keys then press the ENTER key.
- (3) Select [Waste Ink Warning] by pressing the keys.
- (4) Press the ENTER key.
- 2

Select "OFF" by pressing the keys.



3

Press the **ENTER** key.



4

Press the END key several times to end.



• The check message is not displayed when the waste ink tank warning is set to "OFF". Be sure to check the ink remaining amount within the waste ink tank visually.

#### Replacing waste ink tank


When the right message is displayed, check the waste ink tank immediately, and then replace it according to the condition.

<LOCAL.1> [#01]
Check waste ink<MNT>



#### Remove the waste ink tank guard.

- (1) Lift the waste ink tank guard then release a lock.
- (2) Open the waste ink tank guard frontward.

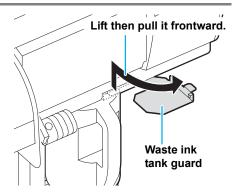


2

### Pull it frontward to remove by holding the waste ink tank handle.

• Put a cap on the waste ink tank removed.




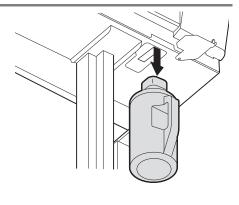

3

#### Replace the waste ink tank.


- (1) Prepare a new waste ink tank (SPC-0117).
- (2) Insert the waste ink tank by holding a handle of the tank.

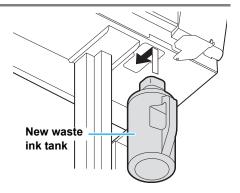



#### Close the waste ink tank guard.

• Hook the waste ink tank guard in a hole of the machine then lock it.

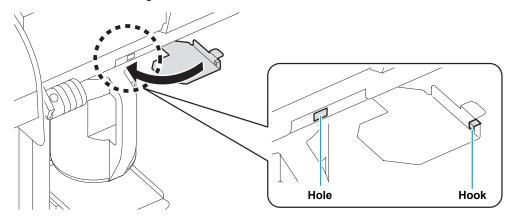



#### Select [Ink Tank Exchange] of the maintenance menu.

- (1) Press the FUNCTION key in the local mode.
- (2) Select [MAINTENANCE] by pressing the keys then press the ENTER key.
- (3) Select [Ink Tank Exchange] by pressing the keys.



#### Press the **ENTER** key.

 The ink discharging amount that is controlled by the machine is reset and the message is cancelled.





#### Changing the ink

Ink type or the color used can be changed.



 To change the ink set such as changing from "4-color model" to "6-color model" or "8-color model", the machine must be worked by our service engineer. Contact our service office or the distributor in your region.

#### Change the ink type

#### Change the ink color

To change the ink type used such as changing from ES3 ink to SS21 ink, work as follows.

To change the ink color used such as changing from "6-colors" to "6-colors + white" of SS21 ink, work as follows.

"Discharge" the remaining ink in the machine, and "Wash" the head or the tube.

See P.4-19 "DISCHARGE & WASH".

Fill ink.

See P.4-21 "Initial ink fill up".



Note for changing ink type

Changeable ink type is limited by the type of ink used. See the table on the right.

				Ink type to be changed
		PIG	Sublimation dye ink	SS21/ES3
Ink type used	PIG	- Changeable		Contact our service office or the distributor in your region.
	Sublimation dye ink			
		Not changeable		Changeable (However, when you wish to change to silver ink or white ink of ES3, the work by our service staff is required.)

#### Note for changing ink color

To replace white ink of SS21 from "SS21W" to "SS21W-2", follow the exhibit "Before using new White Ink (SS21-W2)" (D201848).

• When washing, use a special cleaning solution cartridge (sold separately). Wash with the proper cleaning solution cartridge for the used ink type.

Ink Type	Cleaning Solution Type	
Solvent ink	MILD SOLVENT Cleaning Solution Cartridge (SPC-0294)	
Aqueous pigment ink	Aqueous cleaning solution cartridge (SPC-0259)	
Sublimation dye ink	Aqueous cleaning solution carriage (or 6-6255)	

# Replacing the cutter blade

The cutter blade is consumable. When the cutter blade gets dull, replace it with a new one (SPA-0107).



- The blade is sharp. Be careful not to hurt yourself or anyone else.
- Keep the cutter blades away from the reach of children. Be sure to dispose of the worn-out cutter blades according to the applicable national and local laws and regulations.




• When replacing the cutter blade, it is recommended to place a sheet of paper under the cutter blade. This will help pick up the cutter blade if it drops.




Press the ST.MAINTE key then press the ENTER key.

• The carriage moves onto the platen.

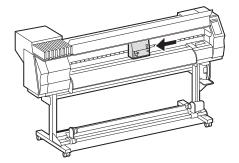

2


Open the front cover.

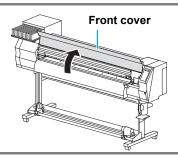


3

#### Replace the cutter unit by the carriage.


- (1) Loosen a screw of the cutter unit.
- (2) Remove the cutter unit.
- (3) Mount a new cutter unit.
- (4) Fasten the screw of the cutter unit to secure the cutter unit.

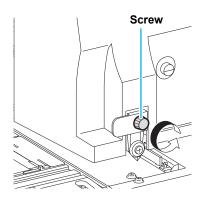

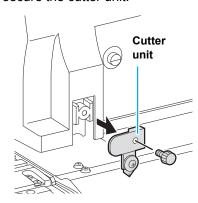



#### Close the front cover.

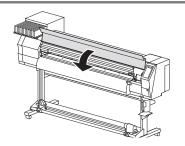

5

#### Press the **ENTER** key.



• The machine returns to LOCAL mode.

# CHAPTER 5 Troubleshooting



This section describes the corrective measures to be taken for a phenomenon suspected to be trouble and the procedures to clear the error number displayed on the LCD.


Troubleshooting	5-2
Power does not turn on	5-2
The machine does not start printing	5-2
Media get jammed / media is soiled	5-3
[HEAT] or [CONSTANT] LED does not light up	5-3
Image quality is poor	5-4
Nozzle is clogged	5-4
Ink cartridge warning appears	5-5
Warning / Error Messages	5-6
Warning messages	5-6
Error messages	
<u> </u>	

### **Troubleshooting**

Take appropriate actions as described below before taking the trouble as a failure. If still the problem is not solved after troubleshooting, contact your dealer or an office of MIMAKI.


#### Power does not turn on

In most cases, this is due to improper connection of the power cable for the machine or computer. Check that the power cable is connected properly.

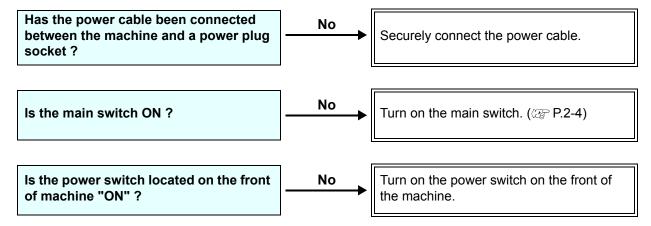


#### The machine does not start printing

This occurs when the data is not being transmitted to the machine properly. It can also occur when the printing function does not work properly or the media is not set correctly.

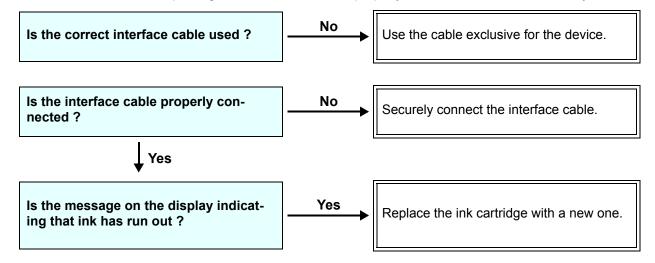


#### Media get jammed / media is soiled

Media jamming or stained media is considered to be due to the use of an unsuitable media or improper setting of media.

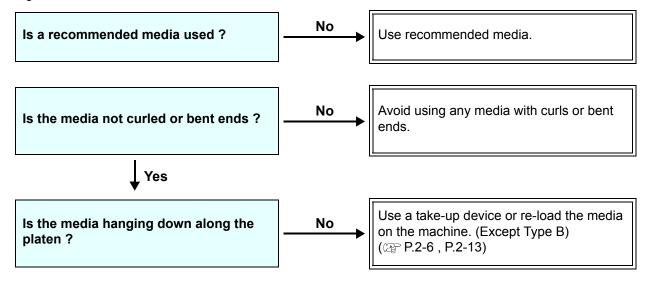

#### [HEAT] or [CONSTANT] LED does not light up

Check the basic operation.

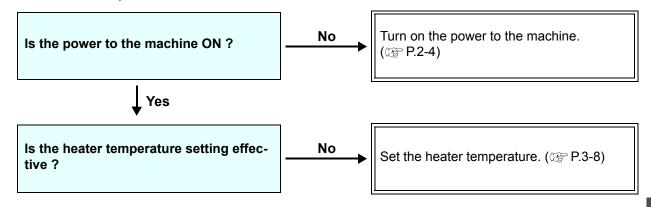

#### Image quality is poor

This section describes the corrective actions to be taken in case the image quality is not satisfactory. Take remedy for particular problems with image quality. If the remedy does not work, contact your dealer or an office of MIMAKI.

Phenomenon	Measures	
White lines / blur / dark stripes (in the direction of travel of the heads)	<ul> <li>(1) Execute the head cleaning. ( P.2-24)</li> <li>(2) Perform maintenance of the inside of the station. ( P.4-5)</li> <li>(3) Execute the [MEDIA COMP.] function. ( P.3-5)</li> <li>(4) If any pieces of paper or dust is attached on the path of the heads such as media press, remove it.</li> </ul>	
Characters are double- or triple-printed in the media feed direction	(1) Execute the [MEDIA COMP.] function. ( P.3-5)	
Disagreement in print positions between outward trip and homeward trip	(1) Execute the [DROP POSITION] function. (@P.4-23)	
Ink drops falling on media during print- ing	<ul> <li>(1) Execute the wiper cleaning. ( P.4-5)</li> <li>(2) Execute the ink cap cleaning. ( P.4-5)</li> <li>(3) Execute the head cleaning [NORMAL]. ( P.2-24)</li> <li>(4) When the phenomenon is not improved, execute the periodical wiping setting. ( P.4-28)</li> </ul>	

#### Nozzle is clogged

When nozzle clogging is not dissolved even after the head cleaning referring to P.2-24, make sure the following operations.

- Fill ink by the operations of P.4-18.
- Replace ink by the operations of P.4-19.

#### Ink cartridge warning appears

If an ink cartridge trouble is detected, a warning message appears and none of printing, cleaning and all the other operations that use ink is available.

In this case, replace the ink cartridge in question immediately.



 Once cartridge trouble is displayed, do not leave the ink cartridge without replacing it for a long time; otherwise, the machine will lose the nozzle clogging prevention function.
 If nozzles are clogged, the machine must be repaired by MIMAKI's service engineer.

#### Displaying the description of ink cartridge trouble

The contents of cartridge error are confirmable by the following operations. ( P.5-7)



Press the **ENTER** key in the local mode.



ES3 MMCCYYKK REMAIN 34567899

2

Press the **FUNCTION** key.



NON-ORIGINAL INK ---C---

- When two or more cartridge troubles occur, warnings can be displayed in turn by pressing the or key.
- Press the FUNCTION key or END key to return to the display of the remaining amount of ink.

# **Warning / Error Messages**

If some trouble occurs, the buzzer sounds and the display shows a corresponding error message. Take an appropriate remedy for the displayed error.

#### Warning messages

Message	Cause	Solution
Close a cover.	The front cover or the maintenance cover is opened.	Check the front cover and maintenance covers.  If the same error message appears again even after closing all the covers, contact your local distributor to call for service.
** NO MEDIA **	A media has not been set.	Set media.
!EXCHANGE BATTERY	The battery life end of the internal clock is detected.	Contact your local distributor to call for service.
<pre><local.1> [#01] Replace a WIPER<mnt></mnt></local.1></pre>	Time to replace the wiper in the capping station with a new one has come. (The wiping count has reached the specified value.)	Replace the wiper with a new one.
<pre><local.1> [#01] !Do TEST DRAW</local.1></pre>	The nozzle recovery cannot be expected because the machine has been left standing for a prolonged period of time.	Perform test printing then check nozzle clogging. In the case of nozzle clogging observed, perform cleaning. ( P.2-24) In the case of significant nozzle clogging observed, perform the operations of P.4-10"Washing of Head nozzle".
PRE PRT POST BREAK **°C **°C	A heater is disconnected. (This example shows that preheater is disconnected.)	
PRE PRT POST THERM **°C **°C	The thermistor of a heater is defective. (This example shows that the thermistor of pre-heater is defective.)	Contact your local distributor to call for service.
CLOCAL . 1 >	Ink for one supply path has been nearly used up.	Replace the cartridge for the supply path corresponding to the indicated color. You can print without replacing the cartridge (until INK END is displayed). However, the machine returns to local mode every completion of printing one file.
CLOCAL.1>	Ink for one supply path has been completely used up.	Replace the cartridge for the supply path corresponding to the indicated color.
<pre>\$\text{LOCAL.1&gt;}</pre>	Ink cannot be supplied due to the cartridge per one supply path.	Check the cartridge for the supply path corresponding to the indicated color.

Message	Cause	Solution
<pre><local.1> [#01] REINSERT CARTRIDGE</local.1></pre>	Ink near end was detected right after the cartridge with much remaining amount of ink has been inserted.	Pull out the inserted cartridge and insert it again. If the message will be displayed again, contact a distributor in your district or our office to call for service.
<pre></pre>	There is a problem with installed ink cartridges. (In the case of overlapping with other warnings, the display turns to "< LOCAL.1> !CAR/WASH" and [#**] is erased.)	Check the content of the warning details in the guidance function.
<pre></pre>	There is a problem with the installed cleaning solution cartridge. (In the case of overlapping with other warnings, the display turns to "< LOCAL.1> !CAR/WASH" and [#**] is erased.)	Check that the cleaning solution cartridge has been set properly.
INK NEAR END MMCC	The ink of the ink cartridge has been nearly used up.	Replace the cartridge generating the warning with a new one.
INK END	The ink of the ink cartridge has been completely used up.	Replace the cartridge generating the warning with a new one.
NON-ORIGINAL INK	The ink cartridge is not MIMAKI genuine.	Replace the cartridge generating the warning with a MIMAKI genuine.
WRONG INK IC	The IC chip of the ink cartridge cannot be read normally.	Remove the cartridge generating the warning once and install it again. If the same warning message still appears, contact your local distributor to call for service.
Kind of INK	The ink of the ink cartridge is different in type from the ink currently supplied.	Check the ink type of the cartridge generating the warning.
Color of INK	The ink of the ink cartridge is different in color from the ink currently supplied.	Check the ink color of the cartridge generating the warning.
WRONG CARTRIDGE	There is trouble with an installed ink cartridge.	Check the cartridge generating the warning.
NO CARTRIDGE	An ink cartridge has not been installed in the slot.	Install an appropriate cartridge in the slot generating the warning.
Expiration	The specified expiration date of an ink cartridge has passed.	Replace the cartridge generating the warning with a new one. The cartridge may be used until one month passes after the specified expiration date.
Expiration: 1MONTH	The expiration date of an ink cartridge has passed (one month has passed after the specified expiration date).	The red LED blinks. Replace the cartridge generating the warning with a new one. The cartridge may be used until two months pass after the specified expiration date.

Message	Cause	Solution
Expiration: 2MONTH	The expiration date of an ink cartridge has passed (two months have passed after the specified expiration date).	Replace the cartridge generating the warning with a new one.
INK REMAIN ZERO	Remaining amount of ink in an ink cartridge is zero.	Replace the cartridge generating the warning with a new one.
Check the "W"nozzle condition. <ent></ent>	When SS 21 white ink is used, the message of prompting you to perform test printing is displayed for keeping the nozzle status be normal.	Perform "WHITE CHK." of test printing. ( P.2-22)
PERFORM SPOT COLOR MAINTENANCE? <ent></ent>	When silver and white ink of ES3 ink are used, the message of prompting you to perform special color maintenance for preventing color heterogeneity due to settling down of pigment is displayed.	Perform spot color maintenance.
<pre>Check waste ink<mnt></mnt></pre>	The waste ink tank is nearly full.	Replace the waste ink tank then execute [MAINTENANCE]-[Ink Tank Exchange]. ( P.4-44)
!Wash Liquid END	The cleaning liquid cartridge is empty.	Replace the cleaning solution cartridge with a new one.
!washLiquidCart.NON	The cleaning liquid cartridge has not been installed.	Install the cleaning solution cartridge.
!WRONG WASH CART.	There is trouble with cleaning liquid cartridge.	Check the cleaning solution cartridge.
** Washing liquid **	Cleaning solution has not been supplied.	Supply the cleaning solution. Execute [MAINTENANCE]-[HD.MAINTENANCE]-[FILL UP INK] .( P.4-18)

#### **Error messages**

When an error message is displayed, eliminate the error according to the chart below. If the same error message appears again, contact your dealer or an office of MIMAKI to call for service.

Message	Cause	Solution
***** ERROR 01 ***** MAIN ROM	An error occurred in the circuit board system. (ROM)	
***** ERROR 02 ***** MAIN RAM	An error occurred in the circuit board system. (RAM)	
***** ERROR 03 ***** POWER +5V	An error occurred in the circuit board system. (POWER +5V)	
***** ERROR 03 ***** POWER +24V	An error occurred in the circuit board system. (POWER +24V)	
***** ERROR 03 ***** POWER +42V	An error occurred in the circuit board system. (POWER +42V)	
***** ERROR 04 ***** F-ROM	An error occurred in the circuit board system. (F-ROM)	
***** ERROR 06 ***** SD-RAM	An error occurred in the circuit board system. (SD-RAM)	Turn off the power to the machine and turn it on after a while.
***** ERROR 07 ***** HEAD ()	An error in heads was detected. (Abnormal temperature was detected.)	If the same error message appears again, contact your local distributor to call for service.
***** ERROR 07 ***** VOLTAGE ()	An error in heads was detected. (Abnormal voltage was detected.)	
***** ERROR 08 ***** LinearENCODER: SENSOR	An error occurred in the linear encoder. (Counting was unable.)	
***** ERROR 08 ***** LinearENCODER:DIR.	An error occurred in the linear encoder. (Error in the mounting direction.)	
***** ERROR 08 ***** LinearENCODER: COUNT	An error occurred in the linear encoder. (Read-out count error)	
***** ERROR 09 ***** FPGA ERROR	An error occurred in the circuit board system. (FPGA PDC)	
***** ERROR 09 ***** HDC ERROR ()	An error occurred in the circuit board system. (FPGA HDC)	
***** ERROR 10 ***** COMMAND ERROR	The machine received some data other than command data.	Securely connect the interface cable in position. Use an interface cable conforming to the specifications.

Message	Cause	Solution
***** ERROR 11 ***** PARAMETER ERROR	Any parameter outside the range of acceptable numeric values was received.	Turn off the main power to the machine and turn it on after a while.  If the same error message appears again, contact your local distributor to call for service.
***** ERROR 16 ***** MRL COMMAND	The received data does not follow the command system set by the machine.	Transmit data that is compatible with the command system supported by this machine.
***** ERROR 25 ***** FULL-SPEED	An error occurred in communication between the host computer and the interface board for USB2.0 connection.(Full-Speed mode connection)	Check that the host PC supports the USB2.0 interface. (Communication can be resumed without changing any setting. However, it is recommend to use the connection in High-Speed mode.)
***** ERROR 25 ***** PACKET SIZE OVER	An error occurred in communication between the host computer and the interface board for USB2.0 connection.	
***** ERROR 25 ***** USB PROTOCOL	An error occurred in communication between the host computer and the interface board for USB2.0 connection.	Check that the cable is securely connected to the host computer and interface board.  Also, check to see if any error has occurred on the host computer.
***** ERROR 25 ***** USB ENVIRONMENT	An error occurred in communication between the host computer and the interface board for USB2.0 connection.	
***** ERROR 25 ***** USB DATA	An error occurred in communication between the host computer and the machine for USB2.0 connection.	
CAN'T OPERATE	Improper operation was conducted on the operation panel.	Perform correct operations.
***** ERROR 34 ***** DATA REMAIN	It is being tried to change settings for functions though there remains received data that has not yet been printed.	Print all the received data or execute the data clear function. Then, change settings.
***** ERROR 40 ***** MOTOR ALARM X	An excessive load was applied to the X motor.	
***** ERROR 41 ***** MOTOR ALARM Y	An excessive load was applied to the Y motor.	Turn off the main power to the machine
X OVER CURRENT	An error due to an excessive current of the X motor was detected.	and turn it on after a while.  If the same error message appears again, contact your local distributor to call for service.
Y OVER CURRENT	An error due to an excessive current of the Y motor was detected.	
CAPPING: PARAMETER	An error occurred in the capping control. (Improper parameter adjustment value)	

Message	Cause	Solution	
***** ERROR 46 ***** WI PER	An error occurred in the wiper control.	Turn off the main power to the machine and turn it on after a while.  If the same error message appears again, contact your local distributor to call for service.	
***** ERROR 50 ***** MEDIA WIDTH SENSOR	Paper could not be detected. The media set position or media itself is not proper.	If the same error message appears again even after setting the media properly, contact your local distributor to call for service.	
***** ERROR 50 ***** MEDIA SET POSITION L  ***** ERROR 50 **** MEDIA SET POSITION R	The set position of the media is not proper. The media detection has not completed.	Set the media to the proper position again. ( P.2-8, P.2-14)	
***** ERROR 51 ***** Y-ORIGIN	Y-origin could not be detected.	Turn off the main power to the machine and turn it on after a while.  If the same error message appears again, contact your local distributor to call for service.	
ROOM TEMP LOW (XX°C)	The room temperature is out of the usable temperature range (too low).  Adjust the room temperature of t		
**** ERROR 121 **** ROOM TEMP HIGH(XX°C)	The room temperature is out of the usable temperature range (too high).	lation place. (ﷺ P.3-38)	
CARTRIDGE SET!	There is a slot where no cartridge has been inserted.	Set a cartridge.	
**** ERROR 200 **** HEAD MEMORY ()	An error occurred on the head unit memory.	Turn off the main power to the machine and turn it on after a while.	
**** ERROR 202 **** DVEICE CONSTRUCTION	The head is not connected. An error occurred on the head slider board. The head is not MIMAKI genuine.	If the same error message appears again, contact your local distributor to call for service.	
**** ERROR 203 **** SDRAM SIZE	A SD-RAM of the size required for the machine has not been equipped.	Turn off the main power to the machine and turn it on after a while.  If the same error message appears again, contact your local distributor to call for service.  (When a usable SD-RAM is available, the machine can be started as is. However, a printing speed may be slow depending on resolution.)	
**** ERROR 207 **** XXXXXXXXXX	An error is detected on the wave- form printed on the lower line of the display.	Turn off the main power to the machine and turn it on after a while.	
CHECK MAIN PCB ID XX	Model ID of main PCB is different. (XX is ID code.)  If the same error message appears contact your local distributor to call		
**** ERROR 211 **** HeaterTEMP(//)	An abnormal temperature of the media heater was detected.	vice.	

Message	Cause	Solution	
**** ERROR 211 **** HeadWARM.TEMP.()	An abnormal temperature of the head heater was detected.		
**** ERROR 211 **** HeadWARM.BREAK()	The head heater is disconnected.	Turn off the main power to the machine	
**** ERROR 211 **** HeadWARM.THERM()	Trouble has occurred with the thermistor of the head heater.	and turn it on after a while.  If the same error message appears again, contact your local distributor to call for ser-	
Y COORDINATES	An error was detected during scanning operation.	vice.	
**** ERROR 251 **** SYSTEM ERROR	A system error occurred.		

# CHAPTER 6 Appendix



This section attaches a list of the specifications and a list of the functions of this printer.

Machine specifications	6-2
Ink specifications	6-4
Sheet for inquiry	6-5
Warning labels	6-6
Function Flowchart	6-8

# **Machine specifications**

	Item	JV33-130 JV33-160	
Print head	Method	Drop-on-demand piezoelectric print heads	
	Specification	1 head	
Drawing mode (scan x feed)		720 x 540dpi 540 or 720 x 720dpi 540 x 900dpi 540 or 720 x 1080dpi 720 x 1440dpi 1440 x 1440dpi	
Usable inks	Dedicated solvent ink.	Either ES3 ink or SS21 ink	
	Dedicated aqueous ink.	Either one of aqueous pigment ink or sublimation dye ink Aqueous pigment ink : 4 colors (Y,M,C,K) 6 colors (Y,M,C,K,Lc,Lm)  Eco-PA1 ink : 4 colors (Y,M,C,K,Lc,Lm) 7 colors (Y,M,C,K,Lc,Lm) 7 colors (Y,M,C,K,Lc,Lm,Lk)  Sublimation dye ink (Sb51/Sb53/Sb60) : 4 colors (Y,M,BI,K) 6 colors (Y,M,BI,K,LBI,Lm)  Sublimation dye ink (Sb52) : 4 colors (Y,M,BI,K,LBI,Lm) 6 colors (Y,M,BI,K,LBI,Lm)	
		For K of sublimation dye ink (Sb52), choose one from the following four types.     K : Deep Black     RK : Reddish Black (high density)     NK : Normal Black     (Lower density than K. (about the same as Sb51))     NRK: Normal Reddish Black     (Lower density than RK. (slightly higher density than Sb51))	
Ink supply		Supplying from ink cartridges through tubes. Ink cartridge replacement type: Only at 4 colors: Supplying by Toggle switchover with 2 cartridges/color	
Capacity of ink cartridge	Dedicated solvent ink	When eight colors are used: White and silver One 220-cc cartridge for each color Other colors One 440-cc cartridge for each color 6-color set of cartridges: 440cc 1 cartridge for each color, 440 cc/1 color (2 cartridges, 880cc only for magenta and cyanogen) 6 colors + white color installed: White 2x220cc cartridges, 440cc / 1 color Other colors 1x440cc cartridge for each color, 440cc / 1 color 4-color set installed: 440cc 2 cartridges for each color, 880cc/1 color	
	Dedicated aqueous ink	6-color set of cartridges: 440cc or 220cc 1 cartridge for each color, 440cc/1 color or 220cc/1 color (2 cartridges, 880cc or 440cc only for magenta and cyanogen) 4-color set installed: 440cc or 220cc 2 cartridges for each color, 880cc/1 color or 440cc/1 color	
Media type	Dedicated solvent ink	Tarpaulin, FF, PVC	
wieula type	Dedicated aqueous ink	Photo-paper , Synthetic paper , Duplex paper	
Max. printing width		1361mm 1610mm	

ite	m	JV33-130	JV33-160	
ı	Maximum	1371mm	1620mm	
1	Minimum	210mm		
<u>-</u>	Thickness	1.0 mm or less		
	Roll outside diame- ter	φ 180mm or less		
Roll Media Size	Roll weight *1	25kg or less		
Ī	Roll inside diameter	3 or 2 inches		
Ī	Printing surface	Side facing outward		
F	Roll end treatment	The roll end is gently fixed to the core with weak-adhesive tape or weak glue for easy removal.		
Leaf media size	Maximum	1371mm 1620mm		
Lear media size	Minimum	210mm		
l Margin	Leaf media	Left end and right end : 15 mm (Default) Front : 40.0 mm Rear : 98.5 mm		
_	Roll media	Left end and right end: 15 mm (Default) Front: 40.0 mm Rear: 0.0 mm		
Distance accu-	Absolute accuracy	Whichever the larger one of ± 0.3 m	nm or ± 0.3 % of the designated	
racy	Reproducibility	Whichever the larger one of ± 0.2 m	nm or ± 0.1 % of the designated	
Perpendicularity		± 0.5 mm / 1000 mm		
Media skew		5 mm or less / 10 m variable		
Head height adjustm	ent	2.0mm / 3.0mm (from the platen surface) 2 levels adjustable		
Cutting of media		Cutting of Y direction by the head cutter, Cutting accuracy (steps): 0.5 mm or less.		
Media delivery		Take-up device supplied as a standard accessory (switching possible between face in and face out).		
Waste ink tank		Bottle type (2,000 cc)		
Interface		USB 2.0		
Command		MRL- III		
<u> </u>	during standby	Less than 58 dB (FAST-A, Front & F	Rear & Left & Right 1 m)	
Noise g	during continuous orinting	Less than 65 dB		
	during discontinu- ous printing	Less than 70 dB		
Safety Standard		VCCI-Class A, FCC-Class A, UL 60950, CE Marking (EMC,Low Voltage Directive), CB Report, RoHS		
Power		AC100 - 120 ± 10% , AC220 - 240 ± 10% , 50/60Hz ± 1Hz , 15A or less		
Power consumption '	*2	1333 W or less		
	Available temp.	20 °C to 35 °C	C to 35 °C	
	Humidity	35 to 65% Rh (No condensation)		
Recomended (	Guaranteed temp.	20 °C to 25 °C		
- Liviloillioit	Temperature change	± 10 °C / h or less		
Ī	Dust	Equivalent to normal office level		
Weight		145 kg	160 kg	
	Width	2289 mm	2538 mm	
	vvidiri		2000 111111	
Outside dimen	Depth	739 mm	2000 111111	

<sup>\*1.</sup> Without deflection of the roll when it is retained at both ends.

<sup>\*2.</sup> Main unit and heater included.

### Ink specifications

Ite	m	When solvent ink is used	When aqueous-color ink is used
Supply		Dedicated solvent ink cartridges	Dedicated aqueous pigment ink cartridge Dedicated sublimation dye ink cartridge Eco-PA1 ink
Color		Black ink cartridge Cyan ink cartridge Magenta ink cartridge Yellow ink cartridge Light cyan ink cartridge Light magenta ink cartridge White ink cartridge *1 Silver ink cartridge	Black ink cartridge Cyan ink cartridge (Blue ink cartridge**) Magenta ink cartridge Yellow ink cartridge Light cyan ink cartridge (Light blue ink cartridge**) Light magenta ink cartridge Reddish black ink cartridge *4 Normal black ink cartridge *4 Normal reddish black ink cartridge *4 Eight brilliant blue ink cartridge *4 Light brilliant blue ink cartridge *4 Light black ink cartridge *5
Ink capacity		220cc / 440cc per cartridge	
Shelf life		SS21 Ink     1 year from the date of manufacture     (at room temperature)     ES3 Ink     Two years from the date of manufacture     (at room temperature)     Within three months after opening the package	Aqueous pigment ink     1 year from the date of manufacture     (at room temperature)     Sublimation dye ink     1 year from the date of manufacture     (at room temperature)
Storage temperature	Storage	to 25°C (Average daily temperature)     Be sure to keep a vessel in the airtight condition.	<ul> <li>10 to 35°C (Average daily temperature)</li> <li>Be sure to keep a vessel in the airtight condition.</li> <li>Be sure to keep a vessel in a dry, well-ventilated, cool and dark location.</li> </ul>
	Transporta- tion	-20 to 60°C  • Avoid the condition lower than -20 °C and higher than 60 °C.	0 to 40°C  • Avoid the condition lower than -0 °C and higher than 40 °C.

- \*1. When SS21W-2 (SPC-0504-W) ink cartridge is used. When ES3 white ink (SPC-0433-W) ink cartridge is used.
- \*2. When ES3 silver ink (SPC-0433-Si) ink cartridge is used.
- \*3. When dedicated sublimation dye ink cartridge (Sb51/Sb53/Sb60) ink cartridge is used.
- \*4. When dedicated sublimation dye ink cartridge (Sb52) ink cartridge is used.
- \*5. When Eco-PA1 ink cartridge (Sb51) ink cartridge is used.



- Do not disassemble ink cartridges and do not refill them with ink.
  - Ink could freeze if kept in a cold place for an extended period.
    - When solvent ink is used, if the ink freezes, thaw it at room temperature (25°C) spending more than three hours before use.
    - When aqueous ink is used, if the ink freezes, the quality is changed and the ink becomes unusable.
      - Store the ink in an environment that will not freeze the ink.

# **Sheet for inquiry**


Use this sheet for troubles and abnormal functions of the machine. Fill in the following necessary items, and then fax the sheet to our sales office.

Company name	
Person in charge	
Telephone number	
machine model	
Operating OS	
Machine information *1	
Error message	
Contents of inquiry	

<sup>\*1.</sup> Refer to "Confirming Machine information" of "Convenient using" then fill in necessary information. ( P.3-48)


# **Warning labels**


Warning labels are stuck on the machine. Be sure to fully understand the warning given on the labels. If a warning label is illegible due to stains or has come off, purchase a new one from a distributor or our sales office.

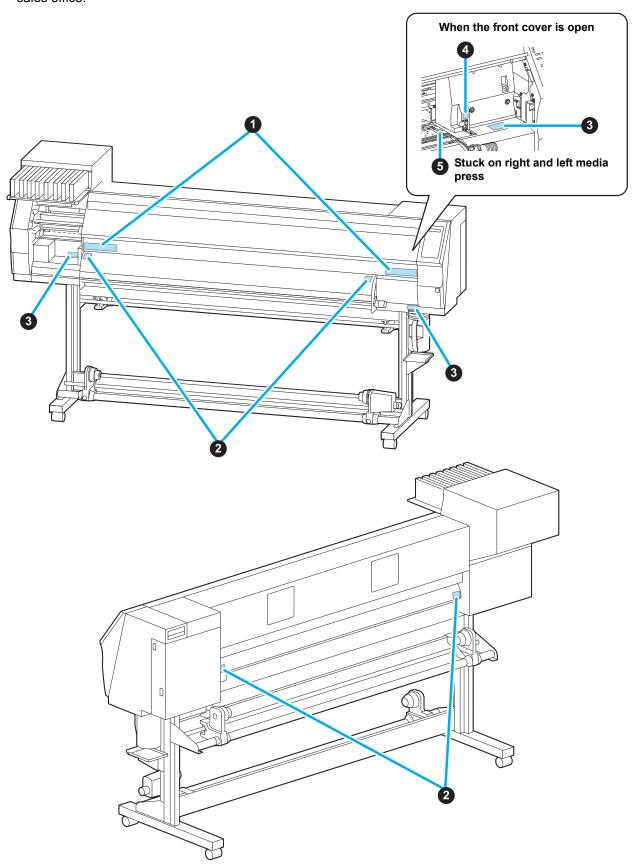



No.	Reorder	Label				
1	M901549	前面外盖的内部。 7	↑ 注 意 キャリッジ動作中は、フロント カバーの中に指を入れない でください。	CAUTION -MOVING CARRIAGE-Do not put fingers inside this area	ACHTUNG -Beweglicher Wagen- Finger nicht in diesen Bereich bringen.	-CHARIOT MOBILE- Ne pas mettre de doigts dans cette zone. (S)
2	M903239					
3	M903330					
4	M903405					
5	M904810					


## **Function Flowchart**

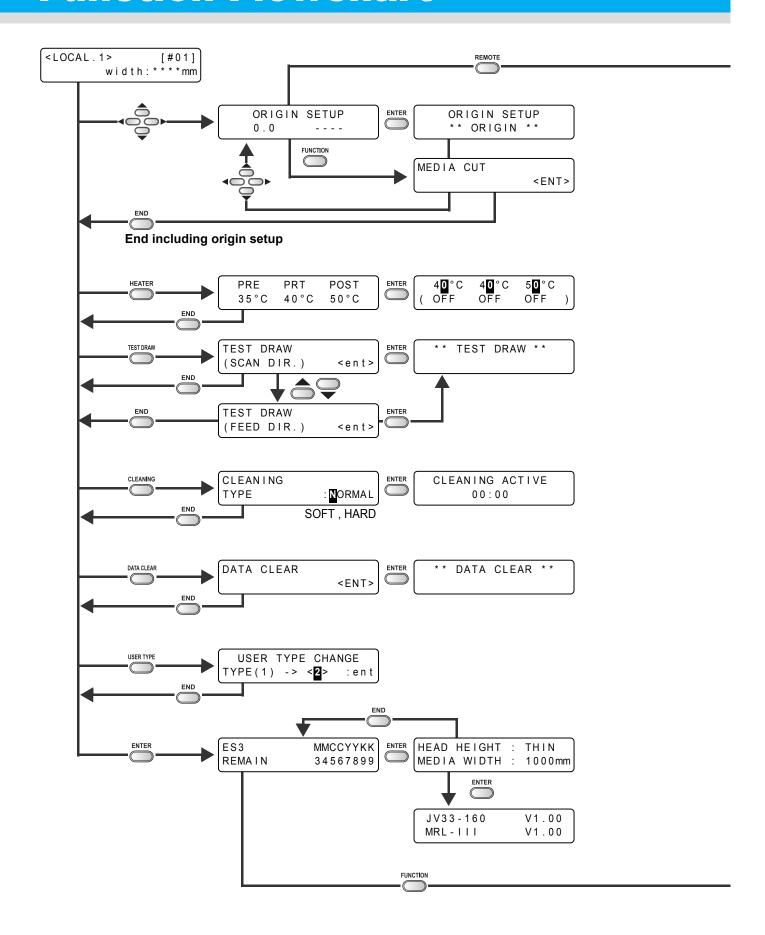


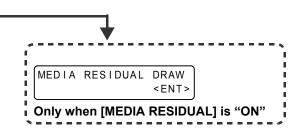


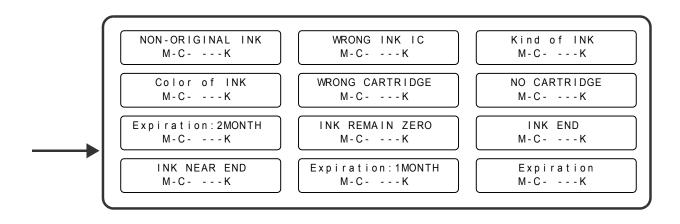


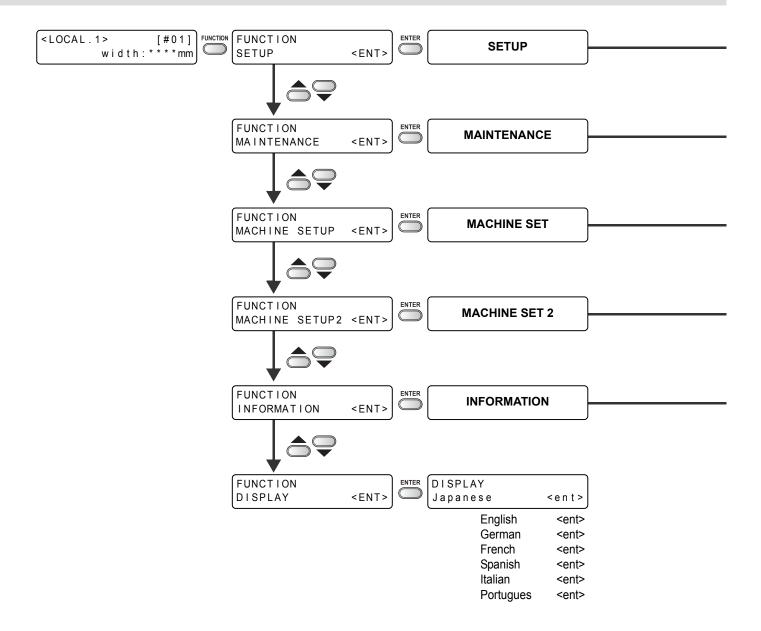


 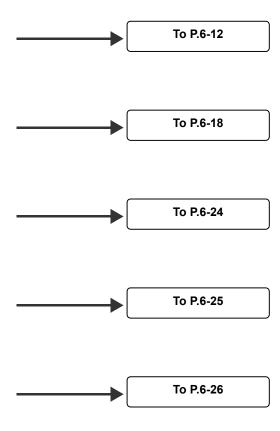


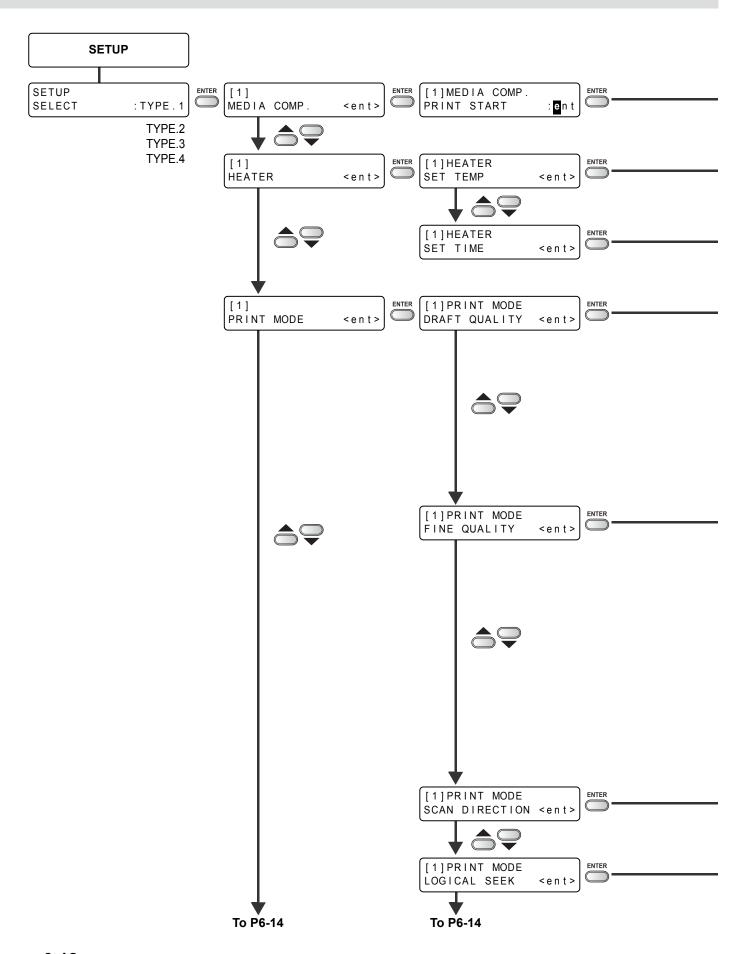


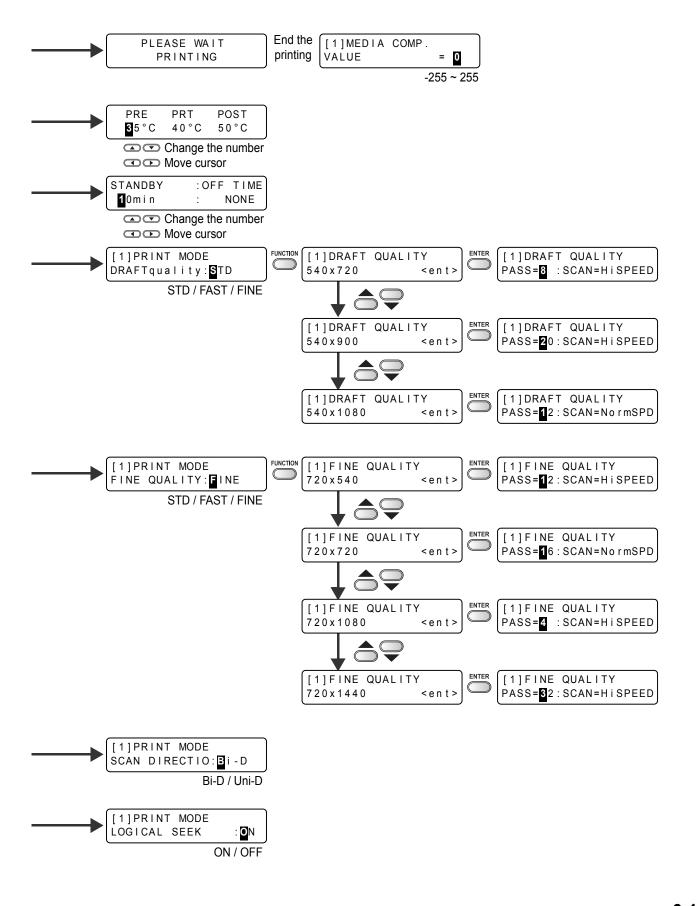


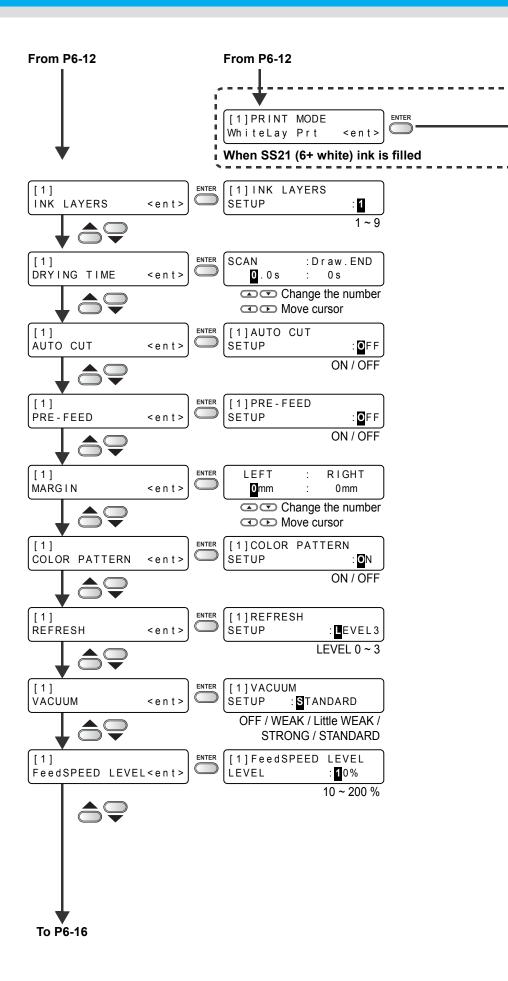





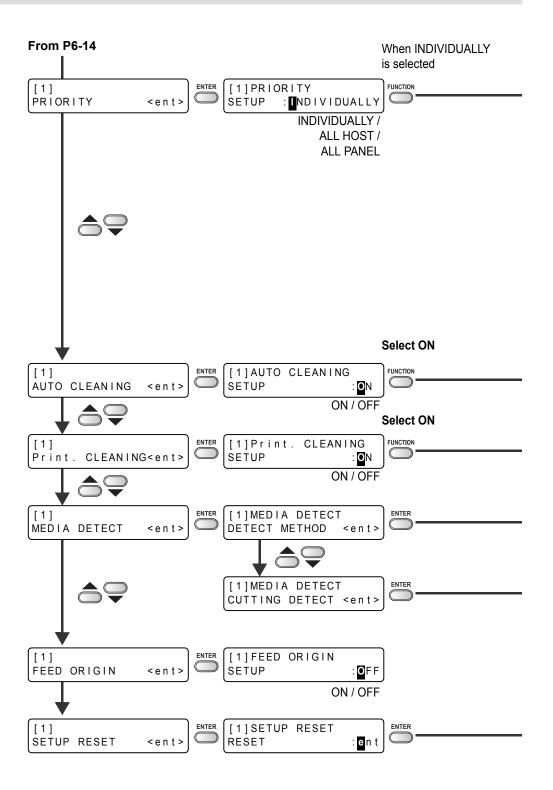


 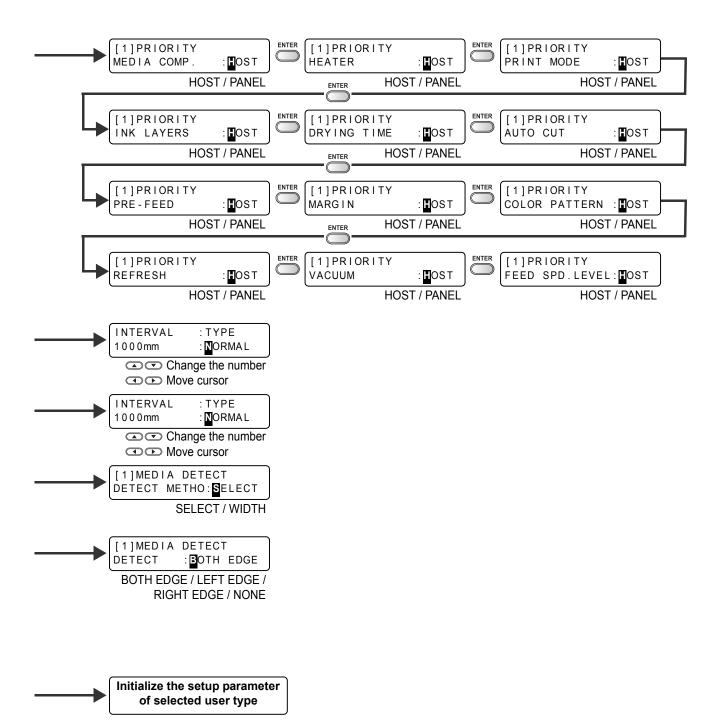


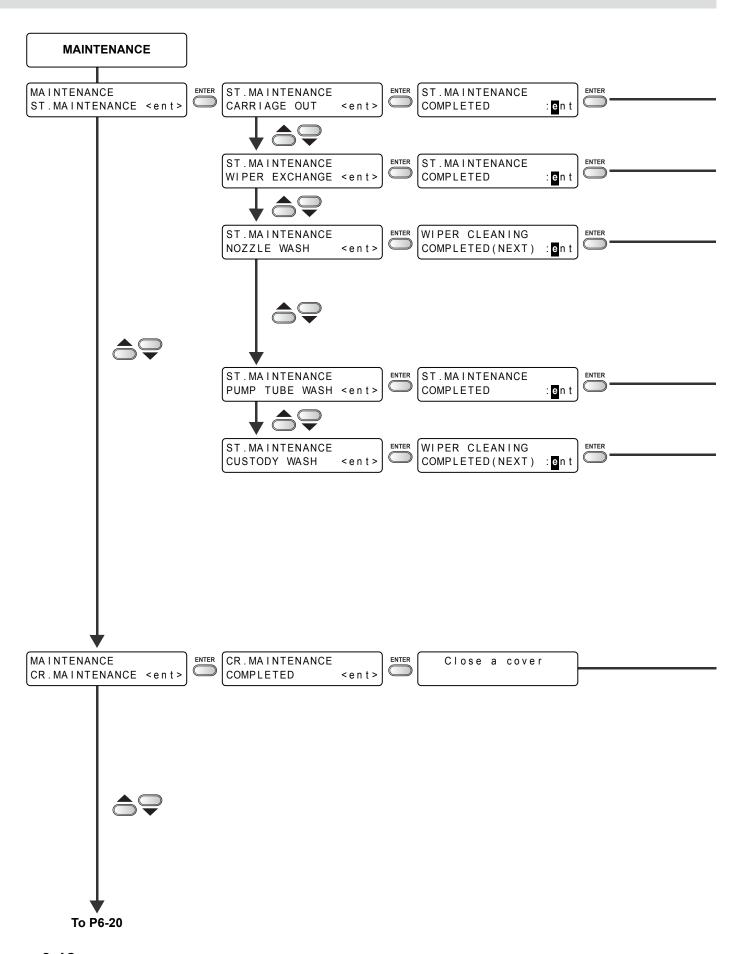


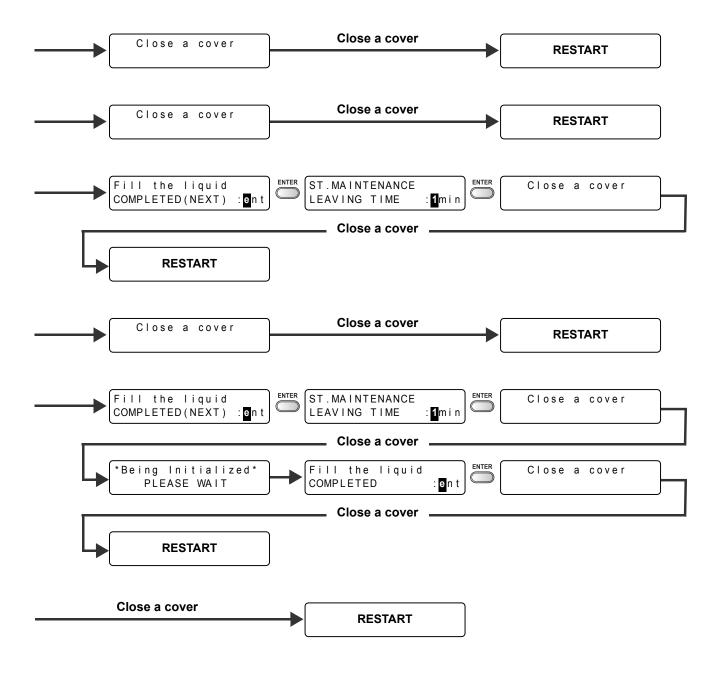


 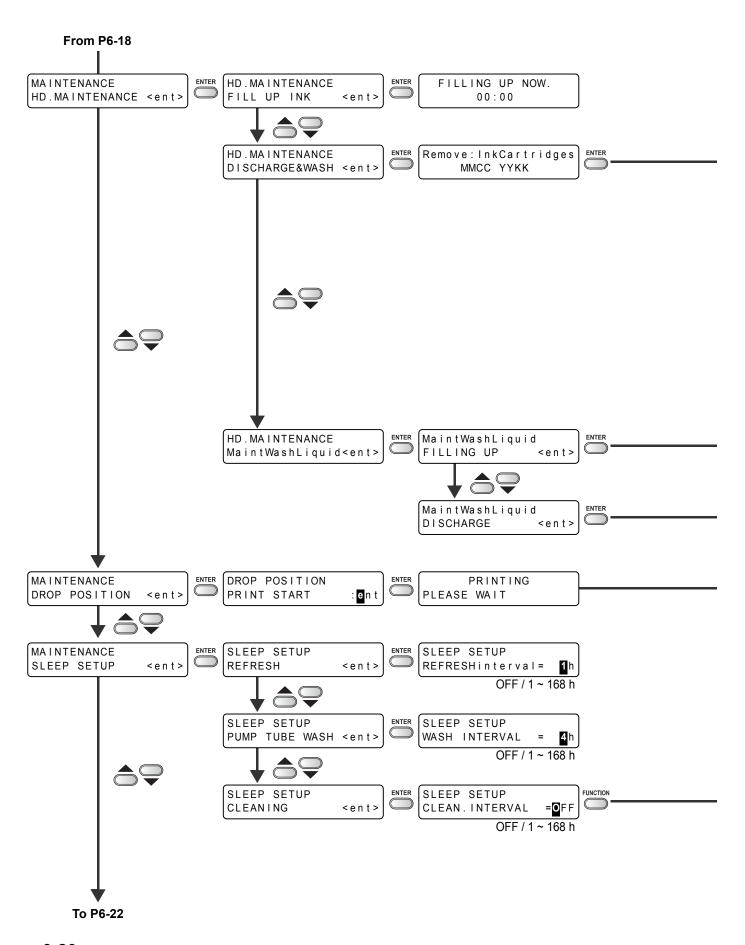


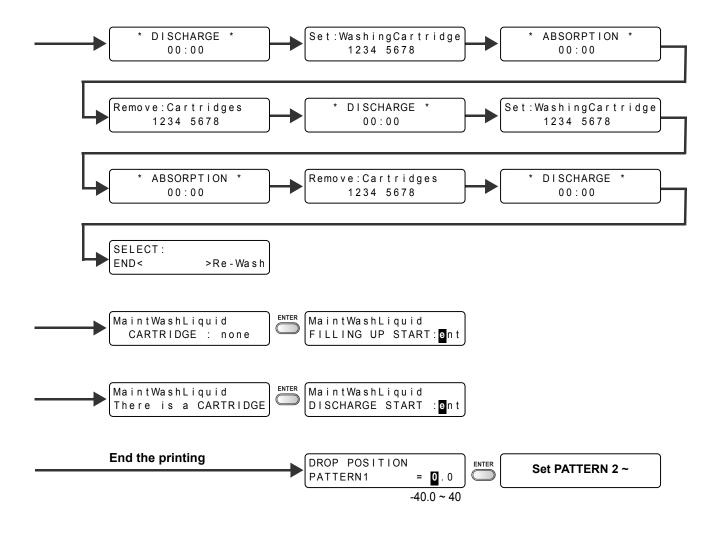





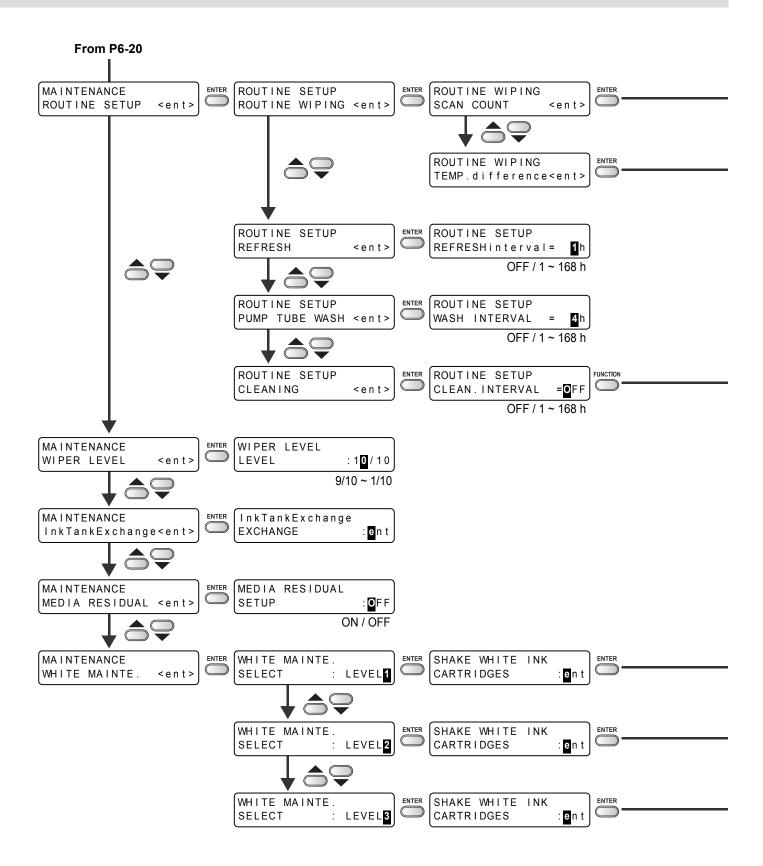


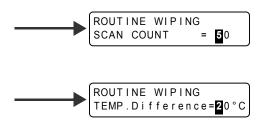




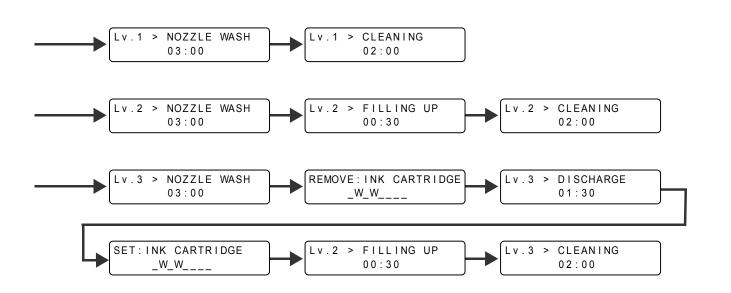

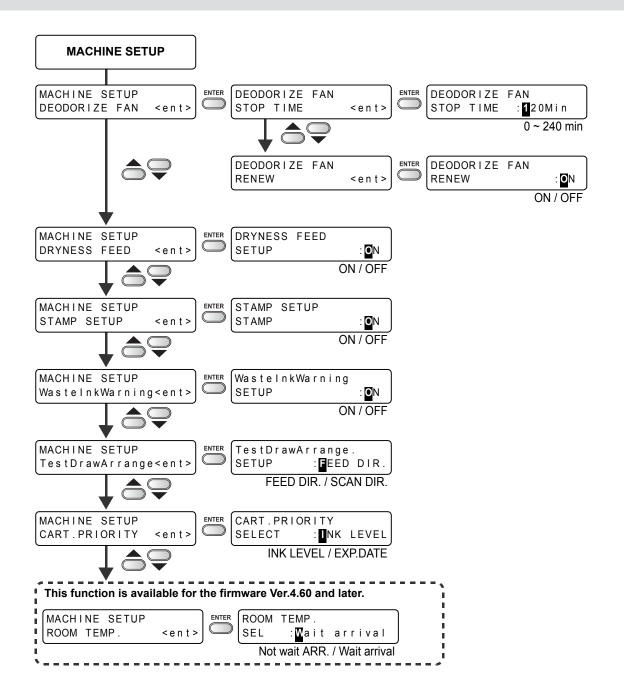

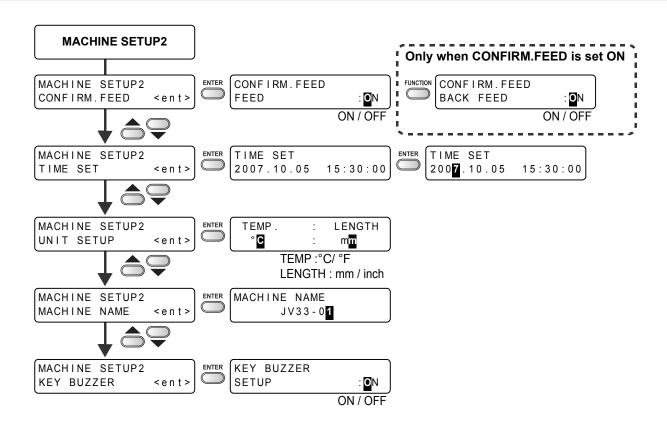

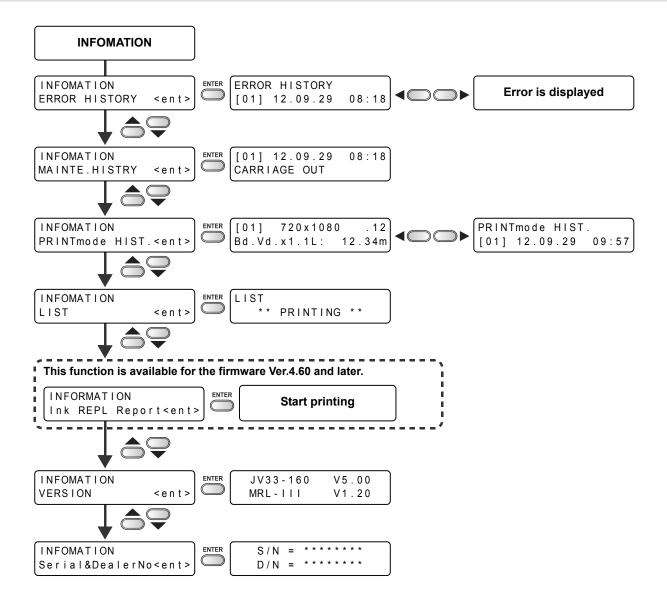

 $Downloaded \ from \ \underline{www.Manualslib.com} \ \ manuals \ search \ engine$ 



