
Statement

All rights reserved

- The Manufacturer reserves the right to modify the products in this manual and product specifications document without prior notice.
- The Manufacturer does not assume caused by improper use of the manual or the product directly, indirectly, incidentally or consequential loss or liability.
- The Manufacturer has the products and software patents, copyright and other intellectual property rights. Unauthorized and shall not directly or indirectly copy, manufacture, processing, use of this product and its associated parts
- This product is designed and manufactured for general industrial applications than expected and the use of human life or property caused by the significant impact is not the scope of services

Preface



Thank you for choosing our products. and welcome to use our products!

Please read this user manual before using the product. This manual provides detailed information for use firstly of this product relevant security matters, the installation, describes the function , operation of the various components, the routine maintenance necessary for the good condition of this product, and lists the fault finding methods, techniques, support files, and more important content.


If you have any questions about the product or have any problems when using this product, please contact us, our technical team will be ready to provide you with professional support and advice. Please contact us

In order to ensure safe operation and best performance, please follow these warnings and pay attention to other matters, as well as the manual to operate.

- "Dangerous" and "warning" symbol are marked in accordance with the extent of the risk of accident.

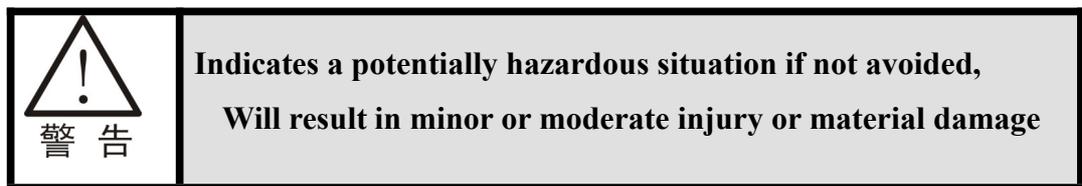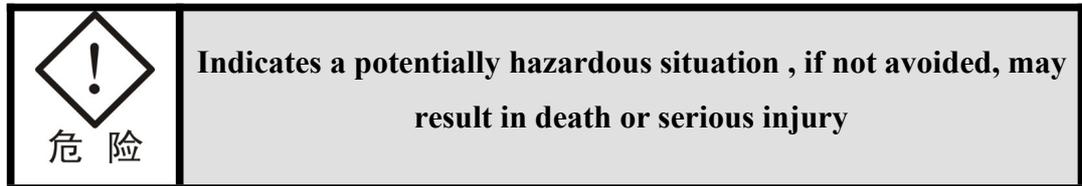

- The following symbols indicate which is prohibited must comply with

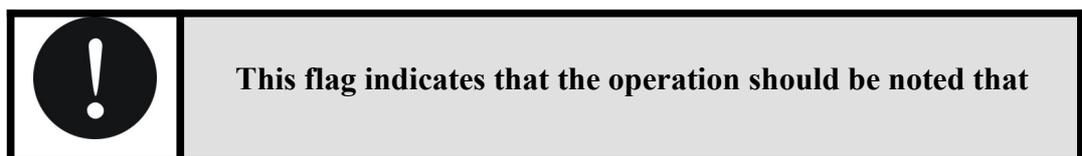

Finally, Please pay attention to the following matters:

- **Before power to the product, be sure to fully understand contain in this manual on the safe operation of the laser and maintenance of the Note**
- **If this manual does not mention, please not to adjust or modify the product or its components, otherwise it may result in hazardous laser radiation.**

Contents

1. Security	6
1.1 Basic information	6
1.2 Optical Security	6
1.3 Electrical safety	7
1.4 Equipment safety standards	9
2. Overview	9
2.1 Introduction	9
2.1.1 Character	10
2.1.2 Application	11
2.2 Operating principle and parameters	11
2.3 System structure	12
2.3.1 Appearance	12
2.3.2 Main-operation-contro-panel	14
2.3.3 CO2 Laser	15
2.3.7 Working platform	15
2.3.5 Thermostatic water-cooled machine	15
2.3.6 Electronic control board	16
2.3.7 Negative pressure vacuum fan	17
3 Installation & adjustment and workflow	17
3.1 Opening inspection	17
3.2 Preparation before installation and adjustment	17
3.3 Venues and supporting facilities	18
3.4 Processing workflow	19
3.5 Processing Notes	19
4. Operating instructions	21

4.1	Booting process.....	21
4.2	Use the operating.....	21
4.2.1	Operation panle.....	21
4.3	Shutdown process.....	24
5.	Maintenance service.....	25
5.1	Maintenance and servicing of the optical system.....	25
5.2	Maintenance and servicing of motion organizations.....	26
5.3	Optical path adjustment and replacement of the laser tube.....	26
5.4	Thermostatic water-cooled machine maintenance and servicing..	30
5.5	Exhaust Fan and vacuum pipe maintenance and servicing.....	30
6	. Common problems and solutions.....	31
6.1	The main equipment part.....	31
6.2	Thermostatic water-cooled machine part.....	32
7	. Drawings.....	35
7.1	Outline Drawing.....	错误! 未定义书签。
7.2	Electrical schematic.....	错误! 未定义书签。
7.3	Electrical wiring diagram.....	35
8	. Consumable wearing parts.....	38
8.1	Laser tube.....	38
8.2	Optical Lens.....	38
9.	Sftware Operation Manual.....	39
9.1	Software Introduction.....	39
9.2	The installation of the software program.....	39
9.3	Software Operation.....	39


1. Security

1.1 Basic information


- The staff , who can be authorized after the relevant training and fully understand the necessary safety procedures, can operate this laser production
- Please allow only authorized person close to the laser product, set the appropriate warning signs.
- Please observe the safety regulations of the local device.

1.2 Optical Security

- This laser products output more than 60W/80W/100W (according to different models) infrared laser radiation at 10.6 μm wavelength range. Avoid eye and skin exposure to the laser output directly to the issue or scattering the radiation. The laser may cause the following incidents: (1) ignite surrounding combustibles; (2) the processing of different objects may produce other radioactive and toxic and harmful gases.
- The optical path from second to third mirror without any protection, **Please do not into this optical path for your any body part in order not to cause harm during engraving & cutting and debugging.**
- Laser processing may be at risk ,should be carefully considered by the processing object, is suitable for laser operation. .
- Prohibited any irrelevant total reflection or diffuse reflection object placed in the device, to prevent the laser reflector to the human body or inflammable materials.
- Should wear the appropriate laser protective eyewear, the laser wavelength of the laser protective eyewear should be issued to match.

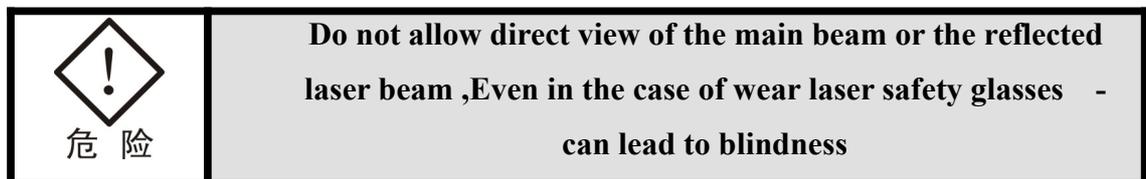

- Objects against the mirror into the laser radiation zone, to prevent due to the speculate reflection of accidental damage to the human eye or the human body.

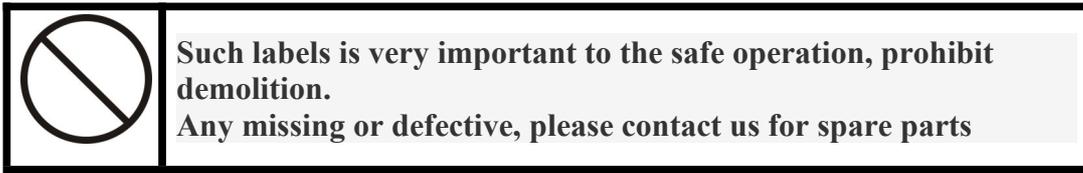

- S
t

rongly recommended that the laser output port do not point to the entrance or windows of the room when the product is placed




- "Beware of the laser, do not close" words of warning signs should be set to equipment workplace door or near the work area
- Avoid inflammable and explosive materials into the direct laser radiation zone
- Prohibits any person is free to adjust the optical system,even in shutdown,except with the permission or authorization of the Company
- Security identity and location



Paste in the laser output head

Paste on the laser front

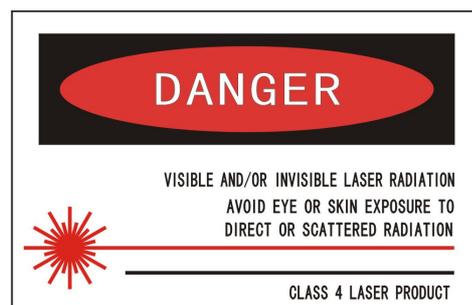


1.3 Electrical safety



This device contains a fatal DC and AC voltage, even if powered off
This danger may still exist for some time

- This product must be in the specified electrical conditions.
- Connect the power line and ensure that the circuit wiring is correct.
- When the normal operation of equipment does not exist electrical hazards, and ensure proper grounding well.
- When the equipment is not in use, should remove the key from key switch to prevent unauthorized use.
- When fault alarm sound or light, should be shut down and then check troubleshooting in order to boot again.
- During the laser tube rupture and laser power damage may occur due to a serious fault, must immediately press the emergency stop button or cut off the total power.
- When meet abnormal situation, you should immediately stop work, cut off the power, then please consult us.
- Power supply is suddenly interrupted a great influence on the laser, make sure to provide a continuous and stable power supply. To avoid the sudden change in voltage caused by the equipment, electrical circuits, burned. It is recommended that every single installation of more than 2000W power supply regulator
- Avoid to boot work in thunder and lightning
- Humidity too high cause high-pressure laser discharge, endangering personal safety, will cause damage to the laser power
- Must ensure that there is sufficient space and airflow
- When the cooling water temperature is greater than the maximum allowable value of 30 ° C, the laser energy output will decline rapidly; when the cooling water temperature is less than the minimum allowed value to 0 ° C will cause the cooling water freezes in the laser tube, resulting in the laser tube rupture.
- Replacement of wearing parts, the relevant requirements of this manual

power-off operation must be maintained by a professional.

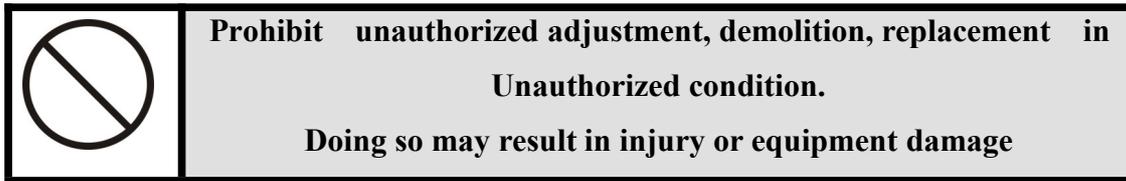

1.4 Equipment safety standards

This product is designed to the following national standards:

- GB of 18217-2000 - laser safety signs
- GB 7247.1-2001 - Radiation Safety of Laser Products, Equipment Classification, Requirements and User's Guide
- GB 1032 thousand -1995 - laser equipment and facilities of the electrical safety
- GB / T 5226.1-1996 - Electrical equipment of industrial machinery - Part 1: General technical conditions

2. Overview

2.1 Introduction

The 1290 series laser cutting machine is widely used in non-metallic materials cutting (such as acrylic, leather, cloth, etc.). The machine adopts the glass tube of carbon dioxide laser as the light source, computer-controlled ,special Dustproof Linear Module,Laser of the model set, automatic control, precision machinery, computer control software, and other high-tech one, with high-tech, high cost performance characteristics.

The series of models in the optical system, control system has first-class core technology, the speed, precision cutting close to the performance of similar foreign products, with high practicality.

2.1.1 Character

1, CO2 light source of laser equipment, optical power according to current regulation, the scope can be applied to the need for cutting different material thickness. Advantage of its excellent processing performance through the use of non-contact processing, will not damage the workpiece, the processing quality has been greatly improved.

2,Special Dustproof Linear Module. We keep warranty for 3years.X,Y axis of whole machine running speed is very fast,whole machine speed can reach 72000mm/Min.

3,Strong Frame Structure/Strong Body.Enable the laser cutting machine no deformation,Whether in transportation or long time use.

4, Large format visual working window Laser protective material made Visual Working Window,Easy to Observe. LED lighting for work area .

5, The flying optical systems, processing large format; device on three sides to take the open design of convenient material.

6,Support a variety of general-purpose graphics software to generate PLT, BMP (1 bit) and DXF file formats, can produce a variety of graphics, text, graphic, specification.

7, Current international popular modular electrical design, the whole has a good stability of the continuous work, the High cutting speed, high positioning accuracy, operation and maintenance simple and convenient advantages.

8, Using special laser cutting software, feature-rich, friendly interface, simple operation.

9, Using a mixture of vector and lattice work pattern, cutting work can be completed on the same page.

10,Every door has a magnetic sensor for safety.

11,Digital ampere meter is used.

12,2 more plug for spare parts out of machine like exhaust blower, air pump which could be controlled from panel

13,Each door was added rubber for protection prevent from scratching.

2.1.2 Application

1, cutting materials:

Rubber sheets, organic board, plastic sheets, acrylic, color plates, plywood, wood, marble, tiles, fireproof board, insulation board, cardboard, leather, leather, fabric, emery cloth, sandpaper and other non-metallic materials.

2.Applications and service

Packaging and printing (corrugated boxes, bags), model (construction, aviation, marine), billboards, handicrafts, decorative plates, printing templates, footwear garment template, cutting board, light box panels and so on.

2.2 Operating principle and parameters

● Operating principle

Laser power to produce instant high pressure (about 20000 volts) excitation laser within the carbon dioxide gas to stimulate the flow of particles in the laser tube resonator oscillation, and outputs a continuous laser wave . Computer engraving and cutting procedures control the table for the corresponding motion on the one hand,and control the laser output on the other hand ;the output of the laser reflection, focusing, non-metallic surface to form a high density spot, instant gasification material surface, and then to blow away by certain pressure from the

gasification of plasma objects formed kerf, in order to achieve the purpose of laser cutting.

● **Parameter**

Laser wavelength	10.6 μm	Cutting speed	≥6000mm/min
Laser	Sealed CO2Leaser	(The cutting speed will slow down according to the material thickness)	
Working scope	1200×900mm	Max output of laser	80W
Cutting depth	≤20mm	Laser energy adjustment	0~100% Manual automatic (software setting)
Cutting line width	≤0.5mm	Cooling way	Circulating water cooling
Cooling water temperature	5℃~30℃	Power	110V/60Hz/2KW

2.3 System structure

The 1290 series laser cutting machine from the operator panel, cabinet, laser, working platform, constant temperature water-cooled machines, negative pressure vacuum fans and other systems

2.3.1 Appearance

Front machine




Back of machine



Side of machine




2.3.2 Main-operation-contro-panel

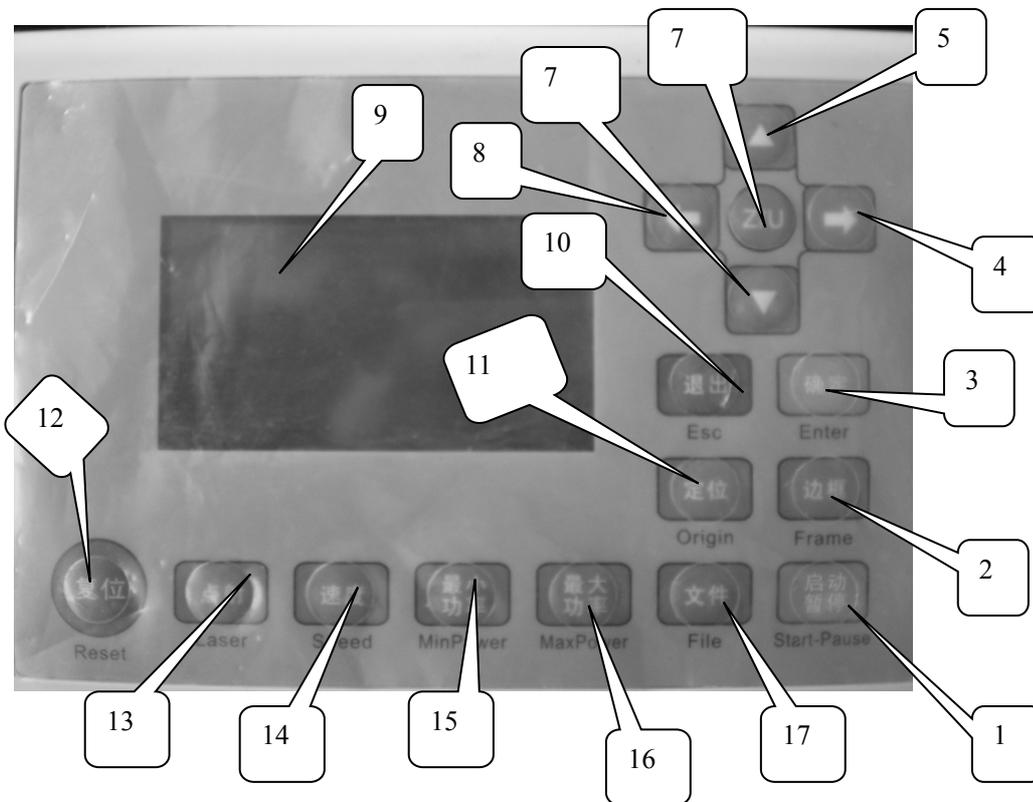


- 1 Start/Pause 2 Frame 3 Enter 4 Turn Right 5 Upwards 6 Z/U 7 Downwards
 8 Turn Left 9 Screen 10 Esc 11 Origin 12 Reset 13 Laser 14 Speed 15

2.3.3 CO2 Laser

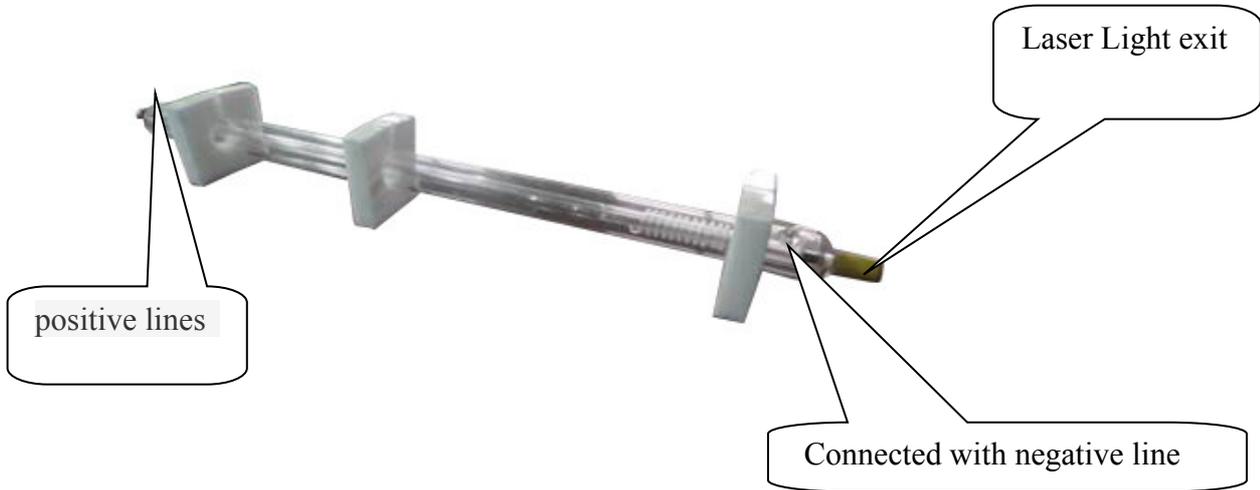


2.3.4 Working platform

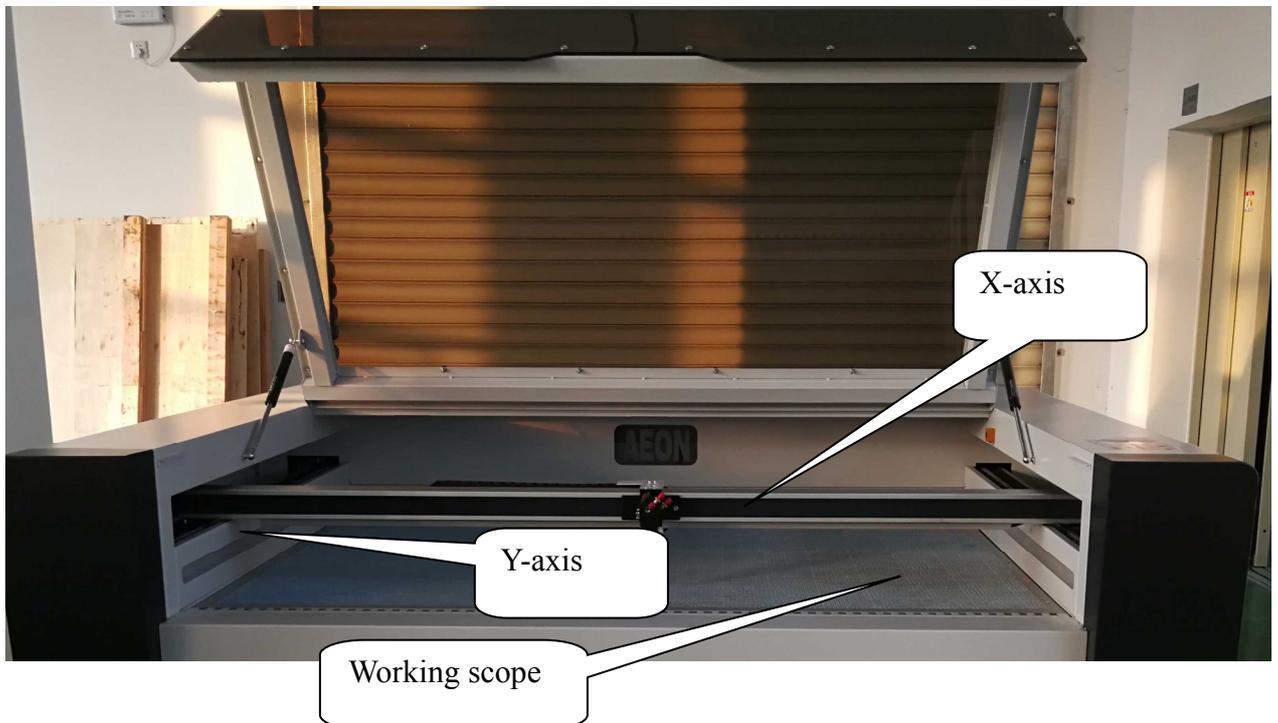

2.3.5 Thermostatic water-cooled machine



2.3.6 Electronic control board

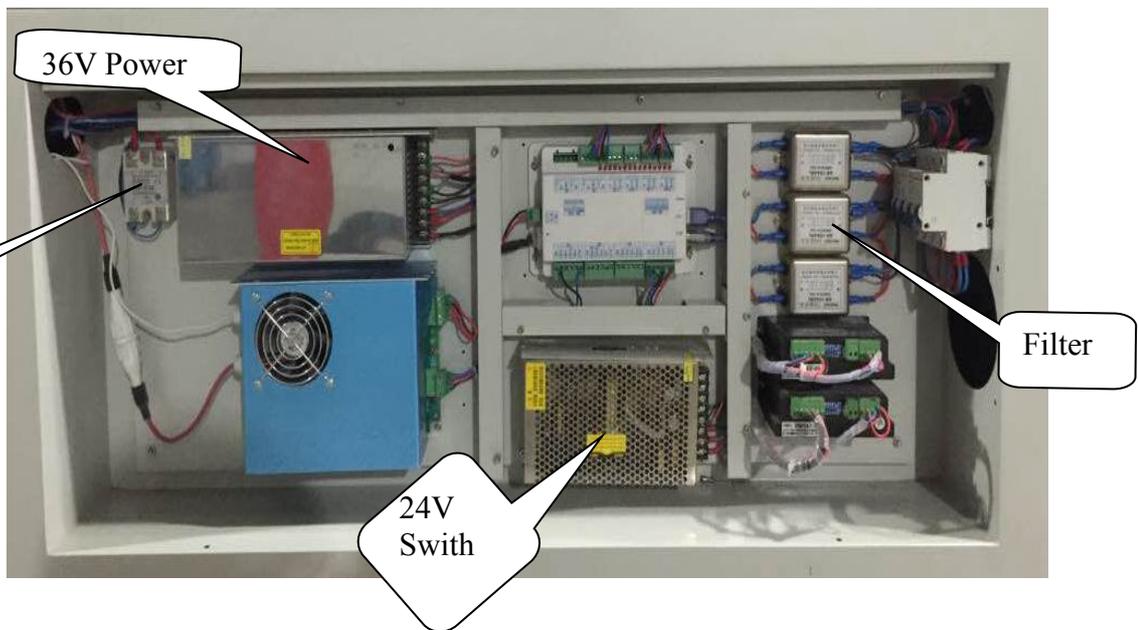

2.3.4 Negative pressure vacuum fan



3 Installation & adjustment and workflow

3.1 Opening inspection

After opening the package, please check carefully : The appearance of equipment is in good condition; inventory of products and accessories are complete according depending to device packing list. If you find a product model does not match, or damaged, and missing accessories, do not use and contact us promptly

3.2 Preparation before installation and adjustment

- Tool: more than 1 ton forklift (Convenient discharge), 12 "or 15" adjustable wrench, multimeter, a vernier caliper.
- Material: Acrylic board, an insulation tape,(1 Volume for spare), 1 roll of scotch tape.
- The staff: 3 to 4 people for installation
- Equipment operators: Can use computer operation.

3.3 Venues and supporting facilities

- The ground flat, not easy dust ,away from the vibration source and strong electromagnetic interference. The best to have relatively independent of closed rooms, clean, little dust with air conditioning. Keep the ambient temperature of 15 °C ~ 30 °C, relative humidity <85% (no condensation). Door size is less than 0.8m (if not , equipment can not enter);Best is equipped with ventilation equipment Indoor ;Cutting material may be because of the material vaporized poor health of toxic gases and odor
- Power supply: power supply capacity $\geq 2\text{kW}$, depending on the user to select the laser tube power.
- Single-phase three-wire (110V/10A), should be directly connected to the protection of the earth terminal to install leakage protection switch.
- The corresponding specifications of the air switch installed in the wall over two meters away from the equipment station, height of 1.2 meters. If the local grid voltage instability or low, if necessary, with the power supply of the corresponding specifications
- Water: must use the pure water, if you can afford to use a higher cleanliness of deionized or distilled water. Prepared beforehand to meet the requirements of the water bucket of about 18 liters (for an extra pure water in order to replace)

	The water quality will directly affect the normal use and life of the equipment, Water causes damage to the equipment is not out of warranty
---	---

- Gas Source: The standard device with a ventilation system, centrifugal fan installed in the room or in the outside to isolate the noise, but you have to

prevent the fan dry in the rain. Pre-layout and exhaust dust ventilation pipe (diameter 100 mm) equipment work must ensure that there are staff on-site duty

3.4 Processing workflow

- 1 、 Open total power switch.
- 2 、 Open the laser power and preheating for 5 minutes before the following operation. (View outlet pipe is water or not)
- 3 、 Running the control software, open graphics files for cutting, set the corresponding operating parameters.

- 4 、 Place the working material , use the reset button on the control panel so that the laser head back to the starting position.
- 5 、 The use of focus adjustment rules, adjusting focus tube up and down position according to the processing of the material thickness .
- 6 、 Press the testing button and adjust the laser power knob so that the laser output to the appropriate value. (Note that the laser output at this time!)
- 7 、 According to the demand to put the processed material to the appropriate location, through software or keyboard arrow keys to adjust the location of the processing range.
- 8 、 Open exhaust and blowing switch.
- 9 、 The operating software for laser cutting or engraving process.
- 10 、 The processing is completed, turn off the switch of the exhaust, inflatable, laser power, scanning, total power, etc.

3.5 Processing Notes

- 1 、 Based on the processing of materials and processing way (cutting or engraving) to set the appropriate parameters, including processing speed, the laser output power, sealing the overlapping length (cutting), step space (engraving), and

air-way cutting speed, etc., (see software manual)in order to achieve optimum processing results.

2、 This machine 's working output 10.6 μ M laser wavelength , Man naked eye can not see it. Therefore, the machine works, should ensure that no objects block the entire optical path, should be careful to not allow any part of the body or highly reflective materials into the optical, to avoid unnecessary loss or injury. !

3、 Processing materials must be placed flat so that focusing mirror is always in the range of processing and processing materials to maintain the same distance (focus adjustment regulation height) to ensure optimum processing results.

4、 Shall not be placed object to impede the laser heads running in the machining area in order to the stepper motor is not blocked out of step processing defects.

5、 The whole process must ensure that the circulating cooling water should be at regular intervals (per hour) observation of the cooling water temperature, and replace clean water timely.

6、 In processing , be sure to maintain exhaust smoothly. The smoke generated in the processing will damage the surface of optical lenses and motion institutions and affect life of machine

7、 Processing should pay attention to the signal line between the equipment and the computer must be securely connected, can not hot plug connector to avoid damage to the motion control card

4. Operating instructions


4.1 Booting process

The boot process in the main operation table

- Open red (motion control) button switch.
- Keep pressing "water button" switch until lights.
- ※ Pressing about five seconds till the cooling water tank to start, about 10 seconds, "WATER / cooling" light, then release the button.
- ※ Check the cooling tank to start water circulation: whether the water pipe is benting; panel display of cooling water tank is normal; whether the alarm display and beep sound.
- Turn on your computer, double-click the "Core of cutting control software" icon to enter the laser engraving software.
- Press the green button switches (laser power).
- Start the vacuum fan.

4.2 Use the operating

4.2.1 Operation panle

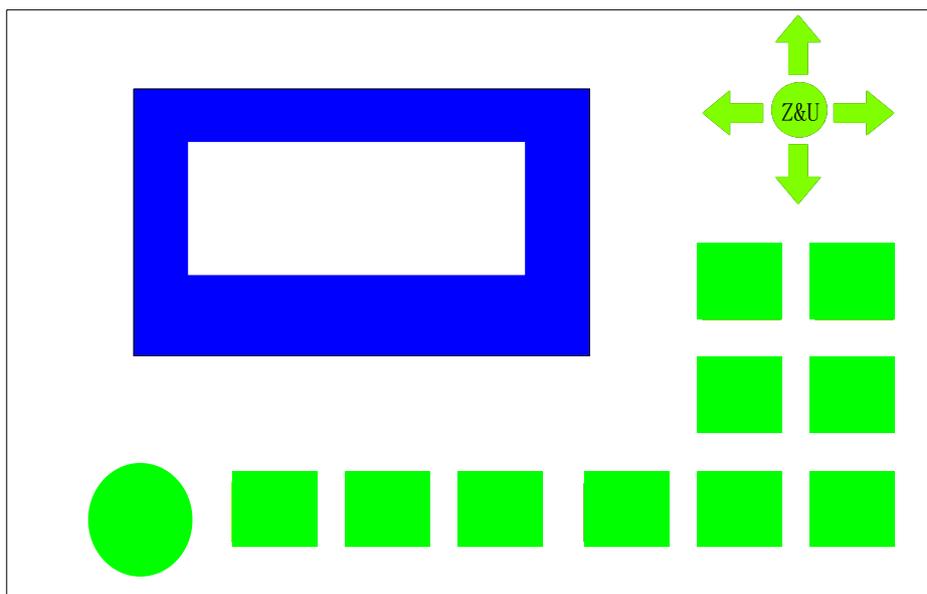

1、Keyland touch screen

The LCD screen shown on the document name or system parameters: cutting speed, work intensity, and system state (initialization, wait, pause, etc.).

2、Explanation

Mechanical origin: On the top right of working platform, cutting has to return to this location for each power up or resetting

Cutting origin: The operator sets the starting position for the cutting, it's beginning position. The laser head is first back to the mechanical origin, and then cutting the origin of the motion to the latest definition of the operator when power-up or reset. If in device parameter settings, set the return of mechanical origin after the completion of the equipment operating or perform a reset operation, the laser head will stay in the mechanical origin

3、Each function key description:

 **Reset:** the laser head goes back to the mechanical origin, this key is valid when the system is in a wait or pause and invalid under other state.

 **Laser:** After boot device, you press this key once, the laser tube light emitting again each time. Hold down the "Laser" button, the laser tube lights emitting up to a light in 0.5 seconds. This key is valid only in a wait or pause state of the system in ; other state invalid

 **Speed:** Set the cutting speed, 0% -100% optional. This key is valid in wait or pause, others are invalid. Speed 100% is Limiting speed according to machine parameter

 **Mini power:** set the minimum power, optional 0% -100%. This key is valid in wait or pause, the other states are invalid.

 **Maxi light intensity:** set the maximum light intensity, optional 0% -100%. This key is valid in wait or pause, the other states are invalid.



Files: view and the operator panel to load a file that runs



Start / Pause: During work and pause, switch the system state. When the system is in working condition, press this key, the system enters the suspend state; if the button is pressed again, the system goes back to work. This key is valid in work or suspend state, other states are invalid.



Origin: This key is used to define (change) cutting origin. Before to modify the cutting origin, please move the laser head to the cutting starting position using arrow keys:

- 1, Short press this key to determine the laser head location for cutting the origin;
- 2, if the long click the button for above 3 seconds to determine the cutting origin, and the system self-test, draw a self-test graphics.
- 3, This key is valid in waiting condition, other state invalid.



Frame: border line motion of the laser head



Exit: to cancel the operation. The abolition of the changes made when set the cutting parameters;

It will deselect when it was for choose operating documents, ;

It can make System return to waiting state when system is in pause state.

Other state, "Exit" key is invalid.



Confirm: Confirm operation. It is valid for cutting speed setting and intensity, or select the operating documents; Other state is not valid.

Arrow keys (up, down, left, right, middle button Z & U): used to adjust the position of the laser head, select the operating document, change the cutting speed, minimum / maximum intensity value.



Z&U:Adjust X and Y axis motion.

4.3 Shutdown process


Shutdown process completed in the main operation board

- Press green key(laser Power)
- Close vacuum fan
- Press"water/water cooling"key,close water tank.
- Turn off the computer
- Press Red (laser power) key

5. Maintenance service

5.1 Maintenance and servicing of the optical system

- CO2 laser tube to replenish the gas or replacement of the laser tube, especially when the laser tube was working time over 1000 hours, please feel free to pay attention to the output power of the laser tube; In the same current conditions if the power is smaller you need to replace the laser tube.
- The reflectors for a long time will be processed after the resulting dust pollution, lower reflectivity, effects of laser output, must be kept clean and checked on a regular basis. You can use ethanol or special lens cleaning liquid, with wiping carefully with plectet. Note :avoid the Sharp scratch the surface of the mirror.
- Focus on the lower surface of the mirror focus lens may also be the working volatile contamination. When contaminated, will greatly affect the output of the laser. Processing must pay attention to the smoke and blowing protection, and avoid the contamination of the focusing mirror is careful cleaning if the pollution is serious can take the following steps:
 - 1、 Remove the blowing off , the pressure ring , protective sleeve and carefully removed the focusing mirror.
 - 2、 Use a blower to blow off the dust of the len surface
 - 3、 Tweezers grip carefully the cotton ball dipped in ethanol or special lens cleaner and wipe from inside to the outside wipe gently in one direction (see below), each wipe , you need to replace the cotton ball, until the sewagethings gets rid

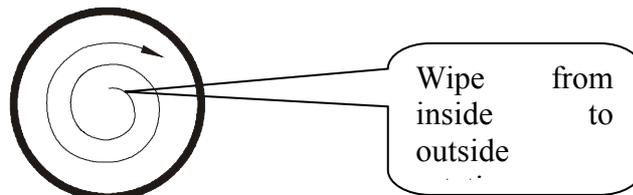

Note: not allow to rub back and forth, but can not be scratched by sharp object, due to the lens surface coated with antireflection coating, coating damage will greatly affect the laser energy output


5.2 Maintenance and servicing of motion organizations

- Pls keep clean of machine
- Linear guides of two-dimensional motion table need to do regular lubrication according to usage.
- Equipment chassis, laser power supply, computer power supply must be grounded well, you should regularly check the grounding screw with or without corrosion or loose, clean and tighten timely
- Moving parts such as small pulley and slide, linear guides, if contamination or corrosion, will directly affect the processing effect, should be regularly cleaned, coated with a lubricant to prevent rust on the rail
- Note that the exhaust fan port and exhaust pipe is not blocked at any time to check and remove the occluder to maintain a smooth flow.
- Cooling water to keep the clean and change them regularly. Processing should be at any time to check whether sufficient water level, water temperature is too high.

5.3 Optical path adjustment and replacement of the laser tube

Optical path adjustment

1390 series engraving machine in use, there may occur the optical path offset, resulting in the phenomenon of no light or light path errors will directly affect the processing efficiency and effects, attention should be paid. In this case, refer to the following method to the optical path is set correctly.

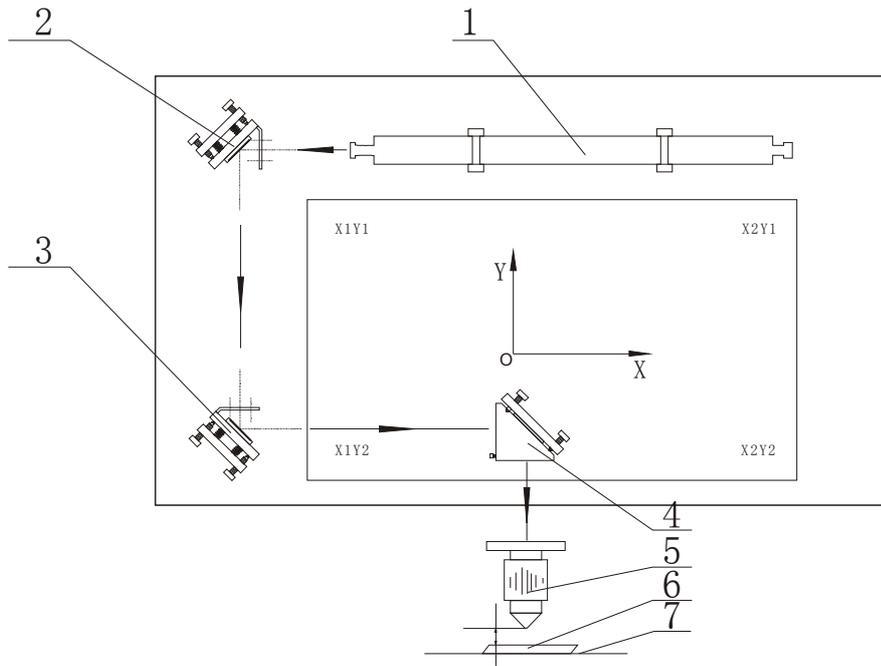


- | | | | |
|-----------------|-------------------|-------------------------------|---|
| 1 laser Tube | 2 First reflector | 3 Second reflector | 4 |
| Third reflector | | | |
| 5 Focus tube | 6 Workpiece | 7 Workpiece carrying platform | |


The optical system of the machine is as shown above, the adjustment of the optical system shall start from transmitter

1、 The following steps to improper operation, may emit laser damage caused by equipment or operator ,should pay particular attention!


2、 Use the testing button on the front panel (click) ,the laser output current is adjusted to the appropriate value (usually the optical power is not too large, such as 4 ~ 8mA) Note that there may be a strong laser emission, placing a transparent organic board in the front of the laser tube output window for dimming to maintain an appropriate distance to avoid laser materials to produce soot pollution output mirror. Completed, remove organic board

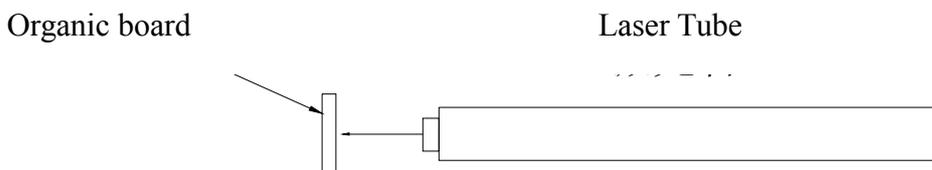


3、 A small organic board caught in the first reflector surface and fine-tune to adjust the frame of laser tube , and used in conjunction with the test button (click), so that the laser emits completely in the first reflector and try to place the first reflector in the middle. Completed, remove organic board.

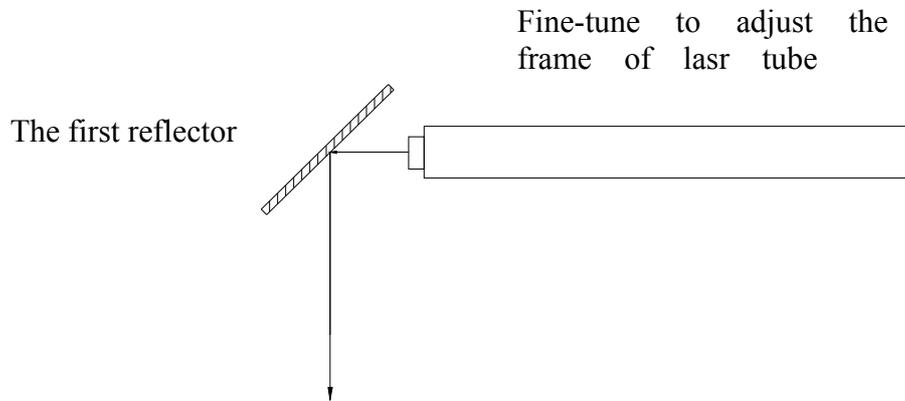

4、 A small organic plate held in the second mirror surface, fine tune the first mirror adjustment knob, and using the test button (click) makes the first launch by reflecting laser can completely on the second mirror, and as far as possible in the the middle of first mirror . Should ensure that both ends of the y axis direction receiving the laser light points coincident before and after . Completed ,remove organic plate.

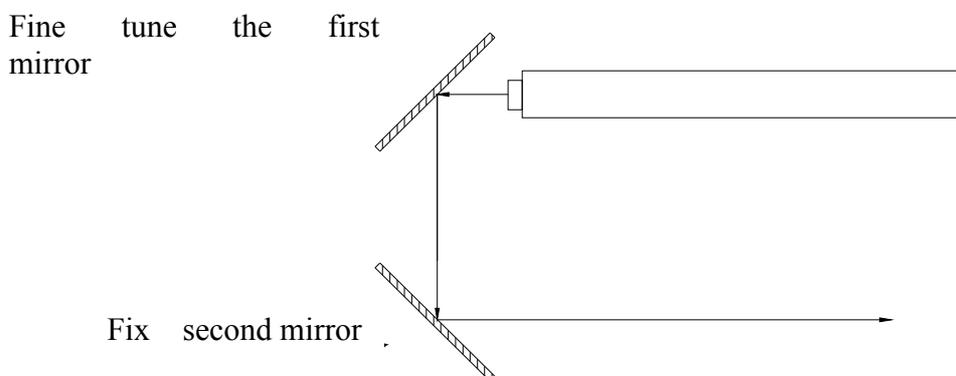


5、 A small Organic board clips onto the third mirror surface, fine-tuning the second mirror adjustment knob, and uses in conjunction with the test button (click), so that the second mirror launches reflecting the laser in the middle of the third mirror and as far as possible . Make sure that the both ends of X axis direction receive laser spot overlap. Completed, remove organic board.

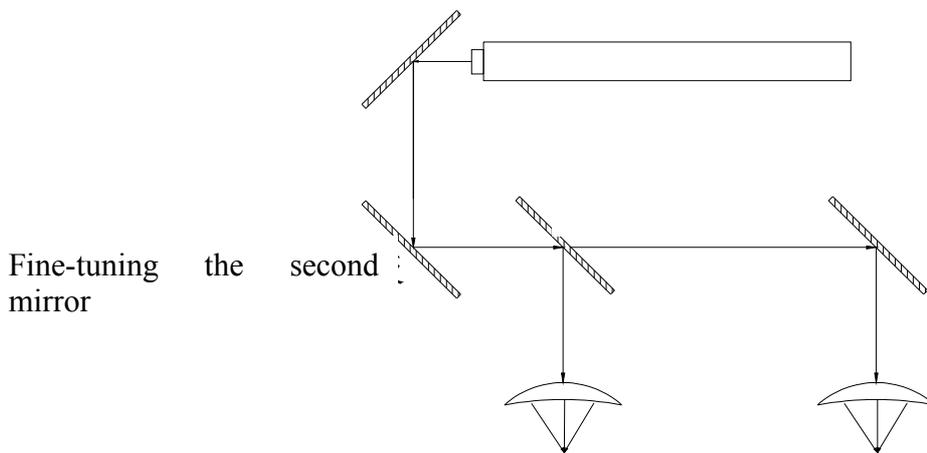

6、 Place a small organic board clips onto the top of the focusing tube, fine-tuning the third mirror adjustment knob, and use in conjunction with the test button (click), so that the third mirror launches reflecting the laser can completely focus in laser tube as much as possible and focus on the middle of the lens (Note, smoke maybe cause pollution to the third reflective lenses ,should avoid the smoke generated by the third reflection of the lens). Completed, remove organic board.

7、 Adjust the focus: to use a special regulation of the focal length . If the regulation size of the tune changes, a small organic board can be put processing platform plainly, click the Test button, fine-tune the focus tube height up and down, so that the laser point is minimum on the gasification of the organic panel , and fix focus lens barrel . The focal length of tone regulation is placed between the tube and the organic board, adjust the height then fix it . It can be used & put focus simply between the mirror and the workpiece .。

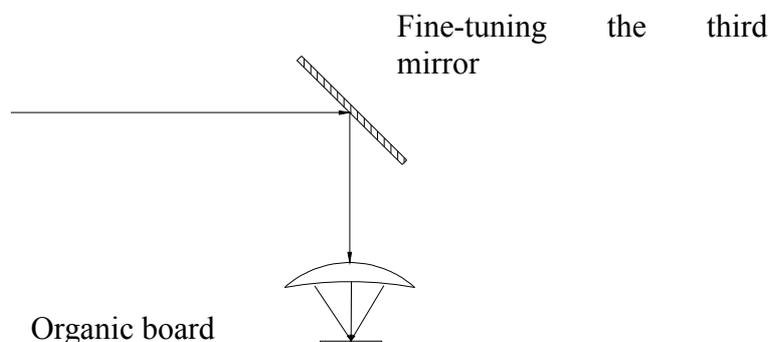

8、 The above adjustments will directly affect the processing effect , pls repeatedly adjust carefully

5.4Thermostatic water-cooled machine maintenance and servicing

- Regularly clean and replace laser chiller water per week.




Water quality will directly affect the normal use and life of the equipment,
Water causes damage to the equipment is not out of warranty

5.5Exhaust Fan and vacuum pipe maintenance and servicing

- Regular cleaning of internal dust of Exhaust Fan and vacuum pipe internal dust per three month

6 . Common problems and solutions

6.1 The main equipment part

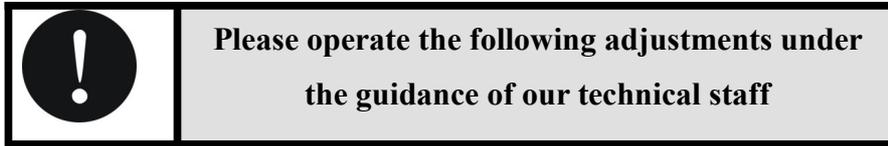

- Fault phenomenon: Turn the key switch, nothing happens

Fault	Solution
Total power switch is closed	Close the power switch
Power is plugged in or not	Cheak it
The power switch is damaged	Pls contact with us

- Fault phenomenon: Weak laser or no laser output; Engraving depth is not enough

Fault	Solution
Laser focus length is change or not	Carefully adjust the correct focal length
Optical path shift	Adjust optical path
Focusing mirror pollution	Clean it
Reflector lens pollution	Clean it
Cooling water circulation in circulation	Clear it
Damage or aging of the laser tube	Replace laser tube
Laser power damage	Replace laser power

- Fault phenomenon: Cutting / engraving depth is unsatisfactory

Fault	Solution
Laser power settings are not normal	Setting normal laser power
Cutting/engraving parameter is not effect	Set suitable parameter
The laser output becomes weaker	Set suitable parameter

- Fault phenomenon:Cutting /engraving size 's error or malfunction

Fault	Solution
Signal line is not working properly	Replace signal line
Machine and the computer grounding is not normal	Good grounding equipment and computers
The computer operating system failure or virus infection	Computer system organize
Application software is not working properly	Reinstall the software and driver software of motion control card
An unstable power supply or interfering signals	Installation of the regulator or eliminate interference signal
Processing program to write incorrect	Check written processing procedures, to modify until their normal

- The run effect is not ideal

Fault	Solution
Rail pollution or rust	Clean rails and add Lubricating oil
Pollution of Slider and pulley	Clean them
Transmission belt is loose	Adjust
Synchronized drive wheel loose or worn out	Cheak ,ajust it

6.2 Thermostatic water-cooled machine part

- Fault phenomenon: The boot without power

Fault	Solution
Power line 's contact is not good	Cheak power plug
Insurance tube fuse	Cheak it and replace

- Fault phenomenon: Flow alarm

Fault	Solution
Water tank water level is too low	Check the water level, adding recycling water,check waterways for leaks
Cooling water pipes bending clogging waterways	Check the water pipe is flat.or note

- Fault phenomenon: Water temperature ultra-high

Fault	Solution
Dustproof net congestion, the poor heat dissipation	Clean regularly
The air inlet poor ventilation	Ensure the open entrances and exits
Low voltage serious or unstable	To improve the circuit or use voltage regulator
The Chiller switching machine frequently	Ensure sufficient cooling time
Excessive thermal loading	Reduce the thermal loading or use bigger cooling capacity models

- Fault phenomenon: Room temperature for ultra-high alarming

Fault	Solution
The cooling water using the high environmental temperature	Improve ventilation, to ensure that the chiller operating environment below 40 degrees

- Fault phenomenon: When changing the water, outfall drainage is slow


Fault	Solution
-------	----------


Water inlet is not open

Open it

7 . Drawings

7.1 Electrical wiring diagram

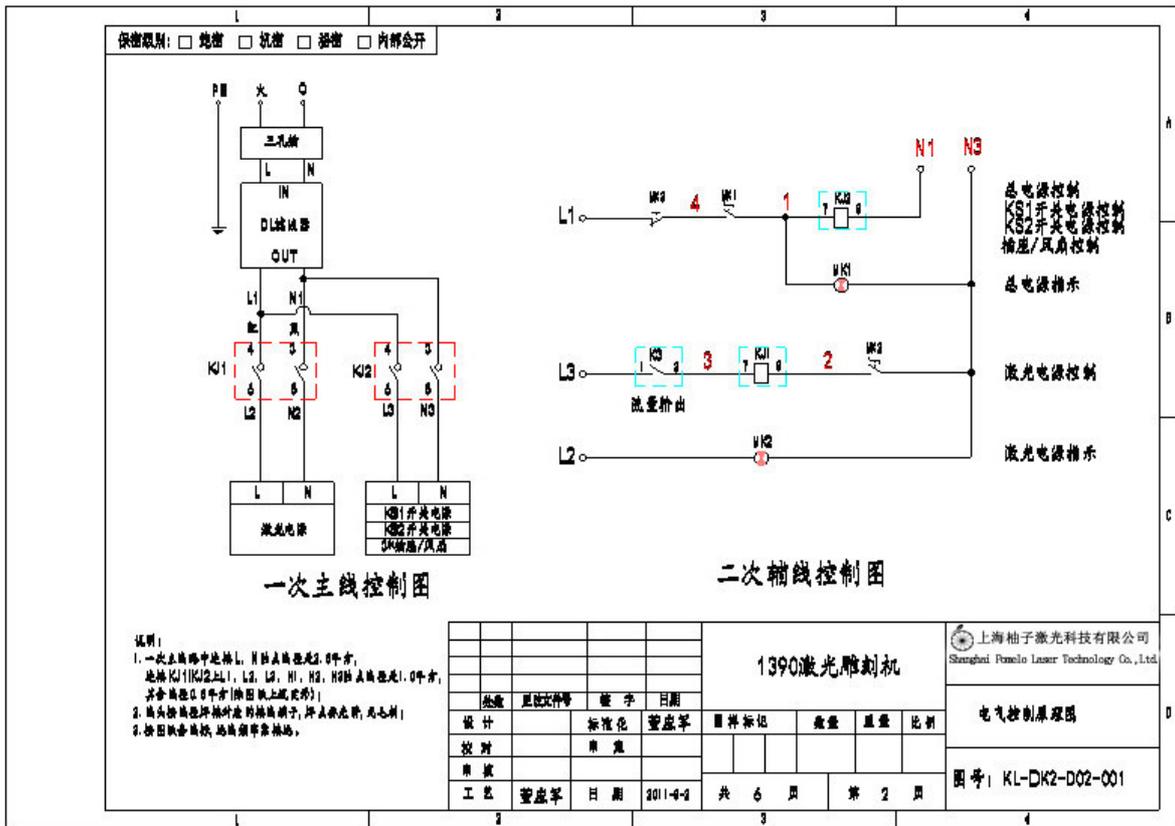

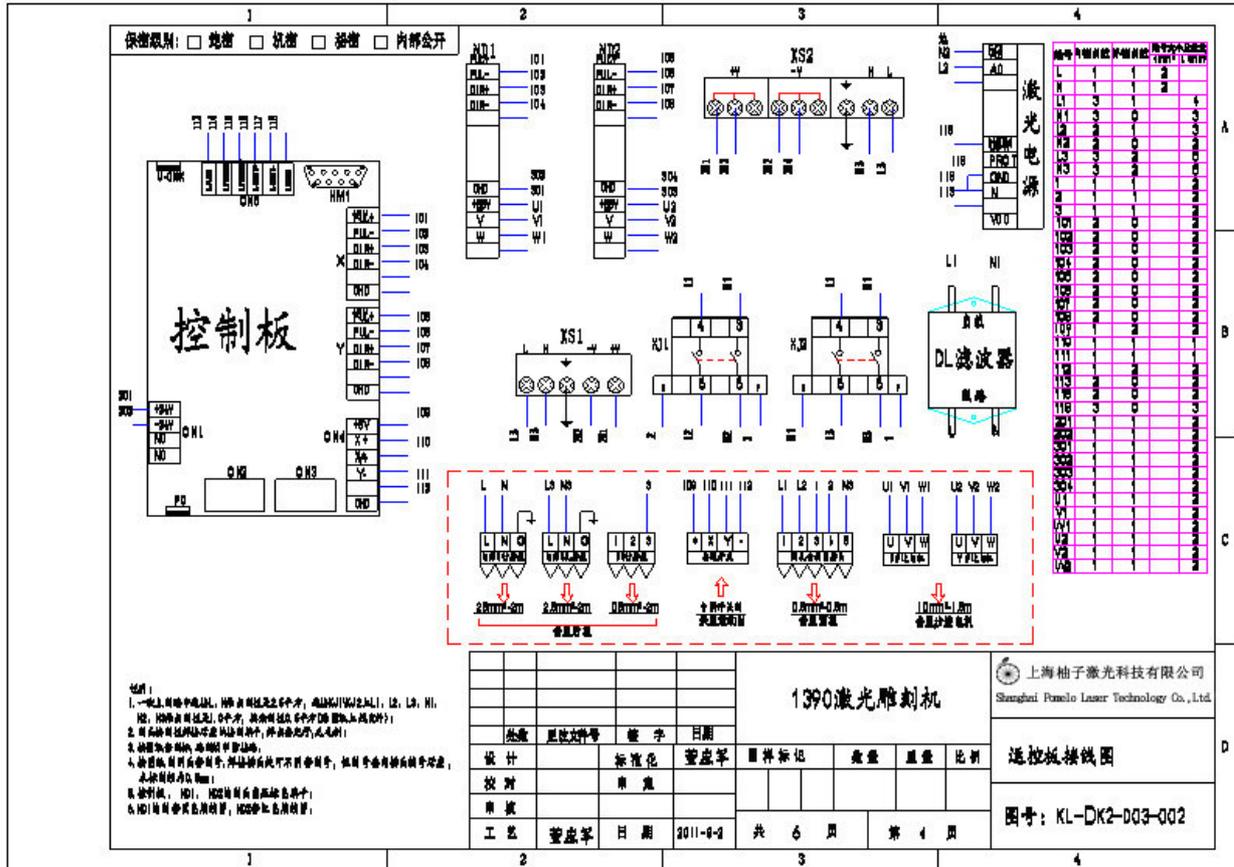

8 . Consumable wearing parts

8.1 Laser tube

When the laser power decay gradually and can not cut normally. After the exclusion of other factors, you need to replace the laser tube.



8.2 Optical Lens

The optical lens is contaminated, the laser will damage the coating layer of lens . Should be replaced at this time. The machine includes three reflective lenses and a focusing lens.

9. Software Operation Manual

9.1 Software Introduction

The software of 1290 series laser engraving machine is for the small-format series laser engraving machine, is designed to develop application software. The software interface is friendly, functional, and easy to use .

9.2 The installation of the software program

Please check attachment

9.3 Software Operation

Please check software manual